



TIP & TAIL CONNECTOR KIT

TIP CONNECTOR INSTALLATION:

1. Slide the G3 Tip Loop approx. 9 cm (3.5 in) onto the skin and fold the adhesive side of the skin onto itself securing the tip loop in place.
2. Install skin by starting at the tip of the ski and adhering the skin to the ski base. Ensure skin fabric is oriented correctly for uphill traction and downhill glide. Skin should end approximately 2.5 cm (1 in) from tail of ski.

TAIL CONNECTOR INSTALLATION:

The tail end of the skins must be trimmed to allow for the attachment of the G3 Tail Connector.

1. Place "Diagram A" on the tail end of the skin. Mark the 3 holes and the rectangular notch. Trim notch using a utility knife or scissors and drill holes (3 mm / 1/8 in drill bit is recommended).
2. Sandwich skin and tail strap between the two metal plates and align holes with those drilled in Step 1. Ensure that the silver buckle and the prong are facing up (i.e. resting on the same surface as the plush and pointing away from the skin tail). Insert rivets through metal plates and skin fabric, taking care to ensure rivet heads sit into recesses of the metal plate (rivets should sit almost flush with the metal plate).
3. Place skin, metal plates, tail strap and rivets on a hard solid surface (we recommend solid concrete or thick metal surface). Using a hammer, hit protruding rivet until it becomes flush with the metal plates. The installed G3 Tail Connector system is now ready for use.

NOTE:

If you are printing this guide to use the template be sure to print at 100% scale so the sizing all matches up to your climbing skins.

