

MHP14AT SNORKEL EWP SET UP INSTRUCTIONS

1. Machine must be un-hooked from towing vehicle-Engage handbrake.
2. Locate and remove travelling locking pin located underneath bottom boom at front of machine.
3. Start machine using ignition switch located on the bottom control panel on left-hand side of machine, lift the choke switch whilst turning the key - let go of both key and choke switch as soon as the motor is running.
4. Locate the 4 stabiliser control levers mounted on the left-hand side of machine, use these levers to lower the stabilisers to the ground ***Ensure the front stabilisers are lowered to the ground first.***
5. Operate the four levers to level the machine with the wheels completely off the ground; a levelling bubble is located on the chassis rail.
6. Once the machine is level check that the ***Lift Enable*** light is illuminated on the bottom control panel, **NOTE IMPORTANT-** if this light is not illuminated continue to manipulate the levers until the light is on and the machine is level. The machine will not work if this light is not illuminated.
7. Ensure that the Ignition switch is on and the emergency stop switch(Large Red one) is pulled out
8. Locate the Boom-Stabiliser switch and switch to boom (RHS switch).
9. Locate the Platform-Base switch and switch to platform (LHS Switch).
10. The switches must be switched in the above sequence.
11. The machine is ready to be used from the platform control panel.
12. Before entering the platform put the safety harness on ensuring it is fitted correctly.
13. Once on platform attach safety harness lanyard to the lanyard anchor point at rear of platform floor.
14. Platform controls will not work unless the platform foot switch is engaged (putting foot on it.)

For detailed instructions an operator's manual is located in the black document pouch inside the basket

MHP14AT SNORKEL EWP PACK UP INSTRUCTIONS

Return all booms to down position.

Locate travelling pin in hole and secure with locking pin.

Raise Rear stabilisers fully.

Raise front stabilisers fully-ensuring the jockey wheel is in the vertical-down position.

Reattach to towing vehicle and disengage hand brake.

For detailed instructions, an operator's manual is located in the black document pouch inside the basket.