

74.00 mm

105.00 mm

Troubleshooting

Problems	Possible causes	Solutions
Unit Powers off automatically	Low battery	Recharge the speaker
Unable to charge	Used incorrect charging cable	Used the supplied charging cable to charge
Speaker has no sound	Volume at min. level	Make sure to press play on the TF/Bluetooth/USB/LINE device & adjust to the appropriate volume
Bluetooth will not automatically connect	Another Bluetooth device may be already connected	1. Turn off other Bluetooth devices 2. Only paired devices will automatically connect 3. Your device did not turn on 'Bluetooth' function within 10 minutes after the speaker was powered on
No sound from Bluetooth	1. Bluetooth disconnected 2. Audio device volume is at minJewel	1. Please check if connected to the Bluetooth successfully 2. Make sure to turn on/up your audio input device's volume

Precautions

1. Please use the DC 5V charger to charge, and do not play music while charging.

2. When the microphone is turned on, do not point the microphone to the karaoke unit to avoid howling feedback sound from the speaker.

UK DISTRIBUTOR

John Hornby Skewes & Co. Ltd.

Salem House, Parkinson Approach, Garforth, Leeds LS25 2HR, United Kingdom.

www.jhs.co.uk

Authorized EU Representative: Phos-Metal B.V. (Spartaan 19, 5467 JP Hapert, Netherlands)

UK CA CE RoHS

EKS700

DIGITAL KARAOKE BLUETOOTH

SPEAKER

WITH DUAL WIRELESS MICROPHONES

Accessories

Karaoke speaker x 1

Wireless Microphone x 2

Type-C Cable x1

Manual x1

148.00 mm

Control Buttons & Back views

Power On/Off (Long Press)  
Play/Pause (Short Press)

Prev (Short Press)  
Vol - (Long Press)

Next (Short Press)  
Vol + (Long Press)

Mode

Red LED

Blue LED

Green LED

Orange LED

VOCAL CUT

RGB LED

ECHO-

ECHO+

Line In

USB In

DC 5V

TF Card

Control and Functions

1. Short press Play or Pause; Long press Power On/Off

2. Short press for switching mode (Bluetooth, USB, TF, LINE IN)

3. Short press for the previous song; Long press reduce volume

4. Short press for the next song; Long press increase volume

5. VOCAL CUT  
Short press to turn on or off VOCAL OUT

6. LED  
Short press to switch light mode

7. ECHO-  
Long press to reduce reverberation

8. ECHO+  
Long press to increase reverberation

Instructions

● When you turn on the power, the default mode of the karaoke speaker is Bluetooth mode; you can search for the device name 'EKS700' in the Bluetooth connection of the mobile phone, and the LED will indicate blue

● When the USB is plugged in, the karaoke speaker turns into USB mode, and the LED turns Orange.

● When the TF card is inserted, the karaoke speaker turns into TF mode, and the LED turns orange and green.

● When the 3.5 mm audio cable is inserted, the karaoke speaker will switch to LINE IN mode, and the LED will display green.

● When the USB and TF card are inserted, press the button to switch the mode

● When charging, you can use the DC 5V charger to charge the karaoke speaker, the charging light is red, and the red light turns off when the battery is fully charged.

Instruction of microphone

Power On/Off (Long Press)  
Vol+  
Vol-  
EFF  
LED

DC 5V

1. Long press the switch of the microphone to turn on the microphone, the microphone will automatically connect to the speaker, and the LED light will display blue; when the speaker is not connected, the LED light will flash blue.

2. When singing, short press the "VOL+/VOL-" button to control the volume of the microphone

3. When singing, short press the " " button to turn on and select the appropriate sound effect.

4. When charging, you can use the DC 5V charger to charge the microphone, the charging light is red, and the red light turns off when the battery is fully charged

Instruction of singing

When the karaoke speaker is turned on and the wireless microphone is connected to the karaoke speaker, you can sing in any mode, and you can also adjust the microphone volume, reverb, and EQ according to your personal voice to achieve better results.

Specification

Power Supply	DC 5V
Built-in Battery Rechargeable Battery (for Karaoke)	3.7V/2000mA
Built-in Battery Rechargeable Battery (for Microphone)	3.7V/500mA
RMS Power	8W
Output Power	15W
Driver Size	4"Full range speakerx1
Frequency Response	70Hz - 20KHz
Bluetooth® Version	5.0
Dimension (L x W x H)	L21x W14 x H17 cm (Speaker) L3.75 x W3.75 x H13.5cm (Microphone )
Material	ABS + Metal Grill