


- INSTRUCTION MANUAL -

CHISEL TABLE


MODEL 20 & 25

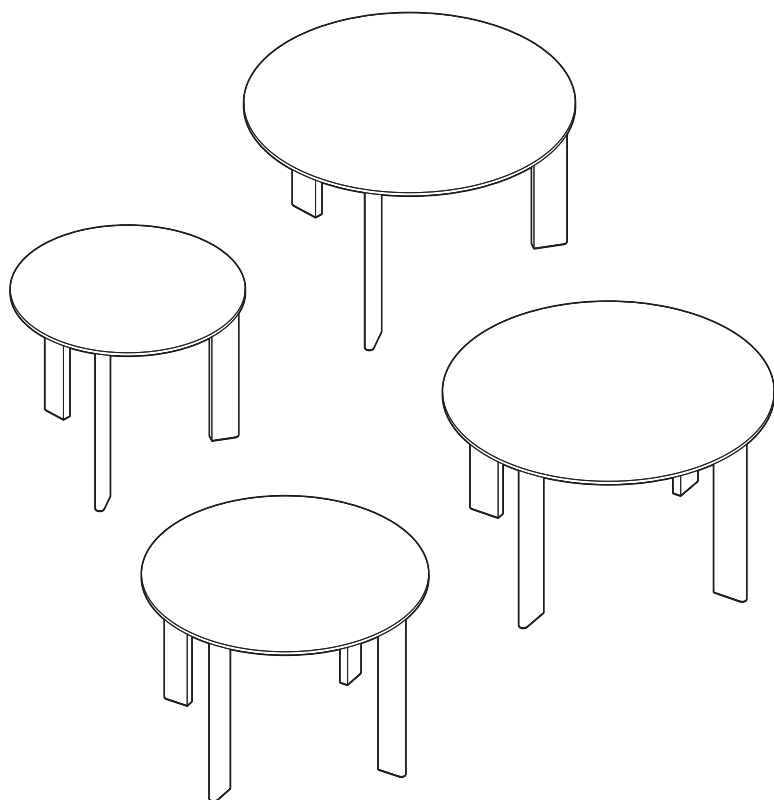

DESIGN BY ANDREAS BERGSAKER

HAY

- PARTS -

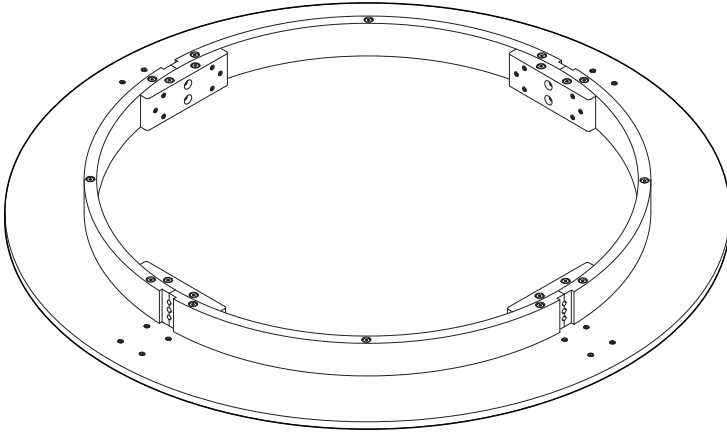

A Tabletop x1



B Leg x3/ x4

 
MOUNTING BAG



C Wood dowel
x3/ x4



D Screw x12/ x16



E Allen key x1



 
F Screw x6/ x8
M8x80



G Spring Washer
x6/ x8



H Washer x6/ x8





I Allen key x1



Two people are needed to assemble the table.


1.

Place the tabletop **A** on the floor, on the cardboard, or other protective material to prevent scratches.

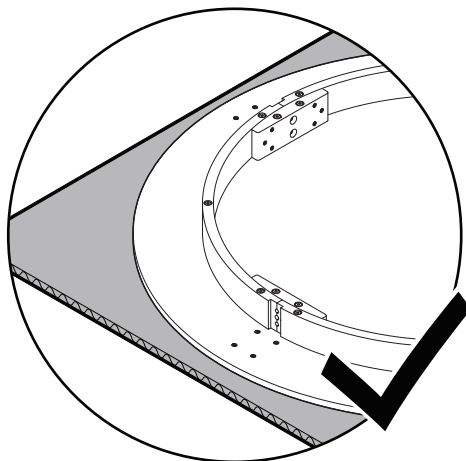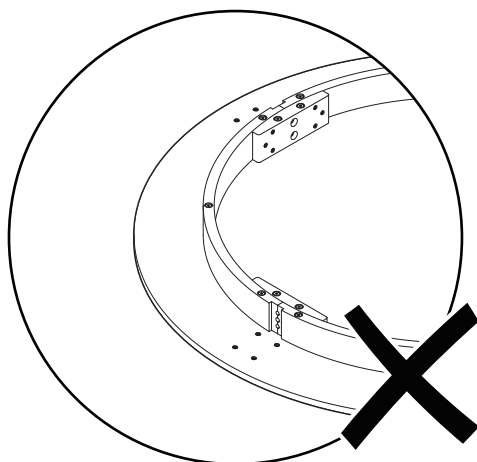


2.

Place the wooden dowel **C** in the middle hole in the apron and insert the leg **B**.

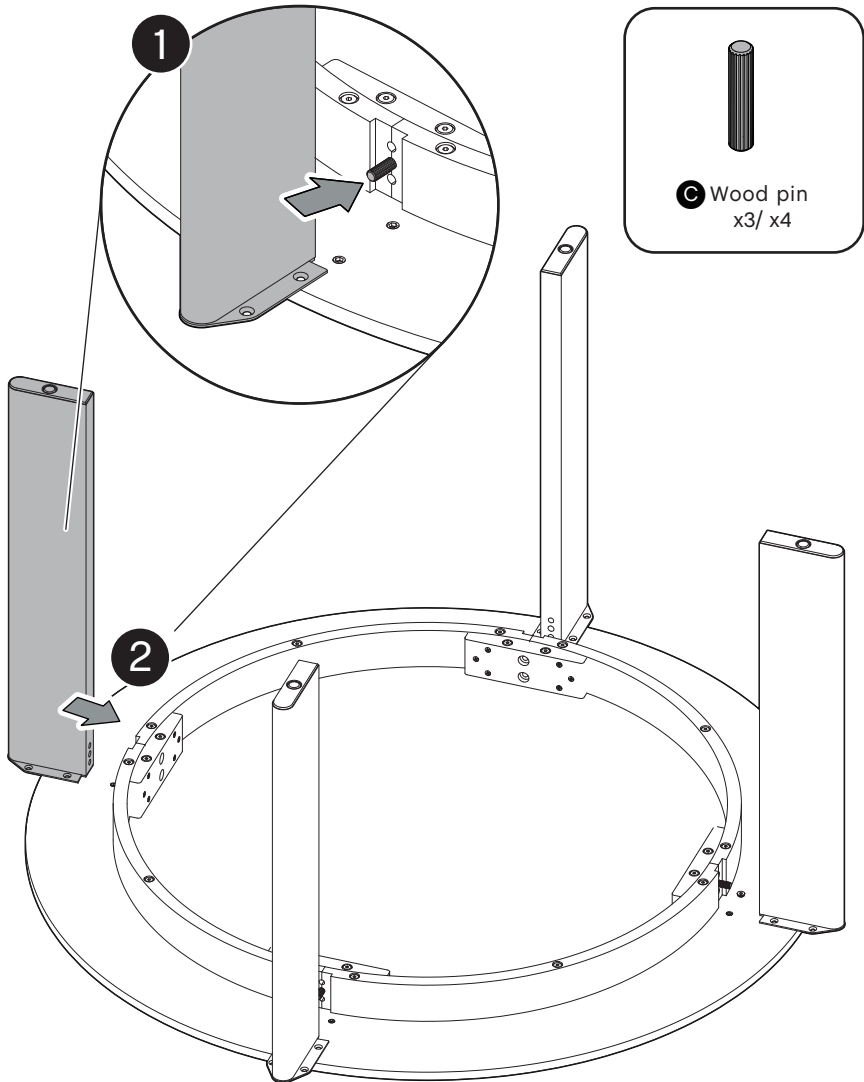


3.

Attach the legs to the tabletop using screws **D**, tightening them loosely.

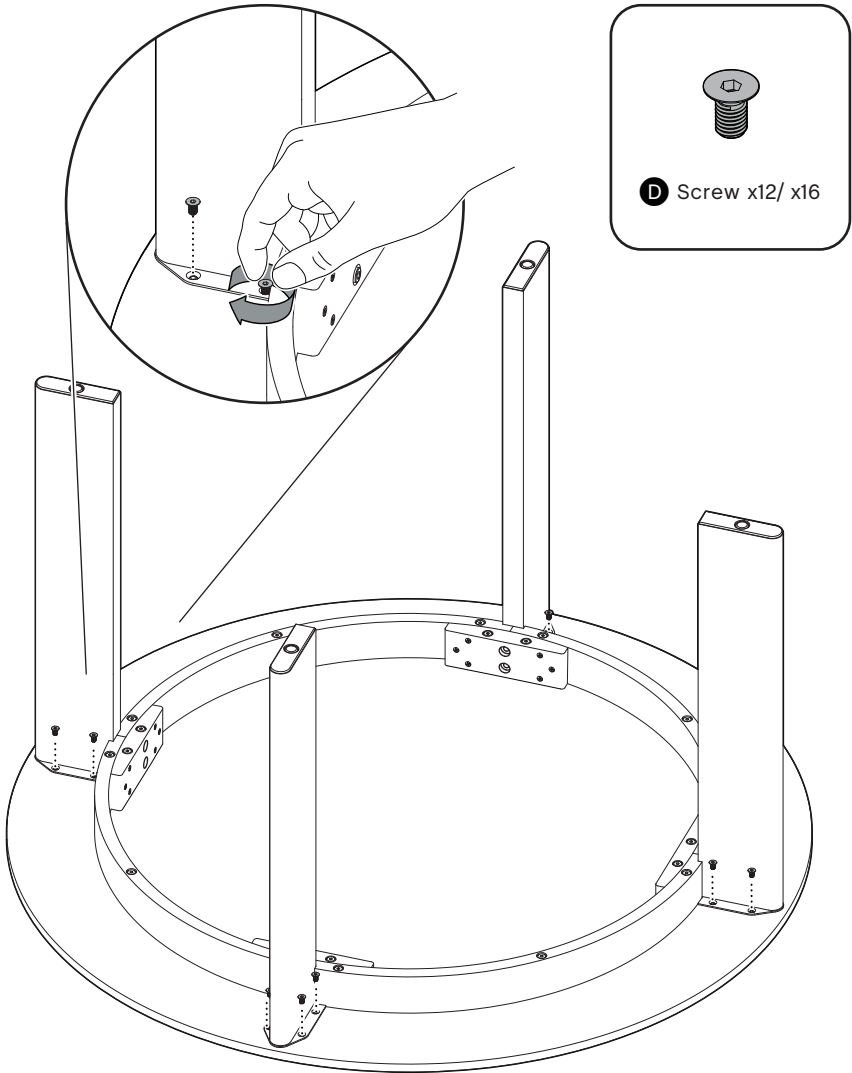


4.

Attach the legs **B** loosely to the apron using two screws **F**, each fitted with a spring washer **G** and a regular washer **H** on each screw.

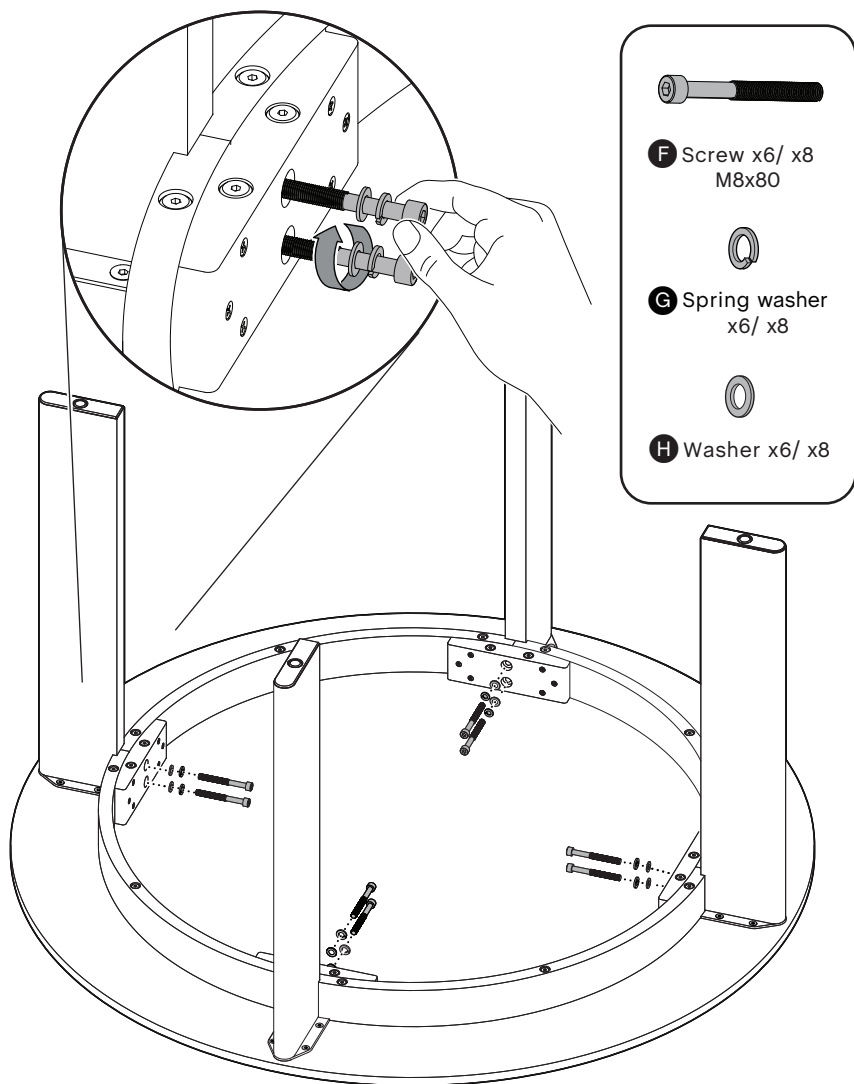

5.

After the screws **D** and **F** with the washers have been mounted, fully tighten them all.

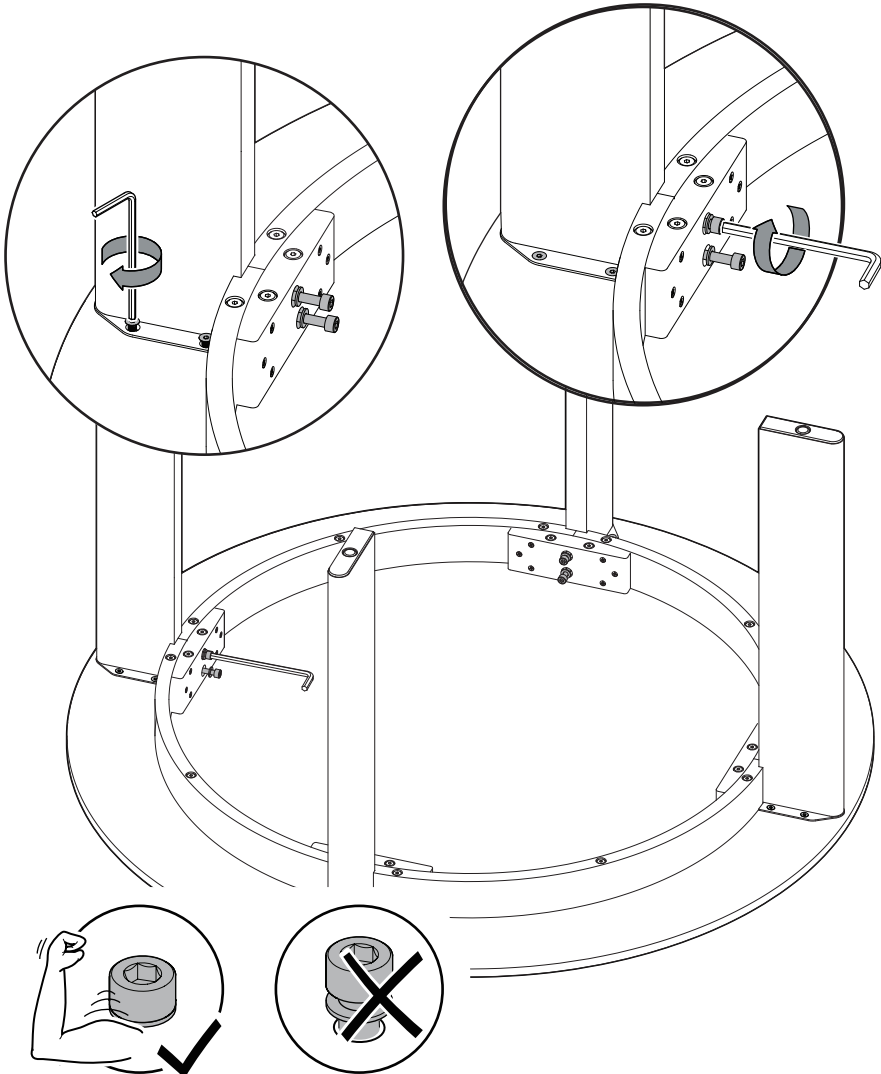


Fully tighten
the screws.




6.

Turn the table over. Make sure to lift the table properly
to avoid damaging the legs or tabletop edges.
Done!

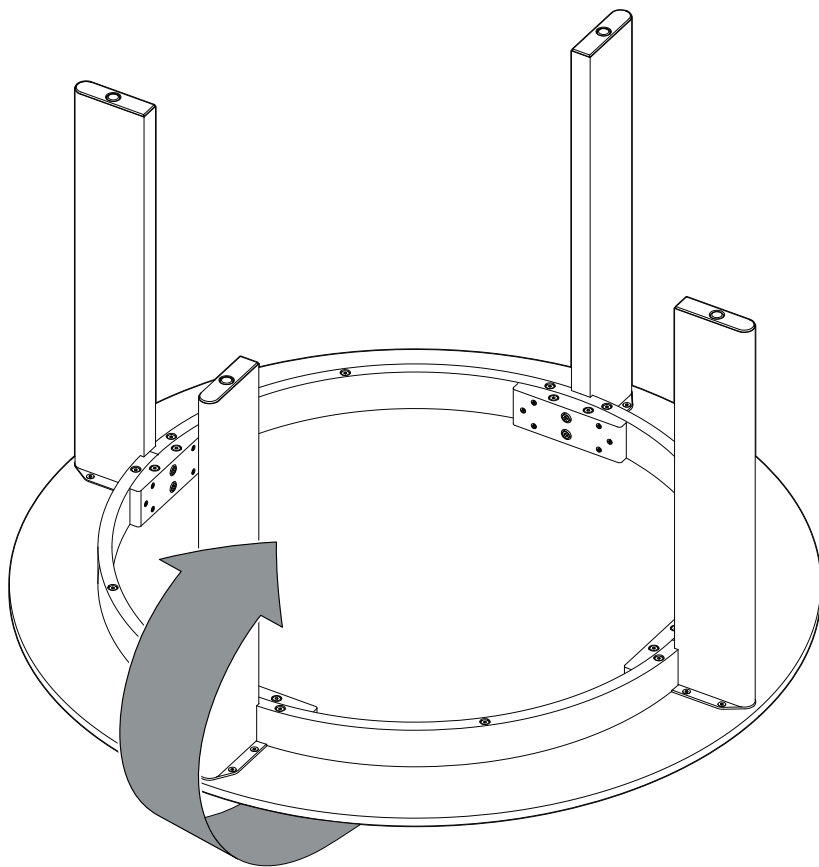

7.

If the floor is uneven, use the adjustable feet to level the table.

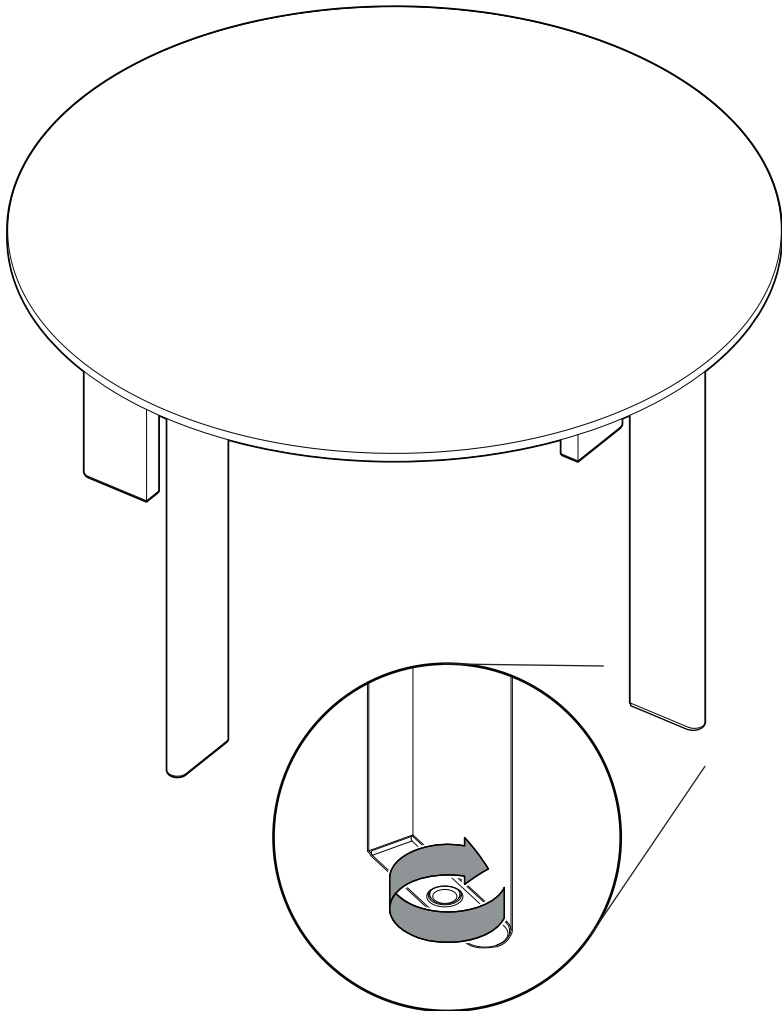

– CARE & MAINTENANCE –

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.



Please find our Care & Maintenance guide by scanning the QR code



You can find more relevant information on Chisel Collection by scanning the QR code

You can also find the same information here
hay.dk/downloads

Havnen 3 8700 Horsens Denmark
+45 3164 6000 / hay@hay.com

18/03/2026

HAY

