 


- INSTRUCTION MANUAL -

CHISEL TABLE


MODEL 30

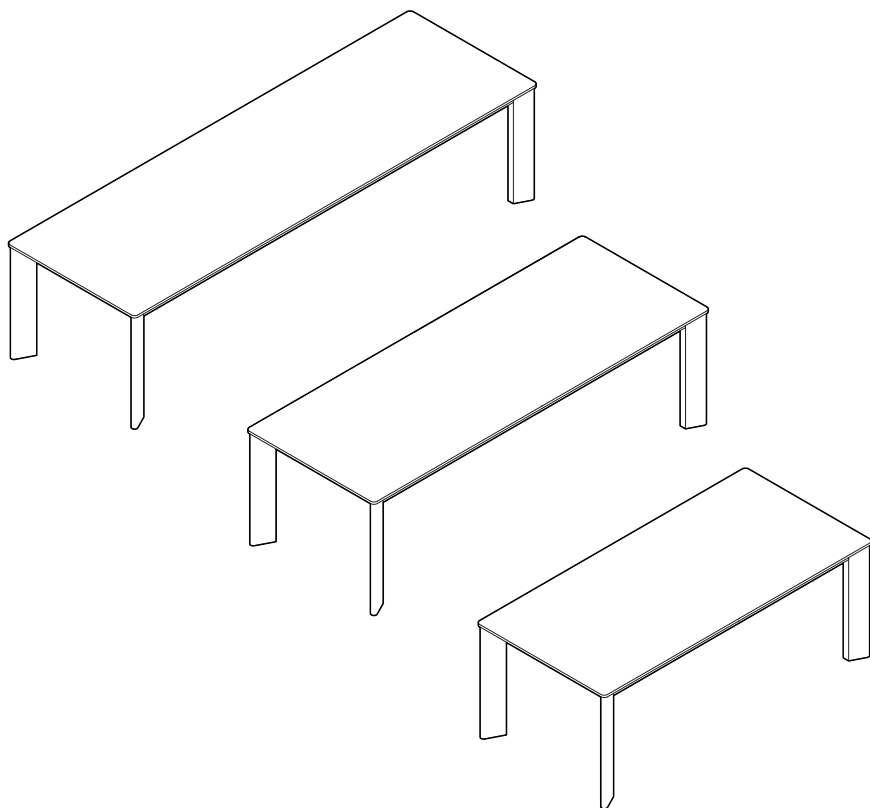


DESIGN BY ANDREAS BERGSAKER

HAY


- PARTS -

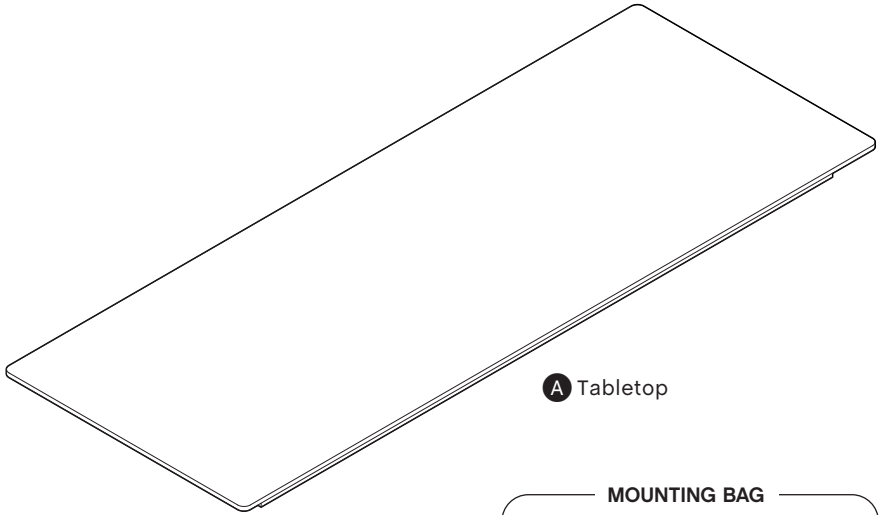

A Tabletop

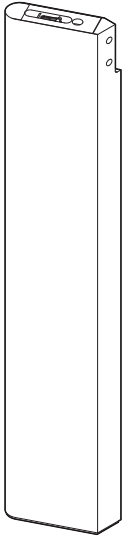


B Right Legs
x2

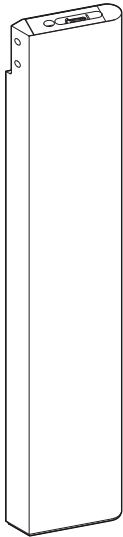

B Left Legs
x2

 MOUNTING BAG




C Screw x8
M8x120




D Spring washer x8



E Washer x8

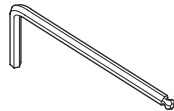

F Allen key x1

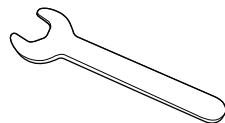



G Allen key x1



Two people are needed to assemble the table.


1.

Place the tabletop **A** on the floor, on the cardboard, or other protective material to prevent scratches.

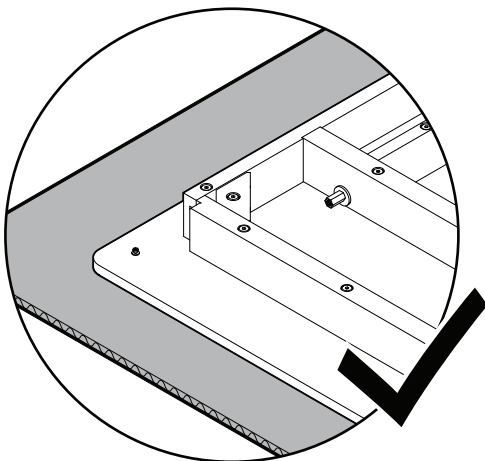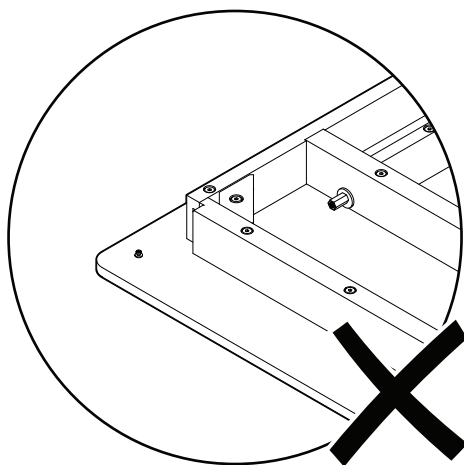


2.

Attach the leg **B** to the tabletop **A** by fitting the bracket onto the screw and sliding it towards the apron until fully locked in place.

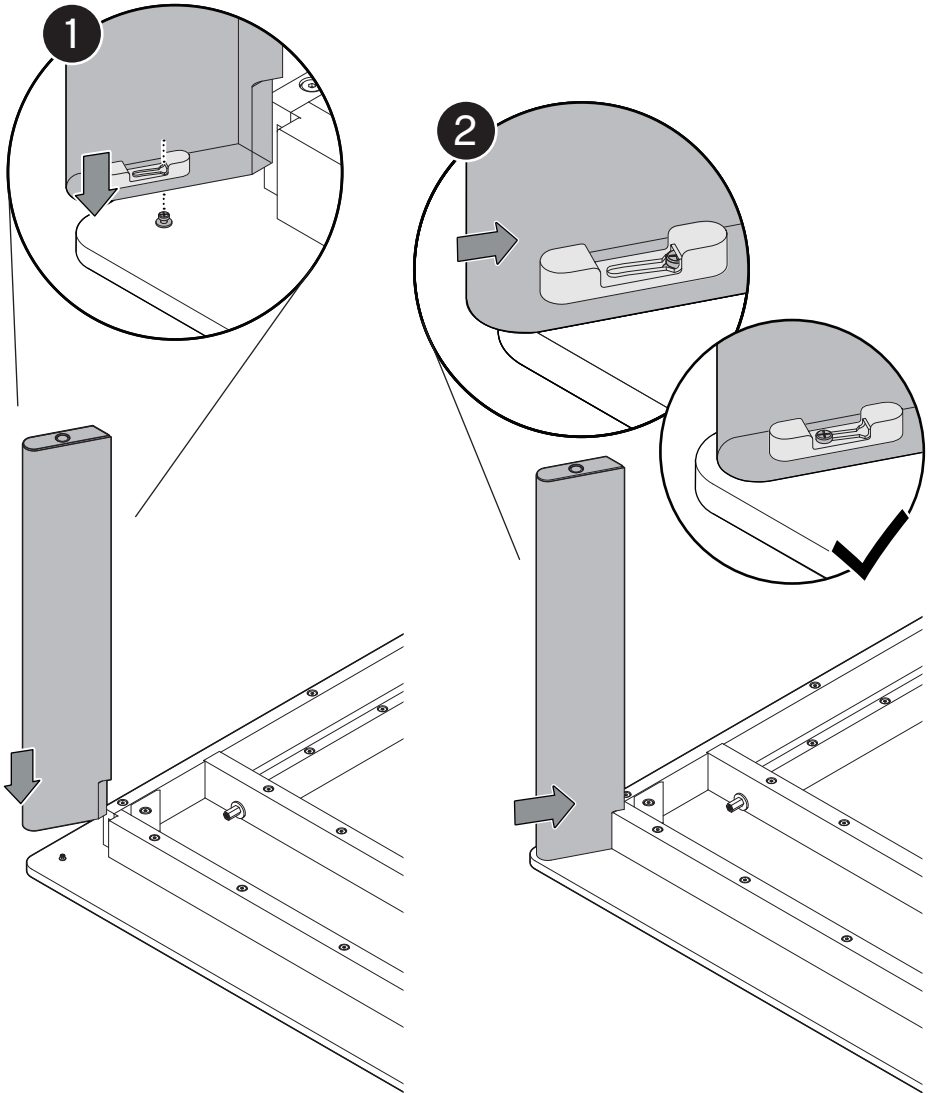

3.


Attach the legs **B** loosely to the apron using two screws **C** with a spring washer **D** and a washer **E** on each screw. Fully tighten the screws once both have been mounted, starting with the screw closest to the tabletop.

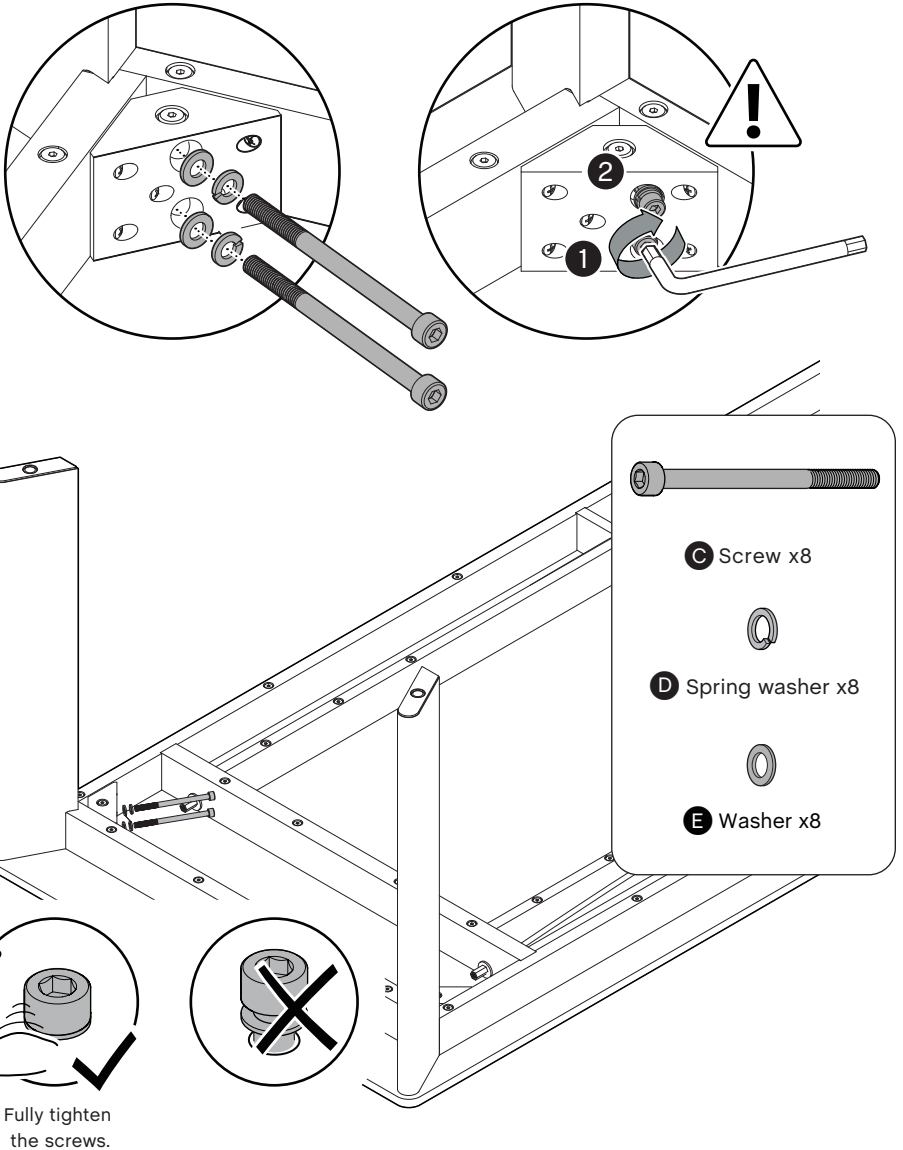




4.

Turn the table over. Make sure to lift the table properly
to avoid damaging the legs or tabletop edges.
Done!

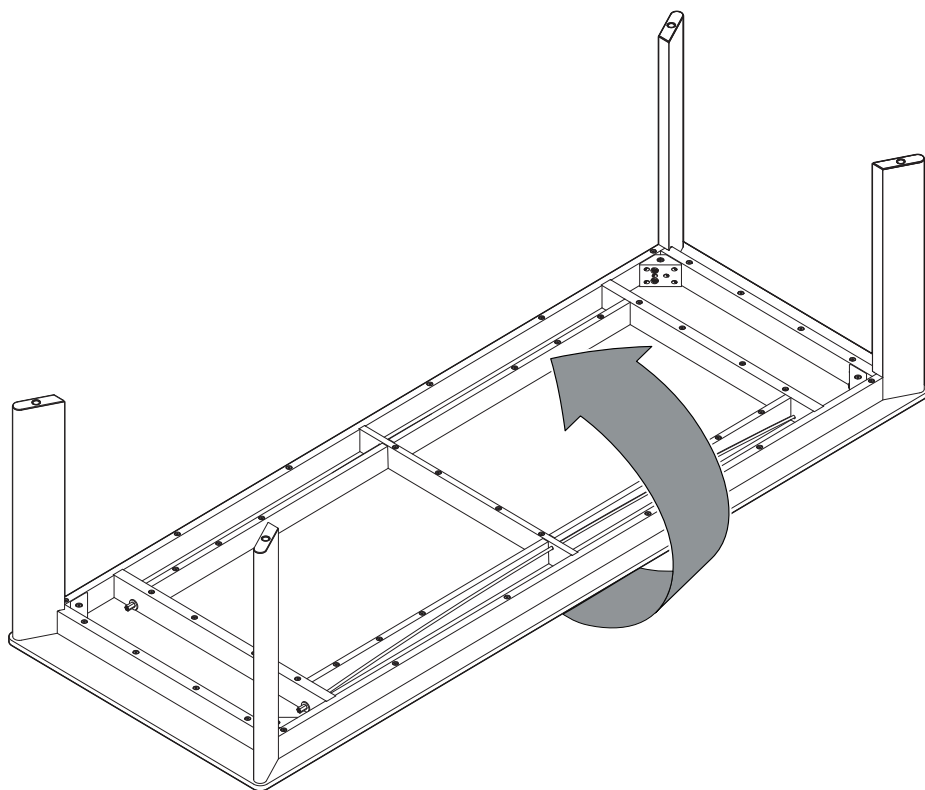



5.

If the floor is uneven, use the adjustable glides to level the table.

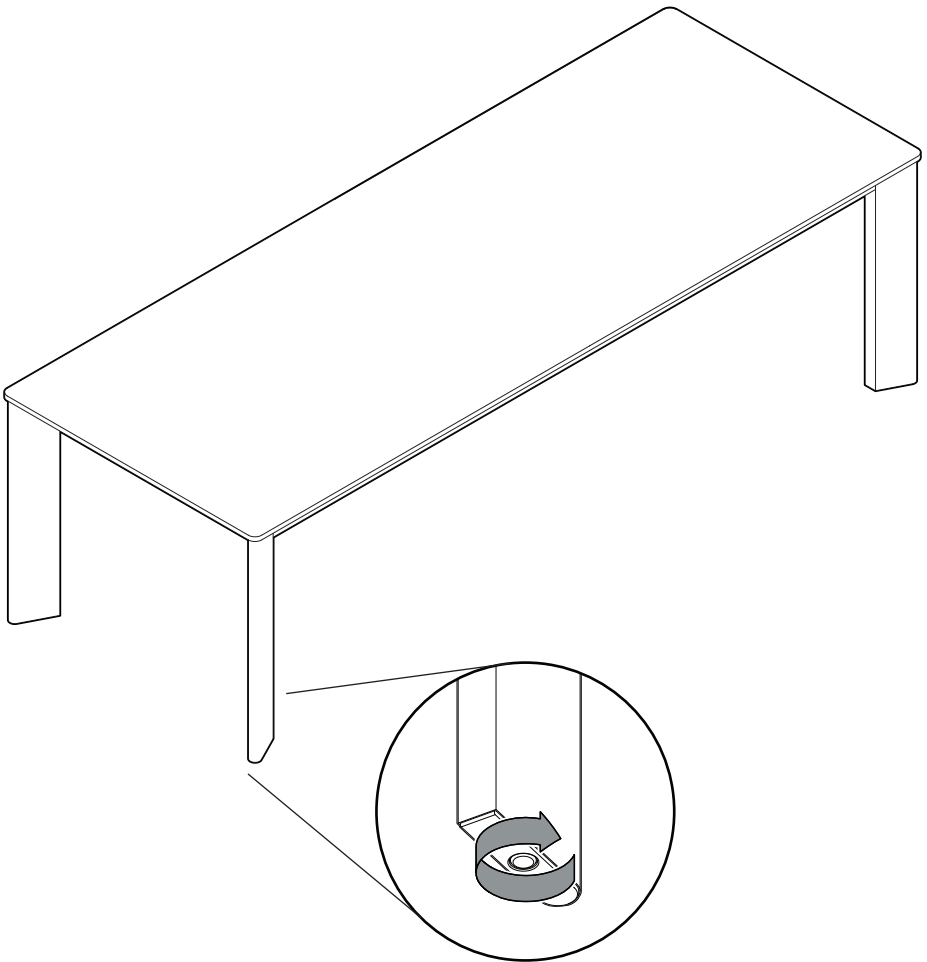

ONLY APPLIES TO L250 & L300

To level the tabletop: Tighten the nuts on the rods to raise the tabletop, or loosen them to lower it. Adjust both sides evenly.

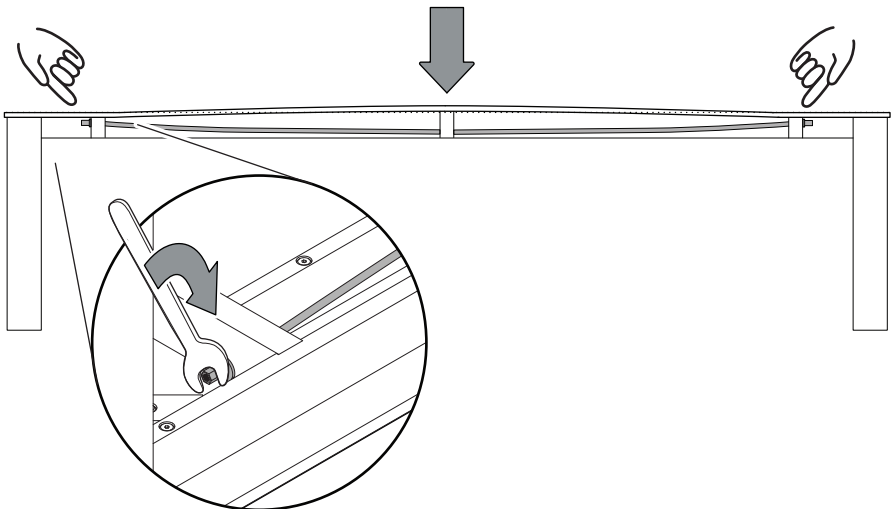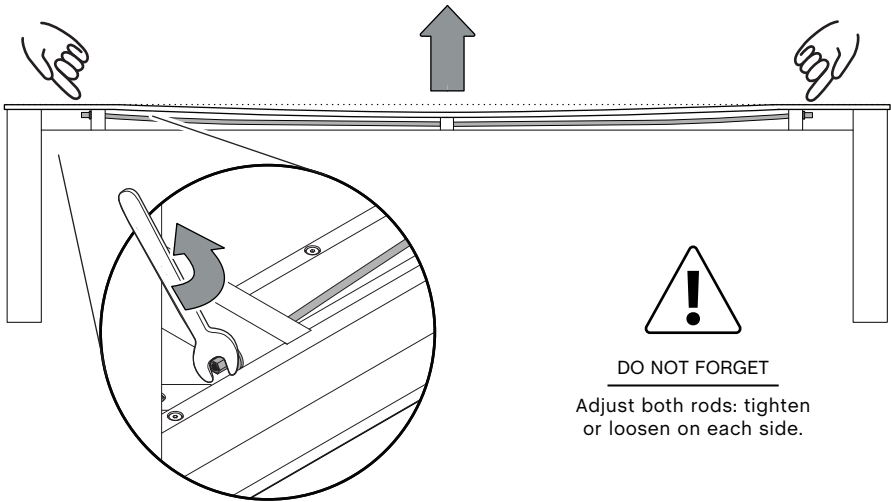

– CARE & MAINTENANCE –

Our Care & Maintenance offers guidance for optimal maintenance of your HAY product. It includes advice and instructions on cleaning and caring for specific materials to prolong the life of your furniture.



Please find our Care & Maintenance guide by scanning the QR code



You can find more relevant information on Chisel Collection by scanning the QR code

You can also find the same information here
hay.dk/downloads

Havnen 3 8700 Horsens Denmark
+45 3164 6000 / hay@hay.com

10/07/2026

HAY

