

V100S 固件说明

- 一、请使用神牛固件升级软件 G3 V1.1 打开该固件进行升级。 G3 V1.1 可在官网下载。
- 二、版本号查看方法：开机后，进入菜单界面，在最后面找到设备信息，可以看到软件版本号（如 1.00 版本：V1.00）。
- 三、版本说明：

版本	更新内容	日期
V1.02	改善新协议不稳定问题，增加相机菜单控制	25/1/10
V1.03	1. 修复 A7CR 相机在打开新协议后无法高速同步的问题。 2. 增加 TCM 开关和功率 0.3 档步进调节，可以在菜单中设置。	25/3/11
V1.04	取消触屏长按解除锁定功能	25/7/14

注：详细规格请在官网（www.godox.com.cn）下载最新说明书。

V100S Firmware Release Note

1. Please update the firmware with Godox firmware update software G3 V1.1. G3 V1.1 can be downloaded on the official website.
2. How to check the version number: After the device is powered on, go to the menu page and find the device information at the very end. You can see the software version number (e.g. Version 1.00: V1.00).
3. Version Instructions:

Version	What's New	Date
V1.02	Improved new protocol instability and added camera menu control.	25/1/10
V1.03	1. Fixed an issue where A7CR cameras would not sync at high speed after turning on the new protocol. 2. Add TCM switch and power 0.3 step adjustment, which can be set in the menu.	25/3/11
V1.04	Disable the long-press touch screen unlock function.	25/7/14

Note: For more details, please download the newest instruction manual on the official website: www.godox.com.

