

V100N 固件说明

- 一、请使用神牛固件升级软件 G3 V1.1 及以上版本打开该固件进行升级，G3 可在官网下载。
- 二、版本号查看方法：开机后，进入菜单界面，在最后面找到设备信息，可以看到软件版本号（如 1.00 版本：V1.00）。
- 三、版本说明：

版本	更新内容	日期
V1.01	增加 TCM 开关和功率 0.3 档步进调节，可以在菜单中设置。	25/3/11
V1.02	取消触屏长按解除锁定功能	25/7/14
V1.04	1. 新增功能：SU-1 开关掉电存储；屏幕锁定掉电存储；可在菜单中关闭开机锁定，开机无需解锁。 2. 修复 ISO 小于 100 时有效距离显示错误的问题。	25/11/26
V1.05	修复闪光灯在尼康 Z8 和 Z9 相机上使用时漏闪的问题。	26/4/10

注：详细规格请在官网（www.godox.com.cn）下载最新说明书。

V100N Firmware Release Note

1. Please use Godox firmware upgrade software G3 V1.1 or later to open this firmware file to proceed with the upgrade. G3 can be downloaded on the official website.
2. How to check the version number: After the device is powered on, go to the menu page and find the device information at the very end. You can see the software version number (e.g. Version 1.00: V1.00).
3. Version Instructions:

Version	What's New	Date
V1.01	Add TCM switch and power 0.3 step adjustment, which can be set in the menu.	25/3/11
V1.02	Disable the long-press touch screen unlock function.	25/7/14
V1.04	1.New Features: SU-1 switch power-off memory; screen lock power-off memory; support disabling power-on lock in the menu (no unlock required on startup). 2.Fix the issue where the effective distance display is	25/11/26

	incorrect when ISO is less than 100.	
V1.05	Fixed the intermittent misfiring issue when using the flash with Nikon Z8 and Z9 cameras.	26/4/10

Note: For more details, please download the newest instruction manual on the official website:
www.godox.com.