

## iT30ProN 固件说明

- 一、请使用神牛固件升级软件 G3 V1.1 及以上版本打开该固件进行升级，G3 可在官网下载。
- 二、版本号查看方法：开机后，进入菜单界面，在最后面找到设备信息，可以看到软件版本号（如 1.00 版本：V1.00）。
- 三、进入升级方法：方法 1.开机后，进入菜单，找到设备信息，用 USB 线连接电脑后，点击固件升级。方法 2.关机状态按住 MENU 按键，再插入 USB 接口连接电脑进入升级。
- 四、版本说明：

版本	更新内容	日期
V1.01	1. 新增功能：屏幕锁定掉电存储。可在菜单中关闭开机锁定，开机无需解锁。 2. 修复 ISO 小于 100 时有效距离显示错误的问题。	26/2/5
V1.02	修复闪光灯在尼康 Z8 和 Z9 相机上使用时漏闪的问题。	26/4/10

注：详细规格请在官网（[www.godox.com.cn](http://www.godox.com.cn)）下载最新说明书。

## iT30ProN Firmware Release Note

- 1. Please use Godox firmware upgrade software G3 V1.1 or later to open this firmware file to proceed with the upgrade. G3 can be downloaded on the official website.
- 2. How to check the version number:After the device is powered on, go to the menu page and find the device information at the very end. You can see the software version number ( e.g. Version 1.00: V1.00 ).
- 3. Upgrade method: Method 1.After powering on the device, enter the menu, find the device information, connect the computer via a USB cable, and then click on firmware upgrade.  
Method 2.In the powered-off state, press and hold the MENU button, then insert the USB interface to connect to the computer and proceed with the upgrade.
- 4. Version Instructions:

Version	What's New	Date
V1.01	1. New Features: screen lock power-off memory. support disabling power-on lock in the menu (no unlock required on startup). 2. Fix the issue where the effective distance display is incorrect when ISO is less than 100.	26/2/5
V1.02	Fixed the intermittent misfiring issue when using the flash with Nikon Z8 and Z9 cameras.	26/4/10

**Note: For more details, please download the newest instruction manual on the official website:**  
[www.godox.com](http://www.godox.com).