



# SKI POLE FLEX TIPS

One pair of replacement tips for G3's Via Carbon ski pole lower shafts.  
For use with the G3 Via Carbon ski pole.

G3 Genuine Guide Gear Inc.  
[www.genuineguidegear.com](http://www.genuineguidegear.com)





# SKI POLE FLEX TIPS

## Instructions:

1. Carefully warm up the tip you intend to remove by immersing the tip end of the pole in hot water (95C/200F) for 2 minutes. Use gloves to protect your hand and carefully pull the tip off the pole shaft. Do not twist or rotate the tip while removing it as that may damage the shaft.
2. Leave the glue residue on the shaft, it will be useful to hold the new tip onto the pole. Supplement with additional hot melt glue if needed.
3. Push the new flex tip onto the pole shaft and heat it up in hot water (95C/200F) for 2 minutes.
4. Immediately after warming up the flex tip, place the tip end of the pole on a protected floor surface and force downwards from the grip end until the flex tip is seated all the way onto the pole shaft.



Printed with vegetable-based inks  
on 100% recyclable materials



DESIGNED BY G3 IN CANADA  
CONÇU PAR G3 AU CANADA

MADE IN TAIWAN  
FABRIQUÉ AU TAIWAN

(2369-5176)  
G3-SPT-G015 REV - A