## Cleanview Turbo

## 1994U

## **Blowing Dust**

1) Locate post-motor filter on back of vacuum. Press down on filter door tab to remove door.



- 2) Clear away any debris build up on and around filter. Reattach filter door.
- 3) Remove dirt tank by pressing release button and lifting tank away from machine.



Updated by A. Lentz 10/7/2021 P:\Customer Service Dept\Knowledge Base\Troubleshooting\TROUBLESHOOTING GUIDES NEW MODELS\VACUUM\Troubleshooting 1994U\1994U Blowing Dust.docx

- 4) Over a trash bin, press empty latch on back of tank to empty tank. Snap shut bottom lid.
- 5) Separate top handle from bottom tank by grasping carry handle and base of dirt tank. Twist the carry handle counterclockwise.



- 6) Grasp filter handle and lift it out of dirt tank.
- 7) To separate filter pieces, twist filter handle counterclockwise while grasping base of outer cyclone.
- 8) Next, twist filter handle counterclockwise while grasping base of inner cyclone. Clear away any debris build up. Wash pieces if necessary.

**NOTE:** DO NOT wash filter. To clean, tap on side of trash bin.



Updated by A. Lentz 10/7/2021 P:\Customer Service Dept\Knowledge Base\Troubleshooting\TROUBLESHOOTING GUIDES NEW MODELS\VACUUM\Troubleshooting 1994U\1994U Blowing Dust.docx

- 9) To reassemble, align tabs on filter piece with their mating slots on the inner cyclone and twist clockwise.
- 10) Do the same to connect inner and outer cyclone pieces. Reinsert pieces into dirt tank. Filter should sit level.








NOTE: filter will not sit level if tabs on front are not aligned



Updated by A. Lentz 10/7/2021 P:\Customer Service Dept\Knowledge Base\Troubleshooting\TROUBLESHOOTING GUIDES NEW MODELS\VACUUM\Troubleshooting 1994U\1994U Blowing Dust.docx

11) Reattach top lid to dirt tank by aligning clear notch with slot on top lid. Clear notch should point towards unlocked. Twist clockwise to lock.

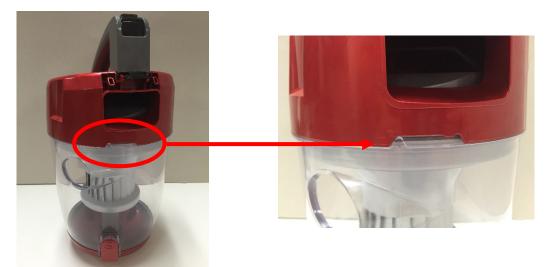

- 12) Reattach dirt tank to canister and turn on. If still blowing dust, remove hose to check for clog.
- 13) Detach hose from base of canister by pushing on release tab and pulling out.



14)Detach hose from extension wand by grasping each piece and pulling them apart. Do the same to detach the foot.





- 15) Insert broomstick through wand and hose to clear debris.
- 16)Also, inspect hose section by section for holes or cracks. If a hole or crack is found,

BISSELL Consumer Care: please refer to product changeover guide.

External Support: Contact BISSELL

17) Reattach pieces by inserting them into their corresponding parts.

18) Turn machine on. If the machine is still blowing dust,

BISSELL Consumer Care: please refer to product changeover guide.

External Support: Contact BISSELL