

SpotClean  
5207 9749 7786

## Machine Leaking Out of Collection Tank

1. Be sure the “Duck Bill Gasket” is all the way in place. If it is not pushed all the way in, into the collection tank, it will cause the collection tank to leak. The gasket can only go in one way.
2. Make sure there is no debris stuck in the “crevices” in the “Duck Bill Gasket.” If there is debris in the crevices, the gasket will not go all the way into the collection tank properly and it will cause it to leak. See pictures below:



3. Make sure the separator stack inside the collection tank is in place properly. The arrow on the separator stack should be in line with the lock icon on the collection tank. If it is not locked into place, the collection tank will leak or it will leak out of the bottom of the machine. See picture:



4. If all these steps have been followed and the machine is still leaking from the collection tank, set up an order for another collection tank (if under warranty, send NC. If it is outside of warranty, place charged order for part)