

If you feel your Pet Stain Eraser™ has reduced or no spray coming, follow these tips to help fix the issue:

- First, make sure the unit is turned off
- You may need to refill the clean water tank. Make sure the water tank is full with solution and water.
- The unit may not be primed. With the unit turned on, press the spray trigger and gently rock the machine back and forth to prime
- The batteries may be weak or undercharged. Recharge the batteries according to the charging instructions
- The spray tip may be clogged. Rinse the tip with clean water. If needed a paperclip may be inserted into the spray tip to unclog
- The clean tank may not be fully i