

## My ProHeat 2X® **Revolution**® **Pet** Carpet Cleaner has no suction to the hose | Support


- Machine must be in upright position for suction at the hose
- If dirty tank is full, it must be emptied
- Check both tanks for cracks or other damage
- o If part is damaged, it will need to be replaced
- Check the bottom of the water tank to make sure it has a red auto-load gasket attached
- Tanks must be seated properly
- o To return the dirty tank, angle the tank and insert bottom-first
- o Tilt the tank toward the machine and push the top in until it clicks into place

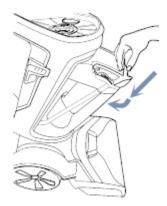

The clean water tank will not click, but should sit flush with no gaps

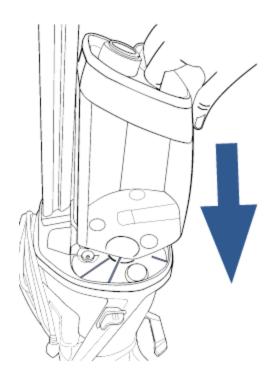

- Dirty tank plug needs to be pushed in securely
- Suction will be reduced if there are gaps

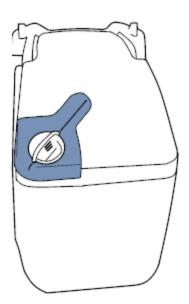

- Reinsert the hose
- Be sure the colored hose release clip is facing out, away from machine



- Check hose for cracks or damage
- o Hose will need to be replaced if damaged
- Check hose for clogs
- Remove hose and run clean water through one end, hold other end over sink water should flow through
- Check red filter screen under dirty tank for debris



- Check for suction at the motor duct gasket next to the red filter
- o Remove collection tank and turn the machine on
- o Place hand over the gasket opening to check for suction
- o If no suction, contact us