

BEFORE EACH USE OF YOUR KARCHER PRESSURE WASHER.

READ INSTRUCTION MANUAL THOROUGHLY BEFORE FIRST USE OF YOUR PRESSURE WASHER

- CHECK WATER INLET FILTER IS CLEAR OF DIRT OR DEBRIS.
- CHECK THE WATER SUPPLY HOSE IS A MINIMUM OF 25 FEET LONG AND UNWOUND FROM THE HOSE REEL.
- ONLY USE A NON-RETURN VALVE AT THE TAP END OF THE SUPPLY HOSE.
- IF YOU ARE USING AN EXTENSION LEAD CHECK THAT IT IS RATED AT A MINIMUM OF 13 AMPS AND IS FULLY UNWOUND FROM IT'S REEL.
- CONNECT THE WATER SUPPLY, REMOVE THE LANCE, AND SQUEEZE THE TRIGGER TO RUN WATER THROUGH THE MACHINE BEFORE SWITCHING THE POWER ON.

5.960-018