# Installation manual and care guide

## MB08



#### **Care and Cleaning Instructions**

Do not apply physical items (such as tools) directly to the product as this may cause irreparable scratches.

Never use detergents, harsh cleaning products, citrus based cleaners, acidic chemicals, or abrasive cleaners.

Where your tapware remains dry in use, a soft cloth can be used to remove surface dust or wipe over with warm soapy water using only soft or microfiber fabric.

Use of wax based furniture cream should be avoided as these can result in a build-up of deposits, which could detract from the appearance.

Do not use undue pressure and try to wipe in one direction only.

#### Installation and testing

Do not install tapware using any form of acetone silicones.

Cartridges and diverters are tested and assembled prior to dispatch; no self-assembly and disassembly is required.

All underground components should undergo a 30-minute water test under 0.8pa before sealing. The water test should be conducted with close attention and with no signs of water leak. The installer is deemed responsible for any concealed leaks that are identified after installation.

Underground pipes should be installed strictly as per the installation manual; exchanging any parts supplied with the product is strictly prohibited and will void the warranty.

MAXIMUM: Temperature 75 degrees & Pressure – 1,000kPa. MINIMUM: Temperature –3 degree & Pressure – 150kPa. Note: AS/NSZ 3500.1-2003 (Clause 3.3.4) specifies 500kPa maximum water supply pressure at any outlet within a building for new installations.

Water pipes must be cleaned and flushed before installation. Impurities could destroy the cartridge, diverter, and aerator.

Gloves should be used and tools should not contact the product during or after installation as this may damage the shape or finish.

#### **Problems and Solutions**

If the water is not flowing as intended, please ensure the angel valve is opened fully.

If the water flow is coming out in an irregular stream, carefully remove and clean the aerator.

If the water temperature is not adjustable (changing from hot to cold or cold to hot), please ensure the angel valve and connection pipe is correctly installed.

### **Component List**

	Name	QTY.
1	spout	1
2	hand shower	1
3	hose	1
4	S2mm hex wrench	1
5	S4mm hex wrench	1
6	connecting pipe	1
7	water inlet pipe	2
8	M5x15 hex bolt	8
9	M5 washer	8
10	water test base	1
11	rubber ring	1
12	rubber water stop	2
13	dustproof cover	1
14	fixing nut	1
15	rosette	1
16	expansion anchor bolts	4
17	plastic box	1
18	manual	1
19	water pipe	1













Underground components installation



Underground components installation





 Fasten the spout to the connection pipe.
Install the rosetteand be careful to avoid scratching.

③ Fasten the brass nut to the Body. Use thread glue if required.



① Insert the 2 water pipes in the tap holes in the plastic box underground.

②Fasten the brass nut by 4 screws.



Push the rosette smoothly and firmly down.





The unit can be rotated 360°



Switch between the spout and hand shower by using diverter.