




INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301

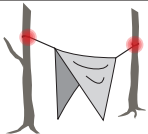


1 Tie Between Trees

Secure the corner anchors by tying guylines between trees or any other fixed anchors at preferable height.

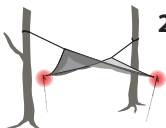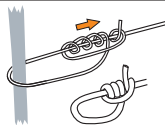

2 Tension Side Flaps

Use extendable trekking poles to tension the side flaps. Alternately, guylines can be used to tension out these points too.

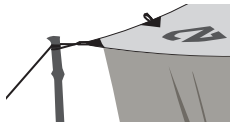

3 Drop Mesh Walls

To protect against mosquitoes; release the mesh walls and zip the sides together.



4 Stake Mesh and Tension

Stake the mesh at each corner to secure in place.



5 Roll Mesh Back or Away

For added ventilation or ease of entering/ exiting, roll mesh back. Use the cordlock and webbing loop to secure the mesh in place.



©2019 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

BUGOUT™ SERIES