



My Hydrowave has no spray | Support

*The trigger on handle must be depressed to produce spray


- Clean water tank on back of the machine should be full and sitting flush with the machine
- Remove tank by pulling up and inspect it for any cracks or leaks
 - If your tank is cracked or leaking, a replacement should be ordered
- With your water tank removed, check for cracks on cap
 - If your cap is damaged, it should be replaced
- Firmly push the clean water tank back into place on the machine
 - You should hear a click when the clean water tank is secure

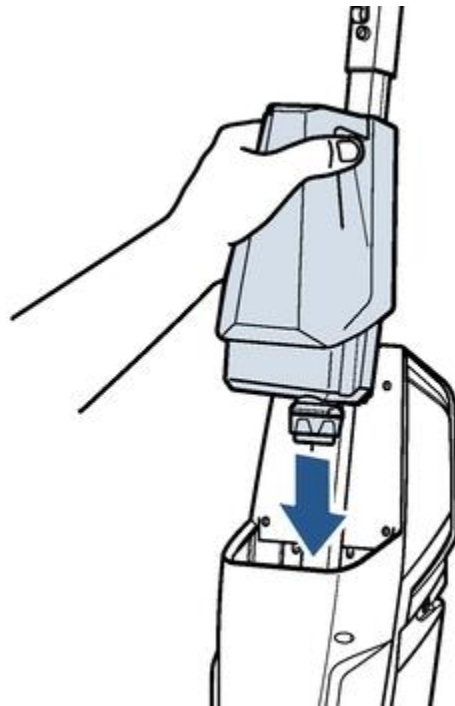


- Plug in machine with a full clean water tank
- Hold the spray trigger down for 10-15 seconds to prime and test for spray
 - You should see solution bubbling under the nozzle

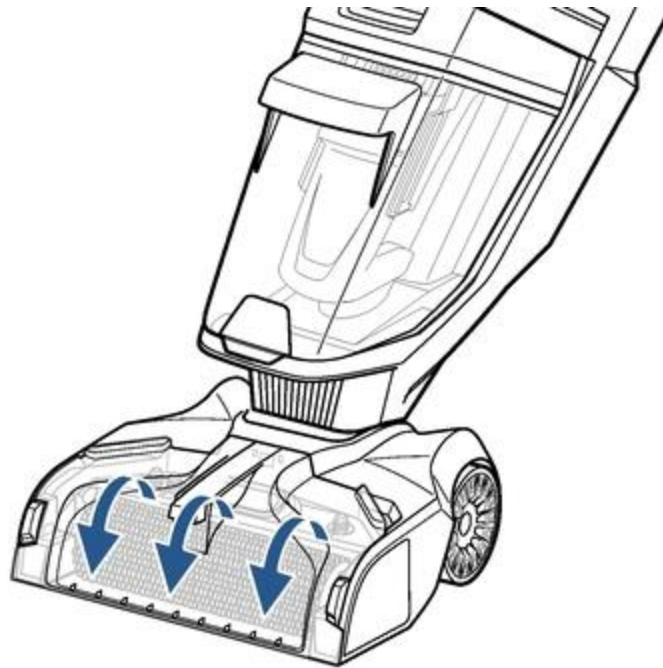


- Select the clean shot button and test for spray from the Clean Shot Nozzle

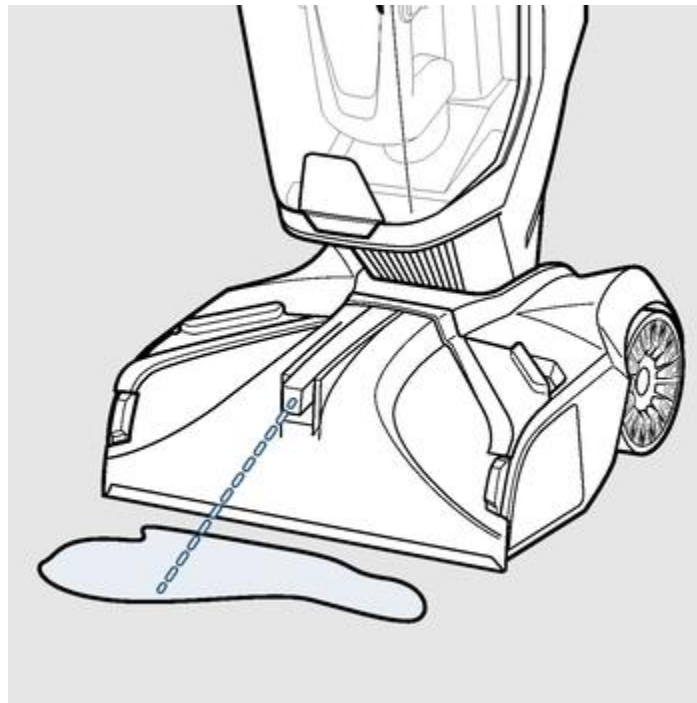

- If still no spray, unplug machine
- Remove the nozzle by pulling up on both sides of the nozzle

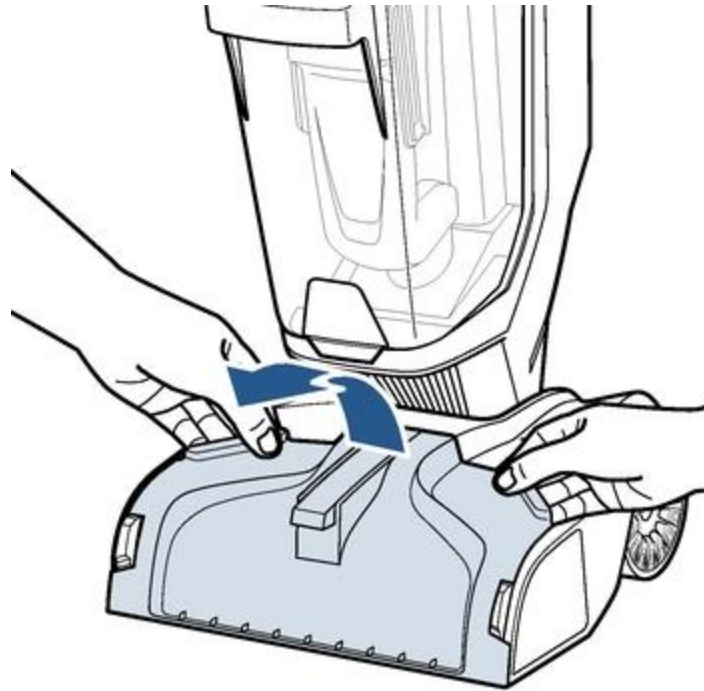

- Check for clogs in the spray tips on the foot of the machine
- Probe the spray tips with a paperclip to clear away any clogs
- Before reattaching the nozzle, check for spray in the spray tips
- Plug Machine in and push express cleaning mode
- water should flow from spray tips
- If water flows from spray tips, turn machine off and unplug
- Reattach the nozzle by lining up the tabs on the front edges of the foot - push the window into place until it clicks

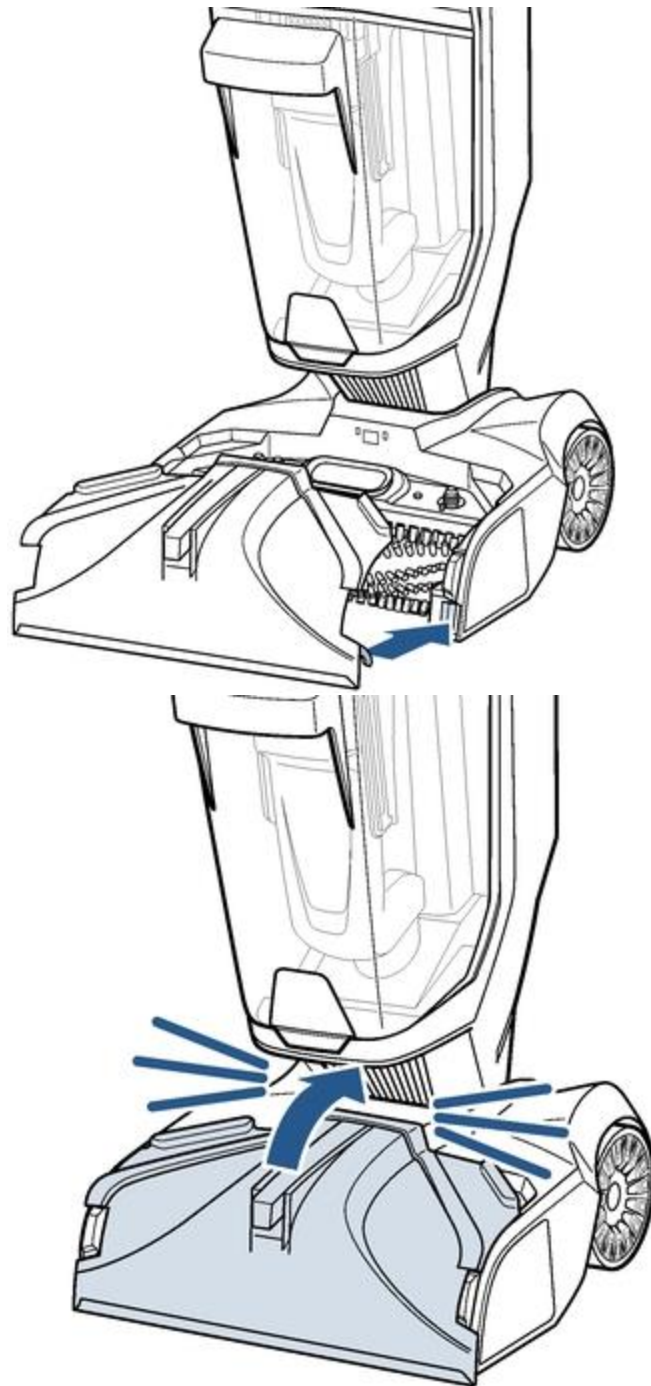

- Plug machine in and test for spray
 - If spray came out of the spray tips, but not the Nozzle, the Nozzle should be replaced
 - If there was no spray from the spray tips [Contact Us](#)