

Bissell®

ICON 25V CORDLESS VACUUM

MODEL 2602F



Go online for a comprehensive walkthrough of your product!

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts and more. Go to **[BISSELL.com.au](https://www.bissell.com.au)**.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Do not use with damaged cable or plug.
- If the charger supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- The battery is to be disposed of safely.
- This appliance contains batteries that are only replaceable by skilled persons.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- This appliance contains batteries that are non-replaceable.
- Do not use with damaged cord or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- The battery must be removed from the appliance before it is scrapped.
- Do not immerse in water or liquid.
- Turn OFF all controls before unplugging.
- Do not pull or carry charger by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- Keep charger cable away from heated surfaces.
- To unplug, grasp the charger plug, not the cable.
- Do not handle charger plug or appliance with wet hands.
- Battery pack and charger base output terminals are not to be short-circuited.
- Do not charge the unit outdoors.
- The appliance must be disconnected from the supply mains when removing the battery.
- Do not recharge, disassemble, heat above 60°C, or incinerate.
- Keep batteries out of reach of children.
- Dispose of used batteries promptly.
- Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energising appliance that have the switch on invites accidents.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 150°C may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 4-30°C when charging battery, storing unit or during use.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Use only as described in this user guide.
- Use only manufacturer's recommended attachments.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as petroleum, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not use on wet surfaces. Do not expose to rain. Store indoors.

SAVE THESE INSTRUCTIONS

ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

 
 
 


We're so happy you chose the ICONpet High-Powered Cordless Vacuum. We put this guide together to help you set up, use and maintain your cordless vacuum. We've also included some tips we think will come in handy when you first start using your cordless vacuum, so let's get started!

For a comprehensive walkthrough of your product, go to [BISSELL.com.au](https://www.bissell.com.au).

What's in the Box?.....	4	Emptying the Dirt Tank.....	8
Getting to Know Your Vacuum.....	4	Removing the Brush Roll.....	8
Assembly.....	5	Cleaning & Replacing the Filters.....	9
Installing the Wall Storage & Charging Station.....	5	Disposing of the Batteries.....	10
Charging the Battery.....	6	Troubleshooting.....	11
Using the Vacuum.....	7	Guarantee.....	12
Attaching Tools for Hand Vac Use.....	7		

What's in the Box?


			
Hand Vacuum Assembly	Extension Wand	Motorised Floor Nozzle	Soft Bare Floor Brush Roll
			
Lighted Crevice Tool & Dusting Brush	Motorised TurboBrush® Tool	Battery Charger	Wall Storage & Charging Station

Getting to Know Your Vacuum

➤ For additional support videos and information about your vacuum, visit [BISSELL.com.au](https://www.bissell.com.au).

Product View

1. Hand Vacuum Assembly
2. Power Button
3. Cleaning Mode Button
4. Tank Release Button
5. Dirt Tank
6. Hand Vacuum Release Button
7. Extension Wand
8. Foot Release Button
9. Tangle-Free Brush Roll
10. Motorised Floor Cleaning Foot
11. LED Headlights
12. Charging Port
13. Post-Motor Filter
14. Foot Hose

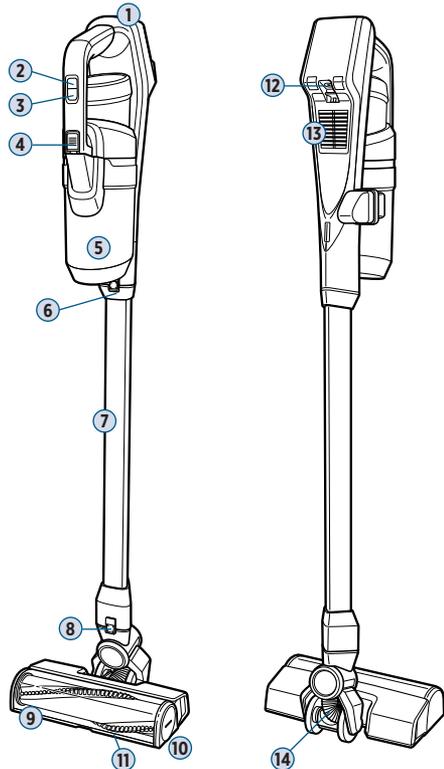




Assembly


➤ Go to [BISSELL.com.au](https://www.bissell.com.au) for assembly videos.



 1. Connect the Extension Wand to Motorised Floor Cleaning Foot. You'll hear a "click" when they're connected.




2. Connect the Hand Vacuum Assembly to the Extension Wand. You'll hear a "click" when they're connected.

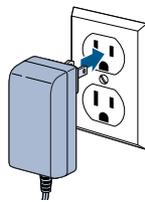


3. Make sure to charge your stick vacuum before first use. Refer to page 6, "Charging the Battery" for instructions.

Installing the Wall Storage & Charging Station


➤ Go to [BISSELL.com.au](https://www.bissell.com.au) for more tips and video instructions on installing the Wall Storage & Charging Station.

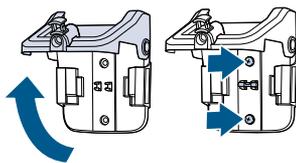

1. Open the Wall Storage & Charging Station, use the bubble level to ensure it is level and insert two screws to secure to wall. In order to charge the machine, ensure the Wall Storage & Charging Station is mounted near a wall outlet.

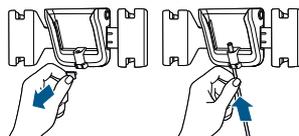

2. Insert the tool holders into the side of the Wall Storage & Charging Station. To install the charging cord, remove the power cord clip from the Wall Storage & Charging Station. Insert the charging cord and secure it with the charging cord clip.

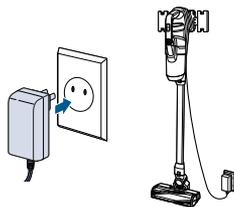

3. Plug the power adapter into the wall and place the machine on the Wall Storage & Charging Station for charging. Refer to page 6, "Charging the Battery" for instructions.





Charging the Battery


Go to [BISSELL.com.au](https://www.bissell.com.au) for additional how-to videos.

Before first use, make sure to fully charge your stick vacuum for 4 hours to get a full charge. To charge the battery you can plug the charger directly into the Hand Vacuum Assembly or into the Wall Storage & Charging Station.

Charging with the Hand Vacuum

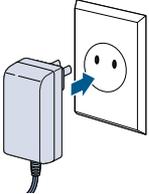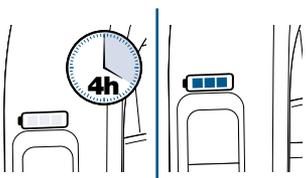		
<p>1. Plug the battery charger into the wall.</p>	<p>2. Plug the charger into the charging port on the back side of the hand vacuum.</p>	<p>3. Let the hand vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.</p>



Charging with the Wall Storage & Charging Station

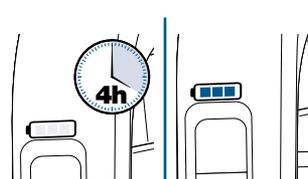	
<p>1. Follow instructions on page 5 for installing the Wall Storage & Charging Station. Once installed, hang the machine onto the station.</p>	<p>2. Let the vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.</p>

Using the Vacuum

Looking for more guidance? Go to [BISSELL.com.au](https://www.bissell.com.au) for tips and 24-7 support while cleaning.




ICON Cordless can be used as a stick vacuum, hand vacuum or for extended reach with hand vacuum + wand.

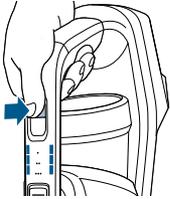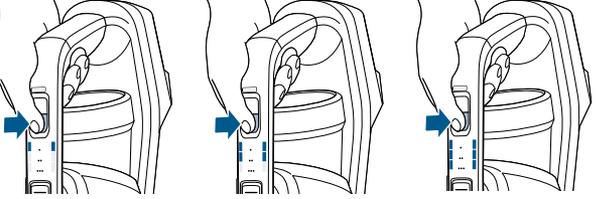	
<p>1. Press the Power Button to begin cleaning and to turn OFF the machine when finished cleaning.</p>	<p>2. Press the Cleaning Mode Button to toggle between the three settings:</p> <ul style="list-style-type: none">••• Recommended for maximum suction. It's the most powerful setting which is great for cleaning carpets, however has the shortest run time. This is the default suction mode when the vacuum is turned ON.•• Recommended for everyday cleaning. It's great for hard floors, low pile carpets and area rugs. It balances power and run time.• Recommended for the longest run time. It's great for hard floors and offers the quietest sound.

Attaching Tools for Hand Vac Use

Go to [BISSELL.com.au](https://www.bissell.com.au) for additional how-to videos.


Clean stairs or furniture easily with the tools provided. Pair your desired tool with the hand vacuum or extension wand. Go to [BISSELL.com.au](https://www.bissell.com.au) for tips on above floor cleaning tools.

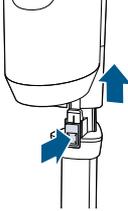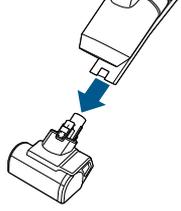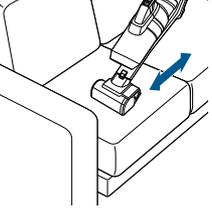		
<p>1. To use as a hand vacuum, press the release button to disconnect it from the extension wand.</p>	<p>2. Attach your chosen tool.</p>	<p>3. Use the tool to clean furniture, stairs or other surfaces in your home.</p>

⚠ WARNING Do not use your vacuum until you are familiar with all instructions and operating procedures.

Emptying the Dirt Tank


➤ More of a video person? Go to [BISSELL.com.au](https://www.bissell.com.au) for additional how-to videos.

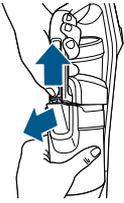


1. Turn OFF your machine. Remove the Dirt Tank from the hand vacuum by sliding the latch on the front of the tank.




2. Grab the top of the tank and pull up. This will activate a wiping feature to remove debris from the mesh filter screen.

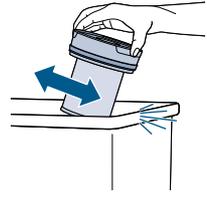


3. Fully remove the separator from the tank and tap the mesh screen on the side of the trash bin.

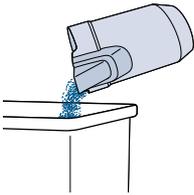

4. Dump dirt from the tank into the trash bin.

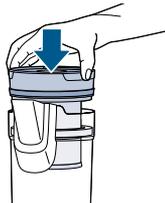


5. Slide the separator back into the tank, ensuring the notch is seated into the tank correctly.

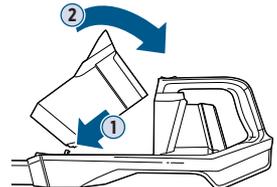


6. Put the whole tank into the hand vacuum by guiding the notched out area on the bottom of the tank onto the hook on the hand vacuum. Push into place.

Removing the Brush Roll

➤ Go to [BISSELL.com.au](https://www.bissell.com.au) for a full list of maintenance and troubleshooting support.

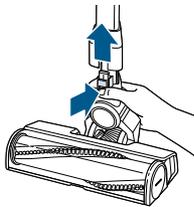

1. Turn the machine OFF and press the Foot Release Button to disconnect the Motorised Floor Cleaning Foot from the Extension Wand.

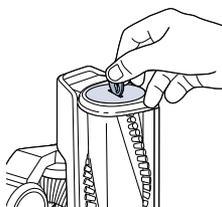

2. With a flathead screwdriver or coin, twist the slot on the side of the foot clockwise and pull the Brush Roll out.



3. To replace, push the Brush Roll back in the chamber and twist counter-clockwise with a tool or coin to lock in place.

⚠ WARNING

➤ Before using your vacuum, make sure that the Dirt Tank is in locked position and that all filters, both pre and post-filters, are in place. DO NOT operate your vacuum without these filters.



Cleaning & Replacing the Filters

Go to [BISSELL.com.au](https://www.bissell.com.au) for tips on maintaining and replacing your vacuum filters.

Pre-Motor Filters

For best cleaning performance, always clean your pre-motor filter after each use.

<p>1. To clean the pre-motor filter, turn OFF machine and remove Dirt Tank from the hand vacuum.</p>	<p>2. Pull filter from the top of the tank. Remove the filter from the filter frame housing. Tap the filter against the side of a trash bin to remove dust and debris.</p>	<p>3. To clean, rinse under warm water and squeeze to remove dirt. Lay out for 24 hours, until completely dry. Make sure to replace your filter into the frame with the tag side down (touching the frame) before using your machine.</p>

Post-Motor Filter

<p>1. To clean your post-motor filter, turn OFF machine and press the latch on the back of the hand vacuum.</p>	<p>2. Remove the post-motor filter from the vacuum. Gently tap the filter on the trash bin to release dust/debris. To clean, rinse under warm water and let it dry for 24 hours.</p>	<p>3. When the filter is completely dry, put it back into the vacuum and replace the cover.</p>

⚠ WARNING

- » Do not use your vacuum until you are familiar with all instructions and operating procedures.
- » Before using your vacuum, make sure that the Dirt Tank is in locked position and that all filters, both pre and post-filters, are in place. DO NOT operate your vacuum without these filters.

 


Disposing of the Batteries


➔ Go to [BISSELL.com.au](https://www.bissell.com.au) for additional support and how-to videos.




1. Run the battery out. Make sure the unit is disconnected from the charger and turned OFF and the hand vacuum is disconnected from the extension wand.




2. Remove five screws from the back of the unit.

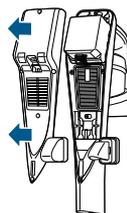

 3. Pull the bottom cover off of the back of the unit.



4. Disconnect and remove entire battery assembly by unplugging the two sockets from the vacuum.

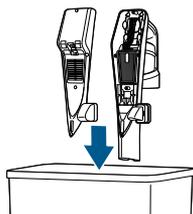

5. Properly discard remainder of product.

NOTE: Keep Battery Pack together – DO NOT separate individual batteries.

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.





Troubleshooting

For a comprehensive walkthrough of your product and support visit [BISSELL.com.au](https://www.bissell.com.au).

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more.

Problem	Possible Cause	Remedies
Vacuum won't pick up dirt	Filters are dirty.	Remove and rinse Pre-Motor Filters. Allow enough time for them to dry properly before reinserting. Remove and dust off post-motor filter.
	There is a clog in the vacuum.	Remove the foot and extension wand from the hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
	Dirt Tank is not seated correctly.	Remove the tank and reseal properly.
Dirt is escaping from the vacuum	Dirt Tank is full.	Empty the tank.
	Filters are missing or dirty.	Check to see if the Pre-Motor & Post Motor Filters are in place and clean, if necessary.
	There is a clog in the vacuum.	Remove the foot and extension wand from the hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
Vacuum won't charge	Wrong charger is being used.	Use only the charger that comes with the machine.
	Charger is not plugged into the machine properly.	Remove the charger and reinstall into the hand vacuum.

Errors

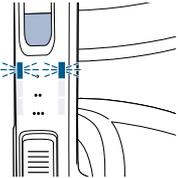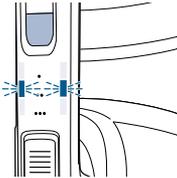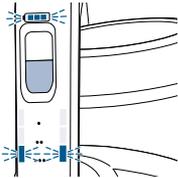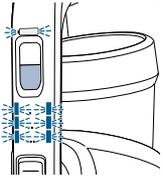			
<p>Cause: Suction motor fault.</p> <p>Remedy: Turn machine OFF. Check and clean filters. Check and clean the machine of clogs. If this doesn't solve the problem, contact Consumer Care.</p>	<p>Cause: Brush roll stall.</p> <p>Remedy: Turn machine OFF. Check and clean the brush roll of any clogs. Brush roll can be removed for thorough cleaning (page 9). Turn machine ON.</p>	<p>Cause: Battery issue.</p> <p>Remedy: Contact Consumer Care.</p>	<p>Air flow issue.</p> <p>Remedy: Turn machine OFF. Check and clean filters. Check and clean the machine of clogs. If this doesn't solve the problem, contact Consumer Care.</p>

Guarantee

This guarantee gives you specific legal rights, in addition to rights you may have under the *Australian Consumer Law*. If you need additional instruction regarding this guarantee or have questions regarding what it may cover, please contact your local BISSELL® Consumer Care on the details set out below.

BISSELL Two Year Guarantee

Subject to the *conditions identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part due to manufacturer defect. This guarantee applies to product used for personal purposes, and not commercial or rental service. This guarantee does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the guarantee period in case such need arises within the guarantee period that the item needs re-packing and transportation.

*Conditions of Guarantee

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

For Australian Consumers Only: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This guarantee is in addition to other rights or remedies under law. Nothing in this guarantee excludes, limits or modifies any liability of BISSELL which is imposed by law, or limits or modifies any remedy available to the consumer which is granted by law. To make a claim under this guarantee contact BISSELL Australia PTY LTD (details above). Contact BISSELL prior to returning any goods. Where agreed, BISSELL will reimburse reasonable postage / handling costs (if any) for returning goods to BISSELL. To claim expenses incurred in making a claim under this guarantee please provide BISSELL with a copy of the receipt of the expenses by email or post.

Consumer Care

Australia

Telephone: 1300 247 735

Website: www.BISSELL.com.au

New Zealand

Telephone: 0800 247 735

Website: www.BISSELL.co.nz

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, parts and more.

Go to BISSELL.com.au.



INFO



VIDEOS



PARTS

