

SAKI

TEA MA KER

USER GUIDE





MODEL

SK-TM
120V~60HZ,
1200W
KEEP WARM
120-140W





CLEANING AND MAINTENANCE

IMPORTANT! You need to decalcify the unit every 4 months

Unplug your unit and allow it to cool before cleaning. Rinse the Tea maker or wash with warm soapy water. Wipe the outside of the Tea maker and the base of the unit with a soft, damp cloth. Be sure that the electric Tea maker socket is kept dry throughout the cleaning.



TEA INFUSER

You can wash in warm soapy water and rinse thoroughly. Dry all parts after every use. Never immerse the Tea maker in water. Servicing should be performed by an authorized service representative.


**PLEASE
READ THE
INSTRUCTION
CAREFULLY
BEFORE USE**



DE-CALCIFICATION

De-calcification refers to removing mineral deposits, which may form in the interior of the Tea maker and result in discoloration.

To get the best performance from your unit, decalcify it from time to time. Frequency will depend on the hardness of your water and how often you use the unit.

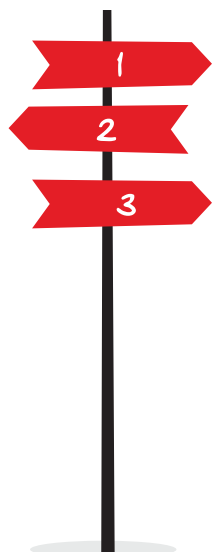

METHOD 1

We suggest using a kettle descaler in order to remove any deposits or scale. Follow the directions on the descaler package.

METHOD 2

If a commercial descaler is not available, add white vinegar to the half-full point of the Tea maker Tea maker. Heat the vinegar to a boil. Repeat this with cooled vinegar until all deposits are removed. When the descaling process is complete, empty the kettle and rinse several times with clean water.

METHOD 3

- Half fill the kettle with tap water and add the appropriate amount of citric acid to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time, then rinse the kettle thoroughly.

SAKI
KITCHEN

IMPORTANT SAFEGUARDS

This appliance is for HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

When using an electrical appliance, basic safety precautions should always be taken, including the following:



- 1** Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- 2** Children should not play with the appliance.
- 3** Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- 4** To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug.
- 5** This kettle has been designed specifically to boil drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- 6** Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- 7** Do not operate the kettle on a sink drain board.
- 8** Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.

At SAKI we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions. Misuse can cause potential injuries.

9 Keep the kettle clear of walls, curtains and other heat- or steam-sensitive materials. Minimum 20 cm distance.

12 Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.

15 Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.

17 Do not move the kettle while it is switched on.

20 Keep the kettle clean. Follow the cleaning instructions provided in this book.

10 Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.

13 Only place teapot on top of the cover. Do not place anything on top of the lid.

16 To protect against electric shock, do not immerse the kettle, power cord or power plug in water or other liquids or allow moisture to come in contact with these parts.

18 Do not open the lid during operation. .

21 Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

11 This kettle is not intended to be operated by means of an external timer or separate remote control system.

14 Always ensure the kettle switches are in the 'off' position, then turn the power off at the power outlet and remove the plug from the power outlet before moving the appliance, when the appliance is not in use and before cleaning and storing.

19 Do not fill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may spill.

22 Close supervision is necessary when any appliance is used by or near children.

23 Close supervision is necessary when any appliance is used by or near children. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.

26 Do not let power cord hang over the edge of a table or counter, or touch hot surfaces.

29 The Tea maker is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)

24 The use of accessory attachments not recommended by SAKI may result in fire, electric shock or injury to persons.

27 To disconnect, press the keep warm switch and boiling switch to off, then remove plug from the wall outlet.

30 Do not set a hot container on a wet or cold surface.

25 This appliance is for household use only. Do not use it for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

28 Scalding may occur if the lid is opened during the heating cycle.

31 Do not remove the lid while the water is boiling.



SAKI
k i t c h e n



32 Do not use a cracked container or a container having a loose or weakened handle.

35 We recommend that you regularly inspect the appliance. To avoid a hazard do not use the appliance if the power cord, power plug or appliance becomes damaged in any way.

36 The installation of a residual current device (a safety switch) is recommended to provide additional safety protection when using electrical appliances. advice.

33 For safety reasons it is recommended you plug your SAKI appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.

36 It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional

34 This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance should not be done by children unless they are 8 years or above and are under supervision. Keep the appliance and its cord out of reach of children less than 8 years old.

37 Do not clean the container with cleansers, steel wool pads, or other abrasive material.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp plug and remove it from the outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

WARNING

- Do not operate the kettle on an inclined surface.
Do not move the kettle while it is switched on.
- **The heating element surface may have residual heat after use.**
- The appliance is designed to boil drinking quality water only. Never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked into the closed position before use.
- **To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.**

BEFORE FIRST USE

Remove and safely discard any packaging material or promotional labels attached to your Tea maker. Before first use fill the Tea maker with cold tap water to the maximum level. Use the auto switch on button to bring the water to a boil, then discard the water. The Tea maker will automatically switch off when the water has reached boiling temperature.

This appliance must be grounded while in use.

CAUTION: To ensure continued protection against the risk of electric shock, connect to properly grounded outlets only.



IMPORTANT

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.



IMPORTANT



SAFETY INSTRUCTIONS

This appliance complies with safety standards in the USA. Nevertheless, as a manufacturer we consider it our obligation to make you aware of the following safety information.



SAFETY OF CHILDREN

Only use the express kettle when supervised.

Supervise children particularly carefully!

Packaging material, such as plastic bags, should not be accessible to children.

Before starting the appliance ensure that the main cord and plug are dry.

DISPOSAL

Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc.

Please dispose of the packaging materials in the appropriate container at community waste disposal facilities.



USING YOUR TEA MAKER

Before using your tea maker, you should wipe it inside and outside with a damp cloth to hygienic reasons.

1. Filling With Water

Turn the handle of the faucet to the right to close it. Or add water with a water ladle. Be sure to prevent water from coming into the steam tube in the controller. (Or fill it directly from the faucet if convenient)

Fill the water between the min and max markers. Never add water beyond the max water level. The kettle may be damaged.

2. Boiling Water

Place the kettle full of water on a firm surface.

Connect the power.

Turn on the water boiling switch. The red indicator lights up and the kettle starts to heat.

3. Keep Water Warm

After boiled the water, turn on the keep warming switch. The blue indicator lights up and start to keep water warm.

After 10-12 minutes, the water starts boiling, the kettle will automatically shut off. If you want to keep the water warm, please turn on the keep warm switch.

NOTE

- When using the kettle to boil water many times, please let the kettle cool down every time for 5 minutes before you turn on the main button again.
- Clean the kettle's inside with water before using for two times or more. Do not drink water from the first 2 boiling cycles.
- If using the ceramic teapot to keep warm, first take off the kettle cover, then place the ceramic teapot with 80% water inside on the top of the kettle.

HOW TO

MAKE YOUR TEA



Put strainer into infuser



Put tea into infuser



Pour water over leaves
and wait a while



Sit and enjoy

Saki Kitchen Inc.
Sunnyvale, CA, USA
(844) 331-7333

AFTER SALES SUPPORT



+1 (650) 241-9976



www.sakikitchen.com



info@sakikitchen.com



SAKI

SAKI

TEA

MA

KER

USER GUIDE





SAKI