

COSORI

User Manual

Original Electric Gooseneck Kettle

Model: CO108-NK



Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | (888) 402-1684



Thank you for
your purchase!



(We hope you love your new kettle as much as we do.)



join

the Cosori Cooks Community on Facebook
facebook.com/groups/cosoricooks



explore

our recipe gallery
www.cosori.com/recipes



enjoy

weekly, featured recipes
made exclusively by our in-house chefs



CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: recipes@cosori.com

Toll-Free: (888) 402-1684

M–F, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

Happy cooking!

Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
Plug and Cord	5
Getting to Know Your Kettle	6
Before First Use	8
• Water Test	8
Using Your Kettle	9
• Boiling Water	9
• Making Pour-Over Coffee	10
• High Altitude Users	10
• Kettle Sounds	10
• Adjusting Lid Tightness	11
• Boil-Dry Protection	11
Care and Maintenance	12
• Cleaning	12
• Descaling	12
Warranty Information	13
Customer Support	14

Package Contents

1 x Electric Gooseneck Kettle
1 x Power Base
1 x User Manual

Specifications

Power Supply	AC 120V, 60Hz
Rated Power	1200W
Capacity	0.85 qt / 0.8 L

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your kettle.
Read all instructions.

General Safety

CAUTION!

- **Do not** touch hot surfaces. Use handle. **Do not** touch the heated parts of the base or the metal walls of the kettle during or immediately after operation.
 - **Do not** fill the kettle above the **"MAX"** line. This may cause water to boil over and may cause scalding.
 - To avoid scalding, **always** handle with care when there is hot water inside the kettle.
- **Do not** immerse the kettle, base, cord, or plug in water or other liquids.
 - Closely supervise children near the kettle. **Do not** allow children to use or play with this kettle.
 - Unplug the kettle when it is not being used and before cleaning.
 - Allow to cool before putting on or taking off parts, and before cleaning.
 - **Do not** use the kettle if it is malfunctioning, or if any part, including the base, cord, or plug, is damaged in any way. **Do not** try to repair the kettle. Contact **Customer Support** (see page 14).
- Using accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury.
 - **Do not** use outdoors.
 - Place the kettle on a dry, flat, stable surface.
 - **Do not** place the kettle (including the base) on or near heat sources such as stovetops, ovens, radiators, etc.
 - To avoid scalding, **always** make sure the lid is securely closed while the kettle is operating. **Do not** cover the spout opening while the kettle is in use. **Do not** cover the openings on the lid.
 - To disconnect, use the **On/Off Switch** to turn the kettle off, then remove the plug from the wall outlet.
 - **Only** use the kettle as directed in this manual.
 - Household use **only**.

SAVE THESE INSTRUCTIONS


PLUG AND CORD

- **Do not** let the cord (or any extension cord) hang over the edge of a table or counter. **Do not** allow the cord to touch hot surfaces.
- This kettle has a 3-prong grounding plug. **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way.
- This kettle uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care.
- Any extension cord must also be a grounding-type 3-wire cord.
- The marked electrical rating of an extension cord should be at least as high as the rating of the kettle (see page 3).

Note: *If the electrical circuit is overloaded with other appliances, your kettle may not operate properly. Operate it on a separate electrical circuit.*

GETTING TO KNOW YOUR KETTLE


Gooseneck Kettle Diagram

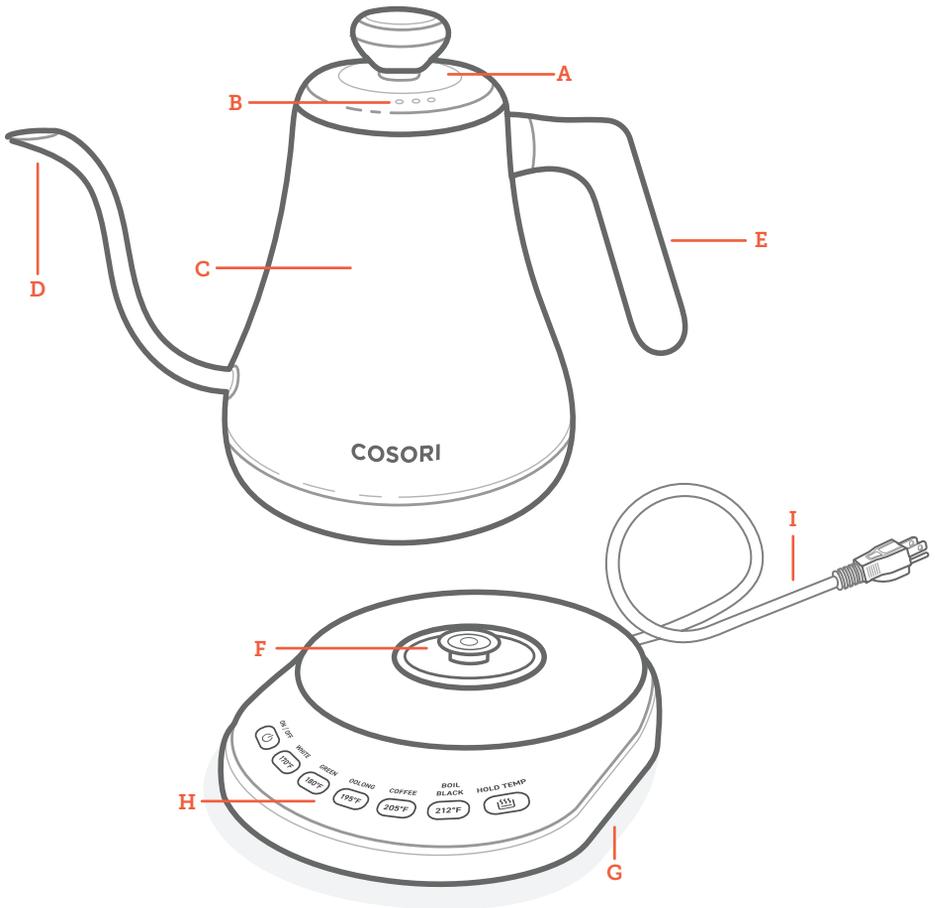

- | | |
|-----------------------|-------------------------|
| A. Lid | F. Heating Plate |
| B. Steam Vents | G. Power Base |
| C. Kettle | H. Control Panel |
| D. Spout | I. Cord |
| E. Handle | |

GETTING TO KNOW YOUR KETTLE (CONT.)

Controls

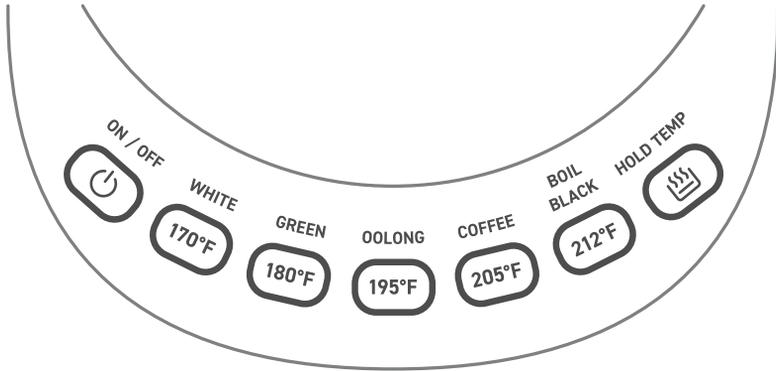

ON / OFF

- Turns the kettle on/off.

170°F WHITE

- Sets the kettle to 170°F / 77°C, the ideal temperature for white tea.

180°F GREEN

- Sets the kettle to 180°F / 82°C, the ideal temperature for green tea.

195°F OOLONG

- Sets the kettle to 195°F / 91°C, the ideal temperature for oolong tea.

205°F COFFEE

- Sets the kettle to 205°F / 96°C, the ideal temperature for coffee.

212°F BOIL BLACK

- Sets the kettle to 212°F / 100°C to boil water. This is the ideal temperature for black tea.

HOLD TEMP

- Starts or cancels Hold Temperature mode to maintain desired temperature (see page 9).
- Press and hold for 8 seconds to turn kettle sounds on/off (see page 10).

BEFORE FIRST USE

Water Test

Perform the Water Test before using your kettle to make sure it's working properly. **Do not** drink the water that is boiled during this test.

1. Remove all packaging from your kettle and its accessories.
2. Completely unravel the power cable and place the power base on a flat, level, stable surface.
3. Fill the kettle with water to the **"MAX"** line [Figure 1.0], then put the lid on the kettle. Press firmly to make sure the lid fits securely.
4. Press  ("**ON / OFF**"). Then, press **212°F** ("**BOIL BLACK**").
5. The kettle will automatically turn off once it has finished boiling the water. Allow it to cool, then pour out the water. Rinse thoroughly 2–3 times with cold water.

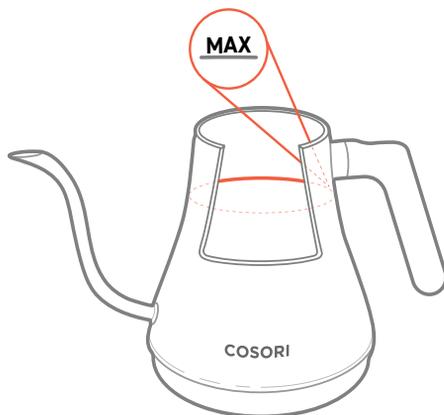


Figure 1.0

USING YOUR KETTLE

Boiling Water

Note:

- Use filtered water for perfect pour over brewing.
 - If you start the kettle without water in it, the kettle will turn off and controls will be disabled. See **Boil-Dry Protection** (page 11).
1. Add at least ½ cup / 118 mL of filtered water to the kettle. **Do not** fill above the **"MAX"** line. Wipe any water from the outside of the kettle and the base.
 2. Put the lid on the kettle and make sure it fits securely. Place the kettle on the power base.
 3. Plug in the cord. The button lights will blink, and the base will beep once.
 4. Press  (**"ON / OFF"**). The button will light up.

Note: The kettle will turn off after 1 minute of inactivity.

5. Press to choose a preset temperature setting. The button will light up, and the kettle will start heating up the water.

Note:

- You can only select 1 preset at a time.
- If you take the kettle off the base while heating, all buttons will turn off, and the kettle will pause heating. If you put the kettle back within 60 seconds, it will resume heating. After 60 seconds, the kettle will turn off.

6. Optionally, press  (**"HOLD TEMP"**) any time before the kettle is finished heating. This will turn on Hold Temperature mode, which will automatically keep the kettle at the same temperature for 60 minutes after heating is finished. The button will stay lit during that time.

Note: If you take the kettle off the base during Hold Temperature mode, the  (**"HOLD TEMP"**) button will blink. After 60 seconds, the kettle will turn off.

7. When the water is at the preset temperature, the kettle will beep 3 times and stop heating.

USING YOUR KETTLE (CONT.)

Making Pour-Over Coffee

You'll need a pour-over coffee maker, such as Cosori's Original 8-Cup Pour-Over Coffee Maker.

1. Place the coffee maker filter into the decanter.
2. Add ground coffee to the filter according to your preference.
3. Heat water using the gooseneck kettle.
4. Use the gooseneck kettle to gently pour water over the coffee grounds using a slow spiral motion. Pour just enough water to saturate the grounds.

Note:

- *This spiral motion is to create "turbulence" in the coffee grounds, allowing the particles in the coffee to separate and release flavor.*
 - *The water will cause the grounds to puff up, which is called "blooming". Some roasts will bloom more than others.*
5. Wait 30–45 seconds.
 6. Use the gooseneck kettle to pour water over the coffee grounds again using a slow spiral motion. If water reaches the top of the filter, stop and let it settle to the halfway point, then begin pouring again until you have the desired amount of coffee.
 7. When finished, remove the filter and enjoy!

High Altitude Users

At higher elevations, water boils at a lower temperature. You may need to use a different preset.

Altitude	Preset for Boiling Water
3,881–9,255 ft / 1,183–2,820 m	205°F COFFEE
9,256 ft / 2,821 m and above	195°F OOLONG

Kettle Sounds

The kettle will alert you by beeping 3 times when the water reaches the preset temperature. The kettle will also beep once when plugged in. To turn kettle sounds off, press and hold  ("HOLD TEMP") for 8 seconds.

USING YOUR KETTLE (CONT.)

Adjusting Lid Tightness

If you feel the kettle lid fits too loosely or is too hard to take off, you can adjust the tightness of the lid.

1. Take off the lid.
2. Use a tool to adjust the 3 tabs on the kettle lid. [Figure 2.1-2.2]
3. If you push the tabs in, the lid will fit more loosely, and will be easier to put on and take off.
4. If you push the tabs out, the lid will fit more tightly, and will not come off as easily.
5. After adjusting the tabs, put the lid back on and take it off again to see if the fit is correct. If not, adjust the tabs again until the lid fits the way you prefer.



Figure 2.1



Figure 2.2

Boil-Dry Protection

Your kettle is equipped with boil-dry protection. If there is less than $\frac{1}{2}$ cup / 118 mL of water in the kettle, the heat will automatically shut off. Allow the kettle to cool and add more water before using again.

If all buttons blink and the kettle beeps, then unplug the power cord to reset the kettle before turning on again.

CARE AND MAINTENANCE

Note: Do not remove the filter from the lid. Doing so will break the filter.

Cleaning

1. Unplug the kettle and allow it to cool before cleaning.
2. Wipe the kettle and base with a soft, damp cloth. Make sure that the electric socket on the underside of the kettle is kept dry.
3. Dry all parts after every use.

Note: Never immerse kettle or power base in water.

Descaling the Kettle

You should descale the kettle at least once a week if you use it frequently. Descaling removes any mineral deposits that have built up inside the kettle. **Always** descale the kettle before and after storing for long periods of time.

1. Unplug the kettle and pour out all water. Make sure the kettle is cool.
2. Squeeze half a lemon into the kettle, or add ½ US cup / 118 mL of distilled vinegar into the kettle.
3. If the kettle has thick scale buildup, scrub the kettle's inner walls with a non-scratch scrub sponge.

Note: Do not use steel wool, as this can scratch the kettle.

4. Add 2 US cups / 473 mL of water. Boil the mixture.
5. Pour out the mixture, then wipe off any remaining scale with a non-abrasive cloth, sponge, or cleaning brush.
6. Repeat as needed.

Note: For quick descaling, add 3 US tbsp / 44 mL of baking soda to ½ US cup / 118 mL of vinegar into the kettle. Swirl the mixture around until it coats the walls of the kettle, wipe with a non-scratch sponge, and pour the mixture out. This method will **only** work for a thin layer of scale.

WARRANTY INFORMATION

Product Name	<i>Original Electric Gooseneck Kettle</i>
Model	CO108-NK
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Arovast Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Arovast Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Arovast Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto www.cosori.com/warranty to register your new product for the extended warranty.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

WARRANTY INFORMATION (CONT.)

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via support@cosori.com with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

CUSTOMER SUPPORT

We're Here to Help!

If you encounter any issues or have any questions about your new product, please contact our helpful Customer Support Team.

Customer Support

Arovast Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@cosori.com

Toll-Free: (888) 402-1684

Support Hours

Monday–Friday

9:00 am–5:00 pm PST/PDT

* Please have your invoice and order ID ready before contacting Customer Support.

SHOW US WHAT YOU'RE MAKING

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Others already in the community are awaiting your uploads—just pick your platform of choice below. Snap, tag, and hashtag away, Cosori chef!

#iCookCosori



@cosoricooks



Cosori Appliances

Considering what to cook? Many recipe ideas are available, both from us and the Cosori community.

MORE COSORI PRODUCTS

If you're happy with this kettle, the line doesn't stop here. Check out **www.cosori.com** for a line of all our beautiful and thoughtfully designed cookware. They might be right at home in your kitchen, too!

COSORI

Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | (888) 402-1684