

COSORI

User Manual

Original Glass Gooseneck Teapot

Model: CO141-GT



Questions or Concerns?

support@cosori.com | (888) 402-1684
Mon–Fri, 9:00 am–5:00 pm PST/PDT



(We hope you love your teapot as much as we do.)



join

the Cosori Cooks Community on Facebook
[facebook.com/groups/cosoricooks](https://www.facebook.com/groups/cosoricooks)



explore

our recipe gallery
www.cosori.com/recipes



enjoy

weekly, featured recipes
made exclusively by our in-house chefs



CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: recipes@cosori.com
Toll-Free: (888) 402-1684
M–F, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

Happy cooking!

Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
Getting to Know Your Teapot	5
Before First Use	6
Using Your Teapot	7
Care & Maintenance	8
Warranty Information	10
Customer Support	11

Package Contents

1 x Glass Teapot
1 x User Manual

Specifications

Capacity	34 oz / 1 L
Dimensions	8.3 x 5.6 x 6.1 in / 21.2 x 14.2 x 15.6 cm
Weight	1 lb / 400 g

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your teapot. Read all instructions.

General Safety


- **Do not** touch hot surfaces, such as the surface of the filled glass teapot. Use the handle.
- **Do not** use the teapot if it is cracked, scratched, or chipped.
- Check for cracks or damage before using, especially if there are signs of leakage.
- **Do not** place the teapot on a wet surface. It may slip, spill hot liquid, or fall.
- **Do not** clean with steel wool, abrasive cleaners, or any other material that may scratch the teapot.
- **Do not** fill the teapot above the **"MAX"** line when heating on a stovetop. This may cause water to boil over and may cause scalding.
- **Do not** heat without water. Fill above the **"MIN"** line when heating on the stovetop.
- To avoid scalding, **always** handle with care when there is hot water inside the teapot.
- Closely supervise children near the teapot. **Do not** allow children to use or play with the teapot.
- **Only** use the teapot as directed in this manual.
- Household use **only**.

GETTING TO KNOW YOUR TEAPOT

- A. Lid
- B. Infuser
- C. Inner Ring
- D. Glass Teapot
- E. Handle

Note:

- The infuser, inner ring, and lid are made with grade 304 stainless steel.
- The lid handle is made with cool-touch plastic.
- The glass teapot is made of high-borate borosilicate glass for high heat resistance.

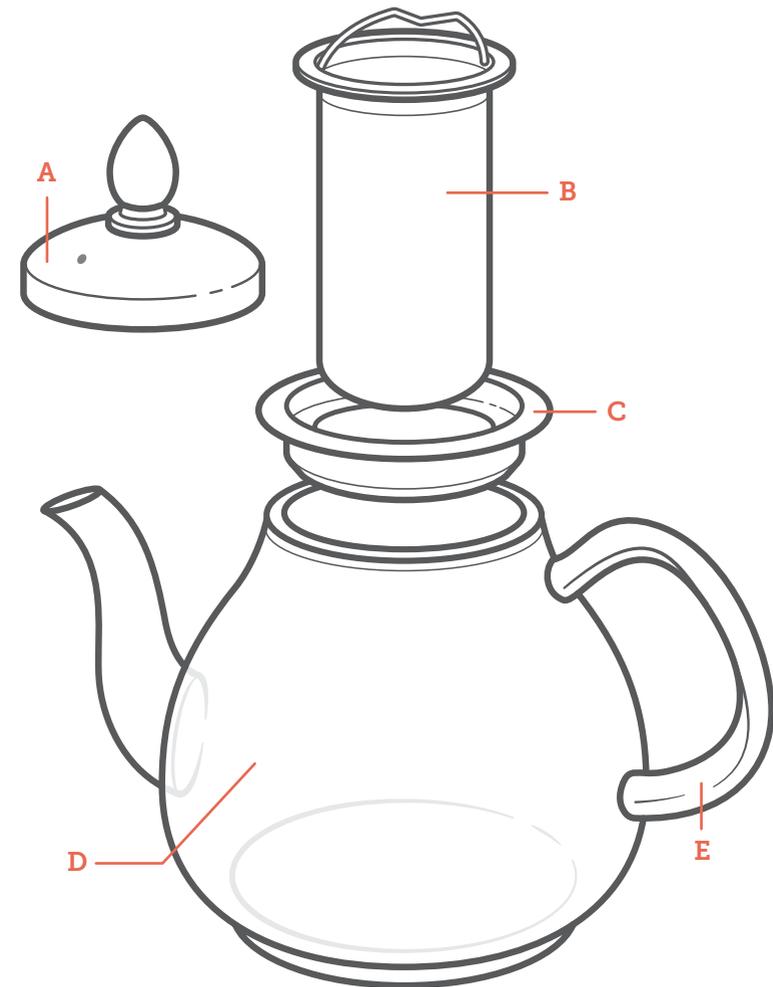

BEFORE FIRST USE

WARNING: Do not remove the teapot from the packaging if it is broken. Contact **Customer Support** immediately to replace your teapot (see page 11).

1. Remove all packaging from the teapot and its accessories.
2. Carefully wash the teapot, infuser, inner ring, and lid under running water. Avoid hitting the faucet or other hard surfaces when washing, as the glass may break from impact [Figure 1.1]. Dry all parts.
3. Place the inner ring in the teapot. If it fits too loosely, you can adjust the tightness of the ring by using a tool to adjust the 3 tabs on the ring (see page 9).
4. Now, you are ready to brew tea or boil water.



[Figure 1.1]

USING YOUR TEAPOT

Brewing Tea

1. Add boiled water to the teapot above the "MIN" mark, or boil water in the teapot (see **Boiling Water**). Do not fill above the "MAX" line. Wipe any water from the outside of the teapot.
2. Add tea leaves to the infuser. Use 1 US tsp / 4 g of leaves per 1 US cup / 250 mL of water.

Note: Adjust depending on the instructions on your tea packaging or your personal preference.

3. Carefully place the infuser inside the teapot and cover with the lid.
4. Allow the tea to steep for several minutes before serving. You can adjust the steeping time for a weaker or stronger brew.

WARNING: Handle with care when serving to avoid scalding.

Boiling Water

WARNING:

- **Only** use the teapot on a gas or electric stovetop. **Do not** use on an induction stove.
- When using on a gas stovetop, **only** use with low heat. Make sure the flames do not extend past the bottom rim of the teapot.

1. Remove the infuser and lid from the teapot and fill with water above the "MIN" mark. Do not fill above the "MAX" line. Wipe any water from the outside of the teapot.
2. Put the lid on the teapot and place the teapot on the stove.
3. Turn the stove on low heat. Once the water boils, turn off the stove.

WARNING:

- Handle the teapot carefully after boiling water as the handle may be hot.
- **Do not** leave the teapot unattended while boiling water. Turn off the stove immediately when the water boils.

CARE & MAINTENANCE

Cleaning

1. After every use, remove the infuser and discard the used tea leaves.
2. Carefully wash the teapot, infuser, inner ring, and lid with mild soap and hot water.

Note: Avoid hitting the faucet or other hard surfaces when washing, as the glass may break from impact.

3. Wipe with a damp cloth to remove superficial stains.
4. Dry all parts.

Note:

- You can use vinegar or lemon juice to descale the teapot.
- The teapot, infuser, and inner ring are dishwasher-safe. **Do not** place the lid in a dishwasher.

Descaling the Gooseneck Teapot

You should descale the teapot at least once a week if you use it frequently. Descaling removes any mineral deposits that have built up inside the teapot. **Always** descale the teapot before and after storing for long periods of time.

Descaling the Infuser with Baking Soda

1. Remove the infuser and discard the used tea leaves.
2. Wet the infuser with water, and sprinkle baking soda onto it.
3. Scrub the infuser with a brush, and wipe it with a damp cloth.
4. Rinse the infuser with water.
5. Repeat steps 2 and 3 until clean.

Descaling the Infuser with Vinegar

1. Remove the infuser and discard the used tea leaves.
2. Fill a small container or bowl with vinegar.
3. Put vinegar and water into the infuser. The vinegar-to-water ratio should be 1:1.
4. Let the infuser soak for 2 hours.
5. Scrub the infuser with a brush, and wipe it with a damp cloth.
6. Rinse with clean water.

CARE & MAINTENANCE (CONT.)

Descaling the Pot

1. Squeeze half a lemon into the teapot, or add baking soda into the teapot.
2. Add ½ US cup / 118 mL of water to the teapot.
3. Scrub the teapot's inner walls with a non-scratch scrub sponge.
4. You can clean the inside of the spout with a soft brush or small cloth through it.

[Figure 2.1]



[Figure 2.1]

Note:

- **Do not** use steel wool, as this can scratch the teapot.
5. Pour out the mixture, then wipe off any remaining scale with a non-abrasive cloth, sponge, or cleaning brush.
 6. Repeat as needed.

Storage

- Store the teapot in a safe place or inside of its box.
- **Do not** store the teapot where it may fall, be bumped, or knocked over. Glass may break.

- Store the teapot out of reach of children and pets.

Adjusting Inner Ring Tightness

If the inner ring fits too loosely or is too hard to take off, you can adjust the tightness of the inner ring.

1. Take off the inner ring.
2. Use a tool to adjust the 3 tabs on the inner ring. [Figure 2.2]
 - a. If you push the tabs in, the ring will fit more loosely, and will be easier to put on and take off.
 - b. If you push the tabs out, the ring will fit more tightly, and will not come off as easily.
3. After adjusting the tabs, put the ring back on and take it off again to see if the fit is correct. If not, adjust the tabs again until the ring fits the way you prefer.



[Figure 2.2]

WARRANTY INFORMATION

Product	Original Glass Gooseneck Teapot
Model	CO141-GT
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Date of Purchase	
Order ID	

TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Arovast Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use for which the product is not intended. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Arovast Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Arovast Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Extend Your Warranty by 1 Year

Register your product at www.cosori.com/warranty to extend your 1-year warranty by an additional year.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via support@cosori.com with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Support Hours

Monday–Friday
9:00 am–5:00 pm PST/PDT

Email: support@cosori.com

Toll-Free: (888) 402-1684

*Please have your invoice and order ID ready before contacting Customer Support.

COSORI

Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | (888) 402-1684

JJ081020GY-M1_0820CO141-GT