

CARE & MAINTENANCE

Cleaning

After every use, remove the filter and discard used coffee grounds.

WARNING: To avoid breakage, handle decanter with care. Glass will break as a result of impact. Avoid hitting faucet or other hard surfaces when hand washing.

- Wipe with damp cloth to remove superficial stains.
- Make sure the wooden sleeve is completely dry before placing back on glass decanter.

Storage

- Remove the wooden sleeve and separate it from the sleeve tie. Wipe the sleeve and sleeve tie with a wet cloth, then dry with another cloth before placing back on the decanter.
 - Hand wash the glass decanter, measuring scoop, and filter with hot, soapy water. Use a mild soap. **Do not** use abrasive cleaners.
- Store the coffee maker in a safe place, or in its box.
 - Do not** store glass decanter in a place where it may fall, be bumped, or knocked over. Glass may shatter. Store out of reach of children and pets.
 - Keep glass decanter in protective wrap for storage.

Note: You can also wash the filter and glass decanter in a dishwasher. The wooden sleeve and tie are **not** dishwasher-safe. **Only** the filter and glass decanter are dishwasher-safe. Remove the wooden sleeve and tie before putting in a dishwasher. The measuring scoop is **top-rack** dishwasher-safe only.

WARRANTY INFORMATION

Product	Original 8-Cup Pour-Over Coffee Maker
Model	CO148-CM
Default Warranty Period	1 year
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Date of Purchase	
Order ID	

TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Arovast Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use for which the product is not intended. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Arovast Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Arovast Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Extend Your Warranty by 1 Year

Register your product at www.cosori.com/warranty to extend your 1-year warranty by an additional year.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via support@cosori.com with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Support Hours
Monday–Friday
9:00 am–5:00 pm PST/PDT

Email: support@cosori.com
Toll-Free: (888) 402-1684

*Please have your invoice and order ID ready before contacting Customer Support.

COSORI

User Manual

Original 8-Cup Pour-Over Coffee Maker

Model: CO148-CM



Questions or Concerns?

support@cosori.com | (888) 402-1684
Mon–Fri, 9:00 am–5:00 pm PST/PDT

Package Contents

- 1 x Stainless Steel Filter
- 1 x Glass Decanter
- 1 x Wooden Sleeve
- 1 x Measuring Scoop
- 1 x User Manual

Specifications

Capacity	8 coffee cups / 34 fl oz / 1 L
Filter Material	304 Stainless Steel
Decanter Material	High Borosilicate Glass
Measuring Scoop Size	1 US tbsp / ~7 g

IMPORTANT SAFEGUARDS

Follow basic safety precautions when using your coffee maker. Read all instructions.

- **Do not** touch hot surfaces, such as the surface of the filled glass decanter. Use wooden sleeve.
- **Do not** set the decanter on a wet surface. It may slip, spill hot liquid, or fall.
- **Do not** clean with steel wool pads, abrasive cleaners, or any other materials that may scratch the decanter.
- **Do not** use the decanter if it is cracked, scratched, or chipped.
- Check for cracks or damage before using, especially if there are signs of leakage.
- **Do not** use the decanter with a worn wooden sleeve or without the sleeve properly attached.
- **Do not** clean with steel wool pads, abrasive cleaners, or any other materials that may scratch the decanter.
- **WARNING:** Danger of scalding. Be careful when handling hot water. Decanter is heavy when filled and glass may be hot.
- Household use **only**.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR POUR-OVER COFFEE MAKER



- A. Filter
- B. Measuring Scoop
- C. Sleeve
- D. Sleeve Tie
- E. Decanter

Note:

- The filter is precision-etched, permanent, double-layered, and made with 304 grade stainless steel. Micro mesh prevents grounds from getting into the coffee.
- The decanter is high borosilicate glass for high heat resistance.

BREWING COFFEE

Note: This process should take about 5 minutes.

1. Place the filter into the mouth of the glass decanter.
2. Add medium coarse ground coffee to the filter. The ratio of coffee grounds to hot water is 1 level measuring scoop (~7 g) of coffee to 4 fl oz / 118 mL water. We recommend using freshly ground coffee. Adjust the amount of coffee or water according to taste. Shake gently to level the grounds.
3. Pour water over coffee grounds using a slow spiral motion, starting in the middle of the filter. Pour just enough water to saturate the grounds.
4. Wait 30–45 seconds.
5. Pour water over coffee grounds again, starting on the outer rim of the filter, using a slow spiral motion. If water reaches the top of the filter, stop and let it settle to the halfway point, then begin pouring again until you have the desired amount of coffee.
6. When finished, remove the filter and discard the used coffee grounds. Enjoy!

Note: This spiral motion is to create "turbulence" in the coffee grounds, allowing the particles in the coffee to separate and release flavor.

Note: The water will cause the grounds to puff up, which is called "blooming". Some roasts will bloom more than others.

Tips:

- Use a conical burr coffee grinder to ensure consistent grinding and better extraction for a full-bodied cup of coffee.
- Use fresh, filtered water at the optimal brewing temperature of 195°–205°F / 91°–96°C.
- Use a kettle with a gooseneck spout to help control water distribution and saturation.
- To keep your coffee warm, you can place the filled decanter directly on a glass stove top or gas flame, both at LOW heat **only**. The decanter must be filled. If the decanter is empty, never place it on a heating element.