 




INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301



1. Assemble Frame

On level ground, assemble the frame, making sure to completely join poles together and insert fully into the hub sockets.

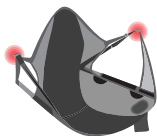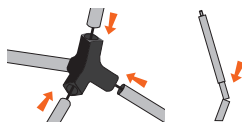


2. Orient Seat

Locate the two metal Super Lock hardware. Orient with the "TOP" label facing up, making sure there are no twists in the straps.




3. Attach Seat

Attach Super Lock hardware to the top of the frame. If properly attached, the top plate of the Super Lock will slide into the groove on the end tip at the top of

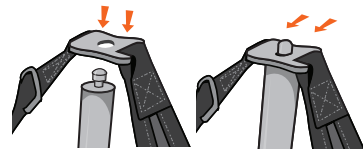


4. Insert Headrest Supports

Assemble the poles connected to the back of the chair. Then insert the upper ends into the pockets at the top.

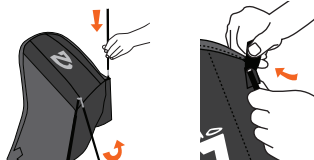


5. Swing, Recline, Relax

Swing your chair on any stable and level terrain. Lean into the backrest to automatically recline. Lean forward to sit upright again.

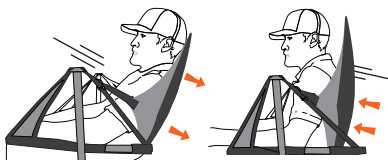

6. Disassembly

Slide the top plate of the Super Lock toward the outside of the frame, then lift the Super Lock off the frame and fold and stow chair in its carry case.

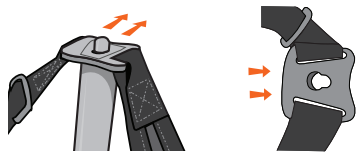

Warnings



Use chair on stable and level ground. Completely join poles together and insert fully into hubs. Ensure Super Lock hardware is properly attached. Always test the chair before applying full weight. Do not aggressively swing or jump in the chair. Do not permit children to use unattended. Max Capacity: 300 lbs / 135 kg

