 



INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service
Email: journey@nemoequipment.com
Phone: 800-997-9301




1 Insert Poles in Corner Grommets

 Lay the inner tent on the ground and arrange the hubbed pole so pole color matches corner webbing color. Insert locking pole tips into corner grommets.



2 Attach Inner Tent to Poles

Attach the inner tent canopy to the poles using the pole clips.

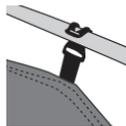

3 Secure Ridge Pole

Position the ridge pole above main poles and insert locking pole tips into grommets above the doors.



4 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the grommets on the inside of the fly and attach to ridge pole tips. Locate the webbing straps on the corners of the fly and secure their grommets under the main pole end tips. Adjust tension in the fly using the webbing straps.



5 Stake in Place

Position your tent as desired and stake the four corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects



6 Vestibule(s) and Tension

 
Secure poles to rain fly with internal pole wraps. Stake vestibule(s) and pull firmly on all adjustable corner anchors. Add guylines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.



©2020 NEMO Equipment, Inc.

Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

KUNAI™
2P




1 Insérer les mâts dans les œillets situés aux angles

Étendre la chambre sur le sol et disposer le mât central de manière à ce que la couleur du mât corresponde à la couleur des sangles situées aux angles. Insérer les embouts de blocage des mâts dans les œillets situés aux angles.



2 Fixer la chambre aux mâts

Fixer la canopée de la chambre aux mâts à l'aide des clips à arceaux.

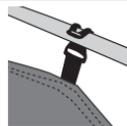

3 Fixer le mât de faitage

Placer le petit mât de faitage au-dessus des mâts principaux, à l'entrée de la tente. Accrocher le mât de faitage à l'aide des œillets situés sur les côtés de la chambre et du clip central en plastique.



4 Fixer le double-toit

Couvrir la chambre avec le double-toit. Repérer les sangles situées aux angles du double-toit et fixer leurs œillets aux extrémités du mât principal. Ajuster la tension du double-toit à l'aide des sangles de fixation.



5 Fixer la tente au sol

Positionner la tente comme souhaité et fixer les quatre attaches basses à l'aide de piquets. En tirant sur les coins, attention à la tension au niveau du sol de la tente. Ce dernier doit rester bien à plat. Si le sol est trop dur pour planter les piquets, lester les attaches avec de gros cailloux ou autres objets pesants.



6 Abside(s) et tension

Fixer les mâts au double-toit à l'aide des rabats internes. Fixer la ou les abside(s) et tirer fermement sur toutes les attaches d'angle ajustables. Ajouter des haubans pour une meilleure tenue. Une tente correctement tendue assure une protection contre l'eau et une résistance au vent maximales.

