

# Smoke X4™ / Smoke X4™ Receiver

## Sync Instructions

---

Smoke X4 and Smoke X4 Receiver come paired out of the box so you should only need to do this when replacing or adding Smoke X4 Receivers.

### How to sync:

- With Smoke X4 powered on, press and hold the (⏻) button for 5 seconds until “SYNC” appears on the screen.
- Now that Smoke X4 is in SYNC mode, make sure Smoke X4 Receiver is powered on.
- Press and hold the VOL button for 5 seconds on Smoke X4 Receiver. The display should read “SYNC” for a short amount of time.
- Both Smoke X4 and Smoke X4 Receiver will beep and return to normal functionality signaling a successful pairing.

**NOTE:** To sync multiple Smoke X4 Receivers to one base, please follow the steps above on one Smoke X4 Receiver at a time. Putting Smoke X4 into Sync mode will not disable or interfere with previously synced Smoke X4 Receivers.

Go to [www.thermoworks.com/smokex4](http://www.thermoworks.com/smokex4) for additional product information and more tips for use.

[www.thermoworks.com](http://www.thermoworks.com)  
741 E. Utah Valley Dr.  
American Fork, UT 84003



For service or warranty:  
1-800-393-6434  
1-801-756-7705  
[techsupport@thermoworks.com](mailto:techsupport@thermoworks.com)