


Digital Kitchen Scale

Model No.: EK6212-S

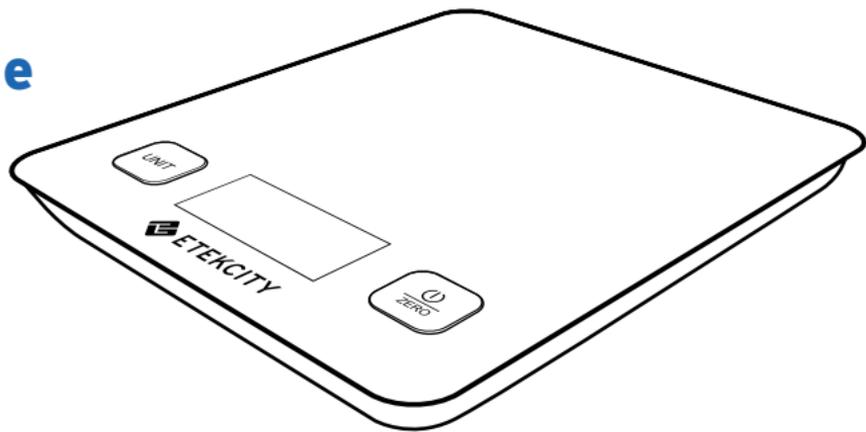

Thank You.

Thank you for purchasing the EK6212-S Digital Kitchen Scale by Etekcity. We are dedicated to providing our customers with quality products for building a better living. Should you have any questions or concerns about using your new product, feel free to reach out to our helpful customer support team at (855) 686-3835 or by email at support@etekcity.com. We hope you enjoy your new product!

Package Contents

1 x Digital Kitchen Scale
1 x Measuring Spoon
2 x 1.5V AAA batteries
1 x User Manual

Table of Contents

Safety Information	4
Main Functions	5
Set-Up	6
Operation	7
Weight Measurement	7
Volume Measurement	8
Tare Function	9
Maintenance	9
Specifications	10
Troubleshooting	11
Warranty	12
Customer Support	13

Safety Information

IMPORTANT: Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

- Always place the scale on a hard, dry, and flat surface before measurement in order to ensure accurate results.
- Dirt, dust, vibration, wind, air currents, and electromagnetic interference may contribute to inaccurate results.
- **DO NOT** exceed the 11 lb (5 kg) weight capacity; doing so may damage the scale. An overload indicator will appear on the LCD display if the limit is exceeded.
- Avoid exposing the device to damp environments or extreme temperatures.
- **DO NOT** immerse the scale in water or corrosive liquids. If a liquid is spilled on the digital display or buttons, immediately wipe the scale clean with a soft cloth in order to avoid potential internal


damage.

- When replacing batteries, make sure to insert them under the correct polarity as indicated within the battery compartment.
- If the low battery indicator is displayed, please replace the batteries.
- **DO NOT** mix new and used batteries to power the device.
- This scale is not intended for commercial or heavy-duty use.
- Handle the scale with care. Keep the scale in a cool, dry environment.
- If the scale fails to turn on, check if the batteries are installed correctly. Replace the batteries if necessary.
- If the scale is not in use for an extended period of time, remove the batteries to conserve battery life and extend the lifetime of the scale.

Main Functions


Function Diagram

1. Weighing Platform
2. LCD Display
3. Unit Button
4. Power/Zero Button
5. Anti-skid Padding
6. Battery Compartment

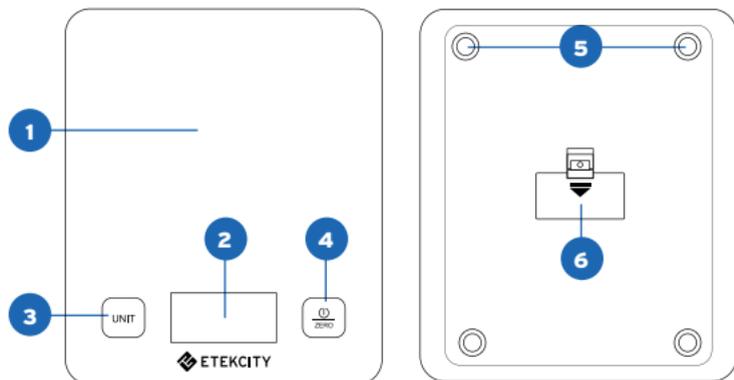

Digital Display


1. Weight Value
2. Tare Mode
3. Zero Weight
4. Negative Weight Value
5. Mode
6. Measurement Unit

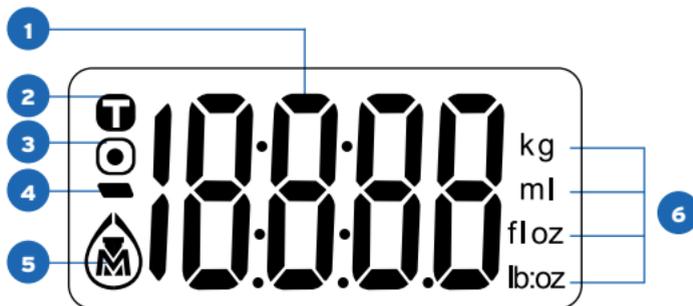

Icon	Mode	Units	Use
	Weight Mode	lb:oz / g	Measures the weight of food and solid objects.
	Milk Volume	fl'oz / ml	Measures the volume of milk and other liquids with similar densities.
	Water Volume	fl'oz / ml	Measures the volume of water and other similar liquids.


Set-Up

1. Open the battery compartment on the underside of the scale.
2. Insert the included AAA batteries, making sure they are under the correct polarity. Place the battery cover back on.
3. Press the **'Power/Zero'** button to turn on the scale.

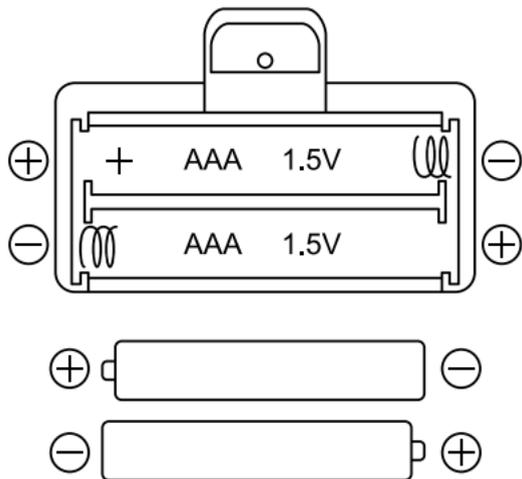

Unit Conversion

Your new kitchen scale's default measurement units are metric units (ml, g, kg). To switch the scale to imperial units (lb:oz, fl'oz.), simply press and hold the **'Unit'** button for 3 seconds.

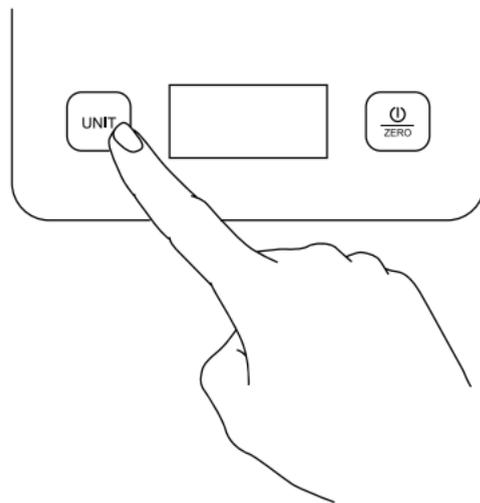


Press and hold the 'Unit' button for 3 seconds.

Operation

Weight Measurement Mode


1. Place the scale on a flat, dry surface.
2. Press **'Power/Zero'** to turn on the scale.

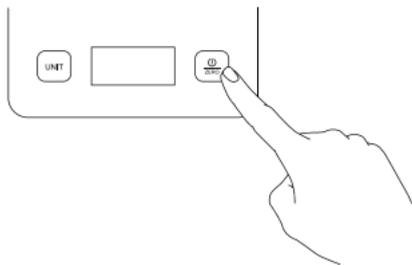


3. Press **'UNIT'** to select your desired measuring unit. Allow the scale to read zero before measuring.



4. Gently place your object on the scale. The LCD display will automatically display the object's

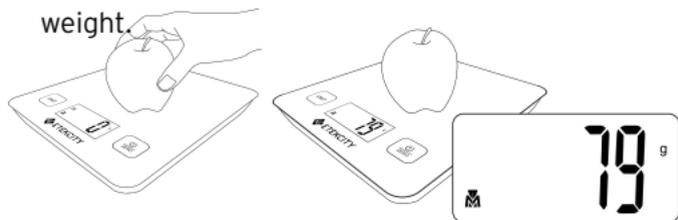

5. Press and hold **'Power/Zero'** for 3 seconds to turn off the scale.

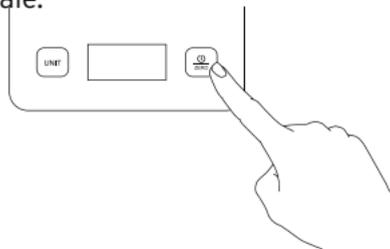


NOTE: The scale will automatically turn off after 2 minutes of inactivity.

Volume Measurement Mode

Place the scale on a flat, level surface, then press the power button to turn it on.


1. Press the **'Unit'** button to select either the milk or water volume measurement mode.
2. The scale will display "0" when ready.

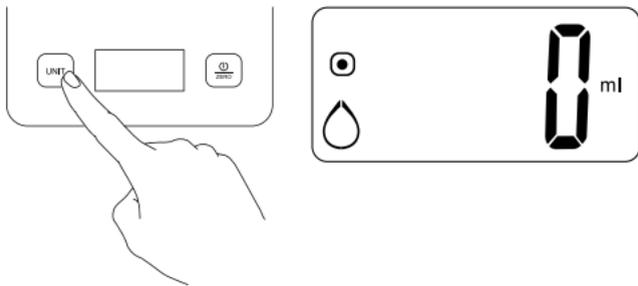

3. Place an empty container onto the platform. The screen will display the container weight.



4. Press the **'Power/Zero'** button to tare the weight of the container.

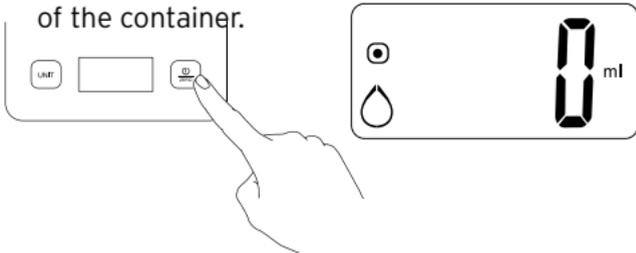

5. Once the screen displays "0" pour the liquid into the container. The LCD screen will automatically display the final volume.



NOTE: To reset, remove all weight from the platform and press the **'Power/Zero'** button.


Tare Function

The tare function allows you to measure objects in a container without having to include the container's weight in the final measurement.


1. Place the scale on a flat, dry surface.
2. Power on the scale and wait for the display to read zero.



3. Place an empty container on the scale and press **'Power/Zero.'** The display will now show zero.

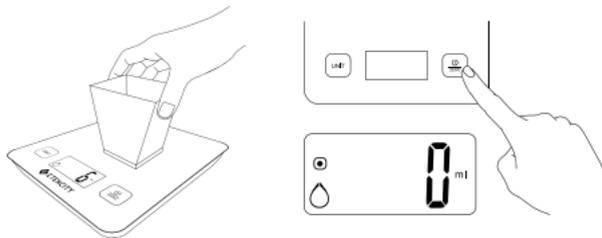

4. Place objects in the container, and the display will show weight of the items.

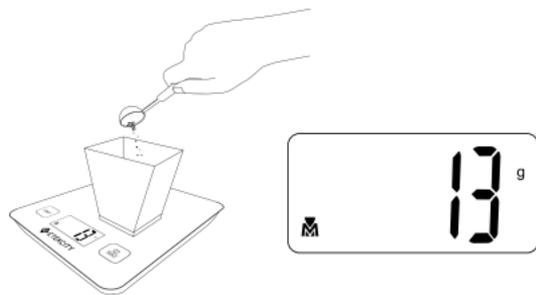

5. Take the container off the platform when you have finished weighing your items. Press **'Power/Zero'** once to reset the scale.

Maintenance

Use a slightly damp cloth to clean the surface of the scale, followed by a dry soft cloth to wipe away the remaining moisture. You can also use a dry soft cloth to wipe off any dust that may be on the scale. Be sure not to wash the device or immerse it in water or any other liquids.

Specifications

Weight Capacity:	11 lb / 5 kg
Units:	lb:oz / fl'oz. / g / ml
Division Value:	0.1 oz / 1 g
Auto-Off:	120 seconds
Power:	2 x 1.5V AAA batteries
Dimensions:	8.5" x 7.3" x 0.6" (217mm x 187mm x 16mm)

Troubleshooting

Problem	Cause	Solution
LCD display is dim or shows "Lo."	Not enough power.	Replace batteries.
Device does not turn on.	Batteries are no longer good.	Replace batteries.
	Batteries not inserted correctly.	Insert batteries under the correct polarity as marked on battery compartment.
Display shows "Err."	Scale is placed on an uneven surface.	Place scale on a flat, stable surface.
	Scale needs to be reset.	Remove the batteries, wait 10 seconds, then replace the batteries.
	Weight exceeds 11 lbs (5kg).	Promptly remove object from scale to protect its sensors. Use a different scale with a higher weight range.
	Objects exceeding 1000 g are on top of scale before it is turned on.	Remove objects from scale; wait until display reads zero before weighing.
	Weight is unstable during measurement.	Keep weight stable on the measuring platform.

Warranty

Terms & Policy

Etekcity warrants all products to be of the highest quality in material, craftsmanship and service for a minimum of 1 year, effective from the date of purchase. Warranty lengths may vary between product categories. For specific warranty terms, please refer to your product's listing page or operation manual.

Under the limited warranty, Etekcity will replace or refund any product found to be defective due to manufacturer flaws based on eligibility. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcity is not responsible in any way for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

Etekcity and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed above and in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF

THE LIMITED WARRANTY.

Should your product prove defective within the specified warranty period, please return the defective unit in its original packaging with (1) an original copy of the invoice, (2) your order confirmation number, (3) and your warranty ID number.

Exceptions and Exclusions

- Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Date of Purchase	
Place of Purchase	
Order Number	

Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is ours!

Customer Support

Etekcite Corporation
1202 N. Miller St. Suite A
Anaheim, CA 92806

Toll-Free: (855) 686-3835
Fax: (657) 202-1693
Local: (657) 500-1872

Email: support@etekcity.com

Support Hours

Monday - Friday:
9:00 am - 5:00 pm PST

*Please have your order confirmation number ready before contacting customer support.



Scan here to join the community!
Visit us at **www.etekcity.com**