


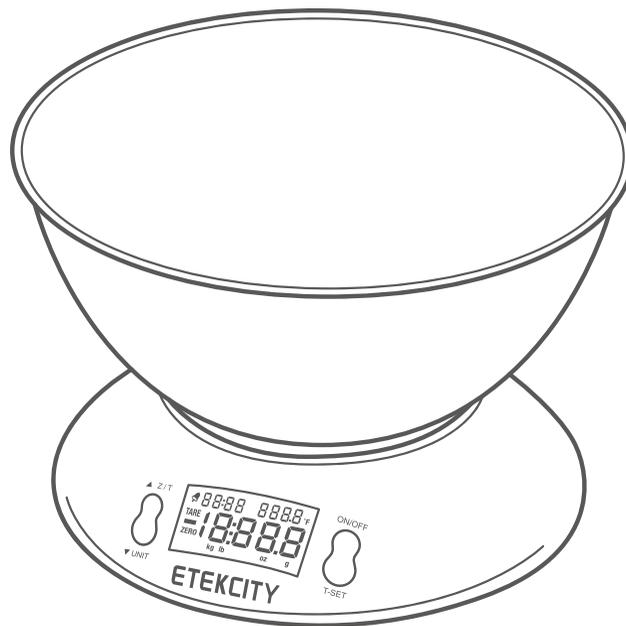

Stainless Steel Digital Kitchen Scale

Model: EK4150 Series

User Manual



Thank you for purchasing the
Stainless Steel Digital Kitchen Scale
by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at [**support@etekcity.com**](mailto:support@etekcity.com).
We hope you enjoy your new digital kitchen scale!

Table of Contents

Package Contents	3
Specifications	3
Safety Information	4
Function Diagram	5
Digital Display	6
Setup	6
Operation	7
• Tips	7
• General Operation	7
• Zero / Tare Function	8
• Timer Function	9
Battery Replacement	9
Troubleshooting	10
Warranty Information	11
Customer Support	13

Package Contents

1 x Stainless Steel Digital Kitchen Scale
1 x Stainless Steel Bowl
2 x 1.5V AAA Batteries
1 x User Manual

Specifications

Weight Capacity	176 oz / 11 lb / 5000 g / 5 kg
Bowl Capacity	2.06 qt / 1.96 L
Increments	1 lb / 0.1 oz / 1 kg / 1 g / 0.5°F
Weight Units	oz / lb / g / kg
Temperature Range	32°-104°F / 0°-40°C
Timer	99 minutes, 59 seconds
Battery	2 x 1.5V AAA batteries
Auto-Off	2 minutes
Material	Stainless steel

Important Safety Information

To avoid damage to this scale, please read and follow all instructions and safety guidelines in this manual.


Scale

- **Always** place the scale on a hard, dry, and flat surface before measurement in order to ensure accuracy.
- **Do not** exceed the 176 oz / 11 lb / 5000 g / 5 kg weight capacity as it will damage the scale. An error indicator will appear on the LCD display if the limit is exceeded.
- **Do not** immerse the scale in water or any liquid. If liquid is spilled on the digital display or buttons, immediately wipe the scale dry with a soft cloth to avoid internal damage.
- Handle with care. This scale is not intended for commercial or heavy-duty use.
- Keep the scale in a cool, dry place. Avoid exposure to damp environments or extreme temperatures.
- Household use **only**.

Batteries


- **Do not** mix new and old batteries.
- If the low battery indicator (“Lo”) appears on the display, replace the batteries.
- If the scale is not in use for an extended period of time, remove the batteries to conserve battery life and extend the lifetime of the scale.

Function Diagram

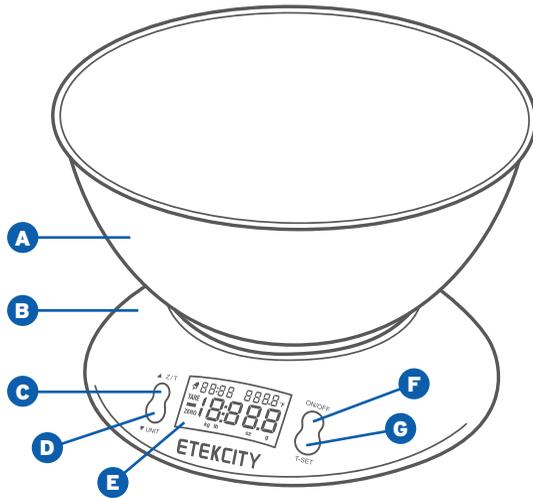


- A.** Stainless Steel Bowl
- B.** Digital Scale
- C.** Tare / Increase Timer
- D.** Unit Selection / Decrease Timer

Bottom

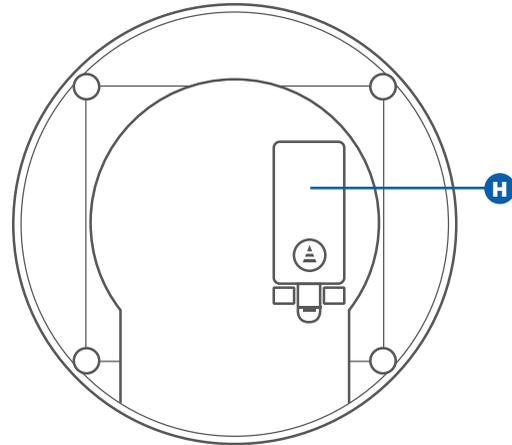

- E.** Digital Display
- F.** On/Off
- G.** Set Timer
- H.** Battery Compartment

Digital Display

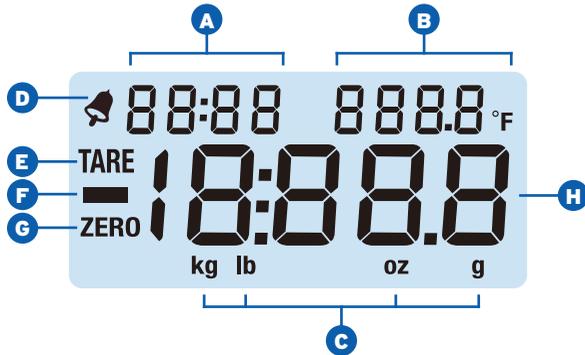

- A. Timer
- B. Temperature
- C. Measurement Unit
- D. Timer Set
- E. Tare Function
- F. Negative Weight Value
- G. Zero Function
- H. Weight Measurement

Setup

1. Open the battery compartment on the underside of the scale.
2. Remove the insulation strip. [Figure 1.1]
3. Replace the battery cover.
4. Press the **ON/OFF** button to turn on the scale.

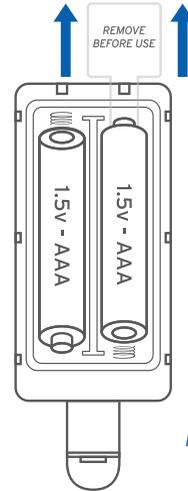


Figure 1.1

Operation

Tips

- For accurate results, always place the scale on a hard, dry, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the tare function, always wait for the scale to read "0.0" before measuring.

Note: *The scale will automatically shut off after 2 minutes of inactivity.*

General Operation

1. Place the scale on a hard, flat, level surface for measurement.
2. Press **ON/OFF** to turn on the scale. Make sure the display shows "0". Press **▼ UNIT** to select your desired measuring unit.
3. Place your item on the scale.
4. Wait for the reading on the display to stabilize.

Note:

- *If you're using the bowl or another container to hold the items or liquid you're measuring, first place the empty container on the scale. Press **▲ Z / T** to tare the container's weight (see **Tare Function**, page 8).*
- *To reset the scale, remove all weight from the platform and press **▲ Z / T**.*

Zero / Tare Function

Whenever you measure liquid or other items inside the included bowl, you can use the tare function to remove the bowl's weight from the final measurement. You can also use other containers in place of the bowl.

1. Place the bowl on the scale. The display will show the bowl's weight.
2. Press **▲ Z / T**. The display will show "0" again. [\[Figure 2.1\]](#)
3. Place liquid or items in the bowl. The scale will measure the liquid or items without including the weight of the bowl. [\[Figure 2.2\]](#)
4. When you're done, reset the scale by removing all weight and pressing **▲ Z / T** again.

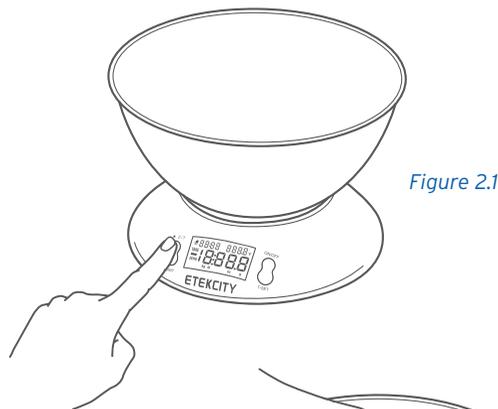


Figure 2.1

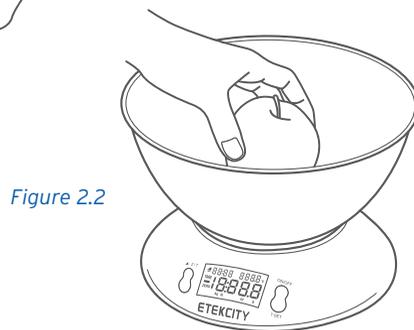


Figure 2.2


Timer Function

1. Press **T-SET**.
2. You will be prompted to set the minutes, then set the seconds. Set the numbers from left to right, using **▲ Z / T** to increase and **▼ UNIT** to decrease values.
Example: To set the timer for 15:30 (15 minutes and 30 seconds), set the first number to "1" then press **T-SET**, set the second number to "5", set the third number to "3", and set the fourth number to "0".
3. Press **T-SET** again to confirm and start the timer.
4. When the timer counts down to "00:00", the digital scale will sound an alarm for 70 seconds. Press any button to stop the alarm.
5. To stop the timer at any time, press the **T-SET** button.

Note: The maximum amount of time you can set the timer for is 99 minutes and 59 seconds.

Battery Replacement

1. Open the battery compartment on the underside of the scale.
2. Take out the old batteries and replace them with new 1.5V AAA batteries.
3. Replace the battery compartment cover.

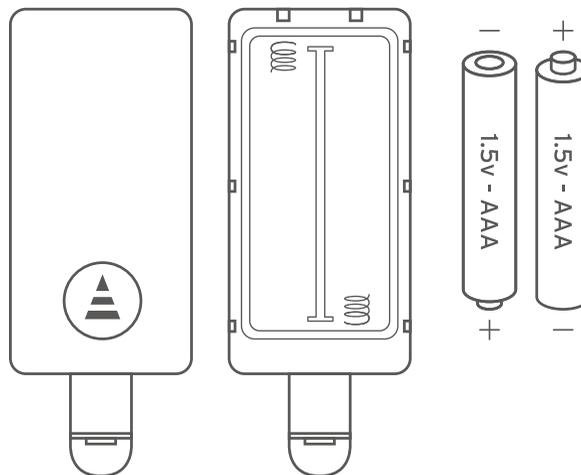

Troubleshooting

Problem	Possible Cause	Solution
Scale does not turn on.	Plastic strip is still in the battery compartment.	Open the battery compartment cover and remove the plastic strip.
	Batteries are dead.	Replace the batteries. See Battery Replacement (page 9).
	Batteries are not properly installed.	Insert batteries under the correct polarity as marked in battery compartment.
Display shows "Err".	Weight exceeds 11 lb / 5000 g.	Remove item from scale to protect its weight sensors. Use a different scale with a higher weight range.
Reading is inaccurate.	Scale is not on a level surface.	Place scale on a level surface.
	Scale was not tared correctly.	Reset the scale's tare measurement, making sure it shows "0.0" before measuring (see Zero / Tare Function , page 8).
	Scale needs to be reset.	Remove the batteries for 45 seconds, then replace them to reset the scale.

Warranty Information

Product Name	Digital Kitchen Scale
Model Number	EK4150 Series
Default Warranty Period	2 years
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

Terms & Policy

Etekciti Corporation (“Etekciti”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekciti agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekciti;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Etekciti will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcity's warranty extends only to products purchased from authorized sellers that are subject to Etekcity's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@etekcity.com. DO NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcity product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.etekcity.com/warranty.

This warranty is made by:

Etekcity Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Customer Support

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team.

Customer Support

Etekcite Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Toll Free: (855) 686-3835
Email: support@etekcity.com

Support Hours

Monday-Friday
9:00 am-5:00 pm PST/PDT



Connect with us @Etekcity





AU1019CC-M1_1019EK4150-R19_21H10_us