

Care & Maintenance

- Do not immerse the scale in water or use chemical detergents to clean the scale.
- Use a damp cloth to wipe the scale clean.
- Do not place stress on the triangle ring when not using the scale.

Replacing the Batteries

When the display reads “LO”, battery power is low. Replace the battery.

1. Turn the scale over and open the battery compartment.
2. Remove the used battery and replace it with 1 new 3V CR2032 battery. Make sure the + side of the battery is facing up.
3. Replace the battery compartment cover.



Warranty Information

Product	Digital Luggage Scale
Model	EL19
Default Warranty Period	2 years
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Order ID	
Date of Purchase	

TERMS & POLICY

Etekcity Corporation (“Etekcity”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcity agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcity;
- To damages or defects occurring during commercial use, rental use, or any use for

- which the product is not intended;
- To damages or defects exceeding the cost of the product.

Etekcity will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcity's warranty extends only to products purchased from authorized sellers that are subject to Etekcity's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@etekcity.com. DO NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcity product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.etekcity.com/warranty.

This warranty is made by:

Etekcity Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

Customer Support


If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcity Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806

SUPPORT HOURS
Mon-Fri, 9:00 am-5:00 pm PST/PDT

Email: support@etekcity.com
Toll-Free: (855) 686-3835

*Please have your order invoice and order ID ready before contacting Customer Support.

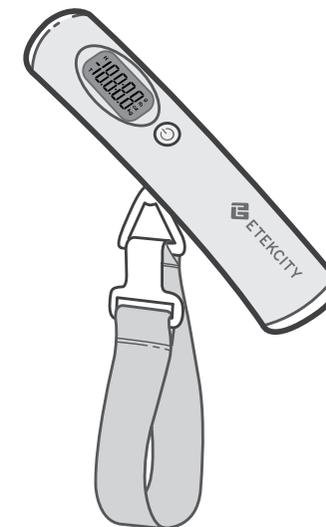

Digital Luggage Scale

Model: EL19

User Manual

Package Contents

1 x Digital Luggage Scale
1 x 3VCR2032 Battery (Pre-Installed)
1 x User Manual

Specifications

Weight Capacity	110 lb / 50 kg
Units	oz / kg / g / lb
Graduation	0.35 oz / 10 g
Battery	1 x 3V CR2032 Battery (Lithium)
Dimensions	5.7 x 1.4 x 1.2 in / 145 x 35 x 30 mm
Auto-Off	60 seconds

Important Safety Information


Follow all instructions and safety guidelines. Read all instructions before using.

- Do not exceed 110 lb / 50 kg, including the tared weight of the container. The display will read "Err" if the weight exceeds the limit.
- This scale is not intended for commercial or heavy-duty use. Household use only.
- Do not throw or strike the scale and do not submerge the scale in water.

SAVE THESE INSTRUCTIONS

Function Diagram

- A. Display
- B. Power Button
- C. Scale Body
- D. Battery Compartment
- E. Triangle Ring
- F. Belt
- G. Hook

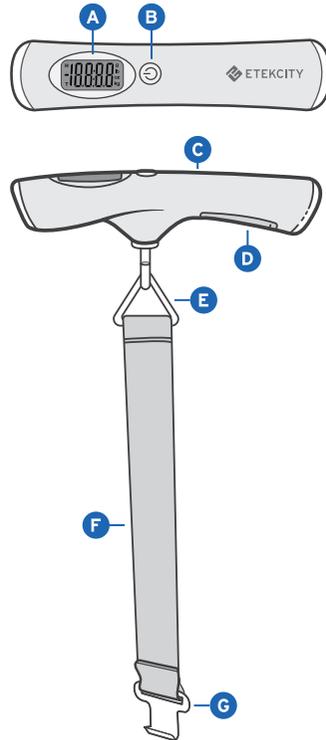

Before First Use

1. Open the battery cover. If necessary, use a tool to open.
2. Remove the insulation strip from the battery. [Figure 1.1]
3. When replacing the battery, make sure the + side of the battery is facing up. [Figure 1.2]
4. Replace the battery cover.

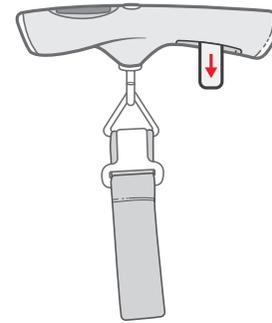


Figure 1.1



Figure 1.2

General Operation

Weight Measurement

1. Press  to turn on the scale. Wait for "0.00" to appear on the display.



2. Wrap the belt around the handle of your luggage and place the hook on the bottom of the triangle ring.
3. Lift the luggage with the scale and hold still until the weight measurement stabilizes. The display will show the weight and "H" (Data Hold).

Note: Do not move the scale during measurement.

4. To measure another item, remove the luggage and repeat steps 2 and 3.
5. Press and hold  for 3 seconds to turn the scale off.

Data Hold Function

Once the weight has stabilized and "H" appears on the display, the weight will stay on the screen for 60 seconds, or until you measure another object. You can also press  to reset the display.

Unit Conversion

1. Press  to turn the scale on.
2. Before the display reads "0.00", press  repeatedly to switch between grams (g), pounds (lb), ounces (oz), and kilograms (kg).

Tare Function

You can use the Tare function to weigh an object inside a container by subtracting the weight of the container from the total weight.

1. Press  to turn on the scale. Make sure the display reads "0.00".
2. Wrap the belt around the handle of the container and place the hook on the bottom of the triangle ring. Allow the weight to stabilize until "H" appears on the display.
3. Hold the scale stable and press  to tare. The display will show "T".
4. Place the item you want to weigh inside the container. The scale will measure the contents without including the weight of the container.