


KS129 Deluxe Keyboard Stand Instructions

Your keyboard stand is pre-assembled and can be easily adjusted to five different height settings.

To use, simply pull out and hold the quick-release knob (1) which will disengage the lock pin, open out the stand (2) to the desired position and engage (release) the lock pin (3) in to one of the five pre-set positioning holes.

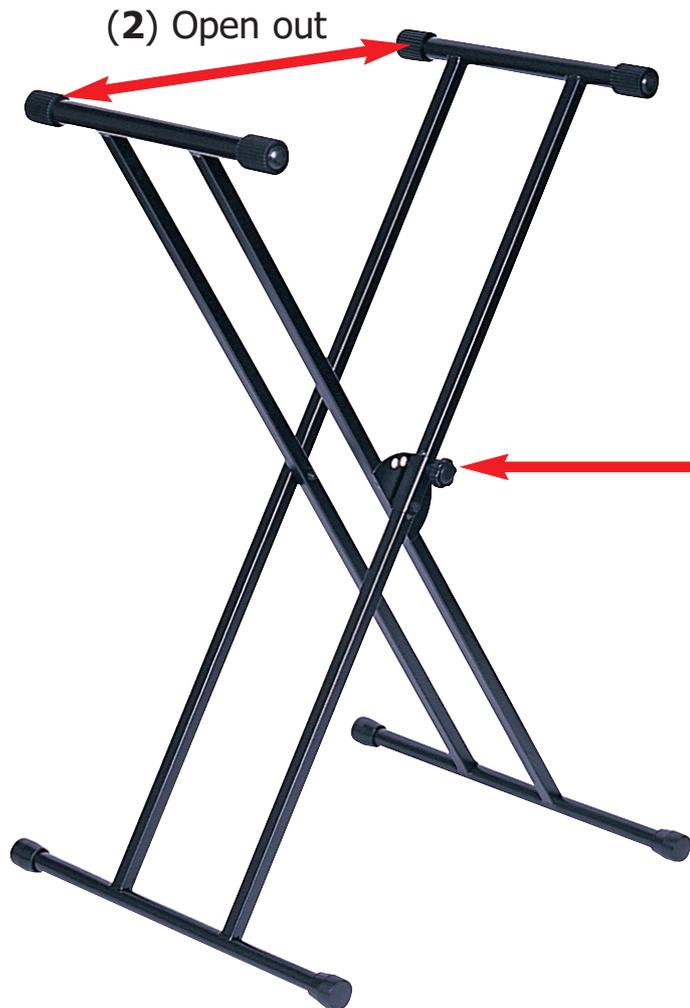

- (1) Pull out and hold the quick release knob
- (3) Release the quick release knob

Height Guide		
Hole Position	Height	Width
1	98cm	28cm
2	83cm	40cm
3	87cm	56cm
4	78cm	66cm
5	68cm	77cm

The stand will fold flat for storage and transportation. Pull out and hold the quick-release knob and fold the stand flat. Release the knob.

Note:

The most suitable width of the KS129 for larger keyboards (such as Yamaha PSR175-K, E203-K, E303-K, EZ150-K, DGX505-K, PSR295-K & DGX205-K) is 56cm - 77cm, that is the 3rd to 5th position of the height adjustment.

MAXIMUM WEIGHT CAPACITY: 60Kgs



www.jhs.co.uk

WORLDWIDE TRADE DISTRIBUTORS: JOHN HORNBY SKEWES & CO. LTD SALEM HOUSE, PARKINSON APPROACH, GARFORTH, LEEDS LS25 2HR, U.K.