




### WISH YOU EVERY SUCCESS WITH YOUR NEW DRUM KIT ...


This leaflet is intended as a guide to assembling, tuning and positioning your Drum Kit.


## HOW TO ASSEMBLE THE DRUM KIT

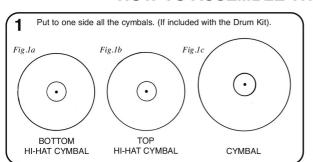


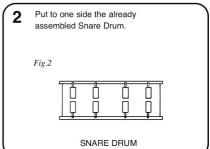


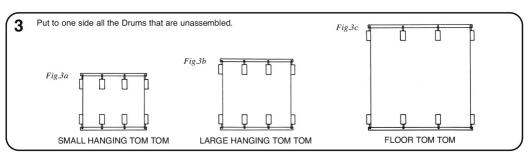

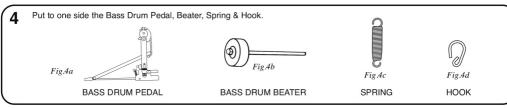

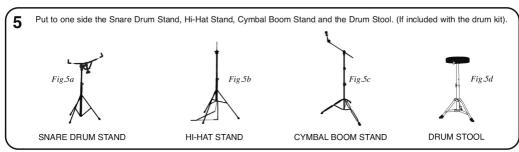

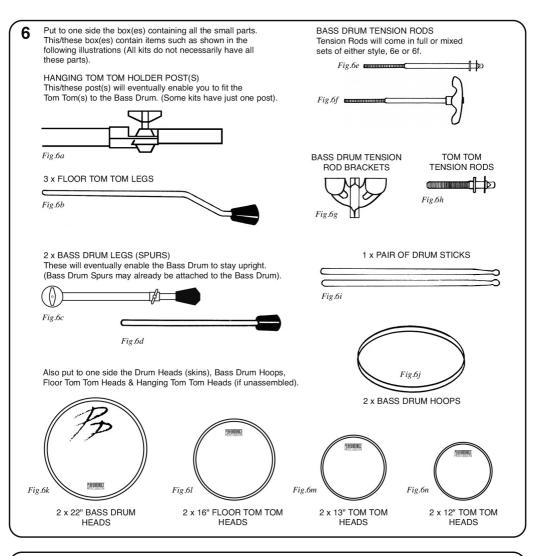

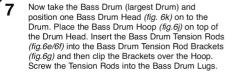


DO NOT FULLY TIGHTEN. See 26 for tuning information.

To enable you to tighten the Tension Rods a Drum Key has been provided.


Now repeat on the other side of the Bass Drum.

NOTE: The edge of the Drum closest to the spurs is the front of the Bass Drum. The Drum Head with the Performance Percussion logo is the front head (Usually black with a white logo).

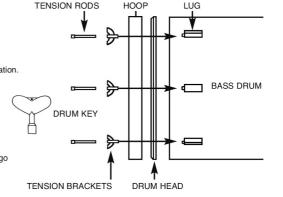

Now take the two Bass Drum Legs (fig.6c/6d) and fit these into the Bass Drum Leg Brackets. (These will keep the Bass Drum upright and stable).

(Some drum kits have the Bass Drum Legs (Spurs) pre-fitted).

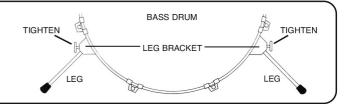


9 Now take the two 12" Tom Tom Heads (fig.6n) and fit them on to the Small Hanging Tom Tom (fig.3a), take the two 13" Heads (fig.6m) and fit them to the Large Hanging Tom Tom (fig.3b) using the Tom Tom Tension Rods (fig.6h).

#### DO NOT FULLY TIGHTEN.


NOTE: Tom Tom Hoops are sometimes attached to the Tom Tom Drums by 2 or 3 Tension Rods for transportation purposes only. Remove the hoops completely before fitting the Drum Heads.

To enable you to tighten the Tension Rods a Drum Key has been provided.

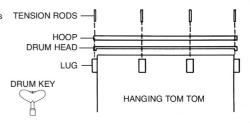

10 Now take the assembled Bass Drum and fit the Hanging Tom Tom Holder(s) (fig.6a) into the Holder bracket on top of the Bass Drum.


(Some drum kits only have one Tom Tom Holder Post)

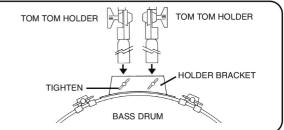

11 Now take the Hanging Tom Tom(s) (fig.3a & fig.3b) and attach these to the Hanging Tom Tom Holders or Holder and tighten the wingnut.

NOTE: Some Tom Toms may arrive without the Drum Heads fitted. If so, follow the instructions 9.

Some drum kits have slot-on holders. Slide on the Tom Tom(s) using the bracket(s) provided on the side of the drum(s).

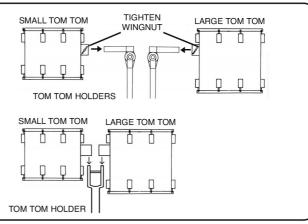

**12** Now take the Hook (fig.4d) and fit it to the Spring (fig.4c).




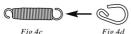


Fig.4c Fig.4d


SPRING HOOK

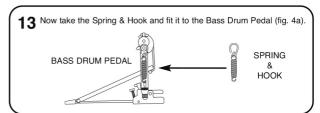


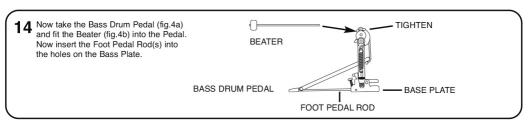


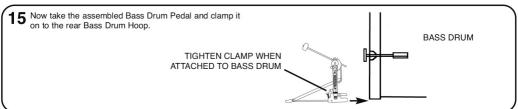



16 Now take the two Floor Tom Tom Heads (fig.6I) and fit them on to the Floor Tom Tom (fig.3c) using the Tom Tom Tom Sods (fig.6h). This procedure is the same as fitting the Hanging Tom Tom Heads therefore please see 9 and follow the instructions.

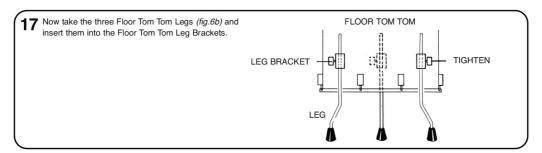


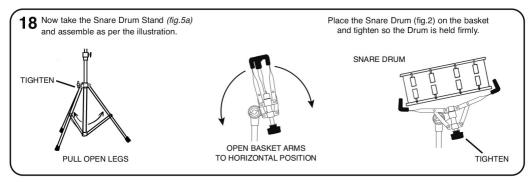


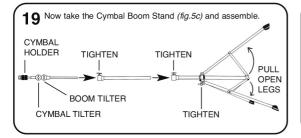


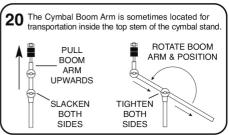

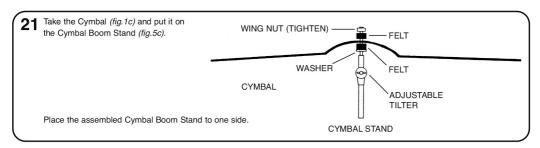

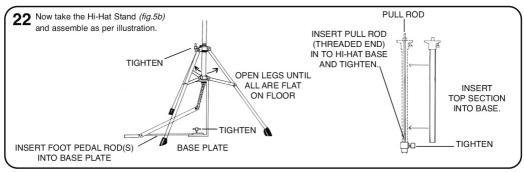

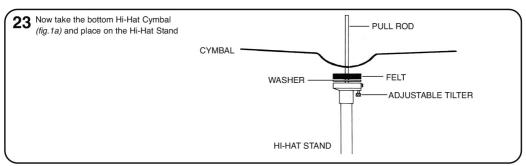

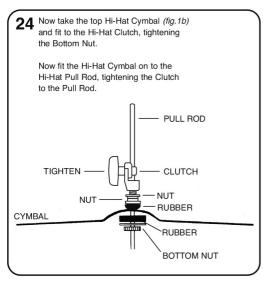




## **26** TUNING YOUR DRUMS

By now you will have already put all the Drum Heads on to each Drum. The next step is to tune each individual Drum in the following method.

THE METHOD OF TUNING. (except Snare Drum)

- 1 Tune your Drums in order of size. From the smallest to the largest (with the exception of the Snare Drum) so the pitch of each Drum gets lower as the Drum gets larger.
- 2 Tune the bottom head first. Tighten all the Tension Rods with your fingers until they begin to bite.
  Then take the Drum Tension Key and apply a three quarter turn to each Tension Rod in the following diametrical order:

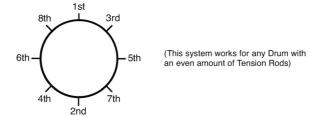


Repeat the procedure until the Drum Head is fairly tight and in-tune. You can check this by tapping the Drum Head about an inch in from the hoop. If it is in-tune the note will remain the same all round the Drum.

- 3 Repeat No.1 for the top Drum Head. When the Drum is in-tune you will then be able to slightly lower or higher the pitch of the Drum by turning each Tension Rod a quarter of a turn.
- 4 The Snare Drum. This Drum is tuned in the same way as the other Drums, but with the Snare action lowered. When tuned, raise the snare action and adjust the snares tension across the bottom head by turning the fine tuning knob located above the snare action lever.

NOTE: If the top Drum Head is slack it will produce a dead, flat sound, while a tight head will sound crisp and bright.

If the bottom head is slack it will create less Snare buzz with a deeper tone. A tight bottom head produces a crisp, brittle sound.

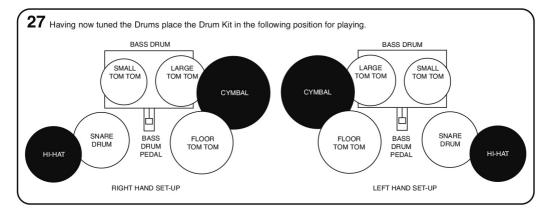

# **DRUM KIT HELPLINE: 0113 232 0082**

