


KAM

KML203 / KML205 / KML301

iLINK Laser Lights

IMPORTANT

This Laser Light will not operate unless BOTH the Remote and Lock Keys are installed.

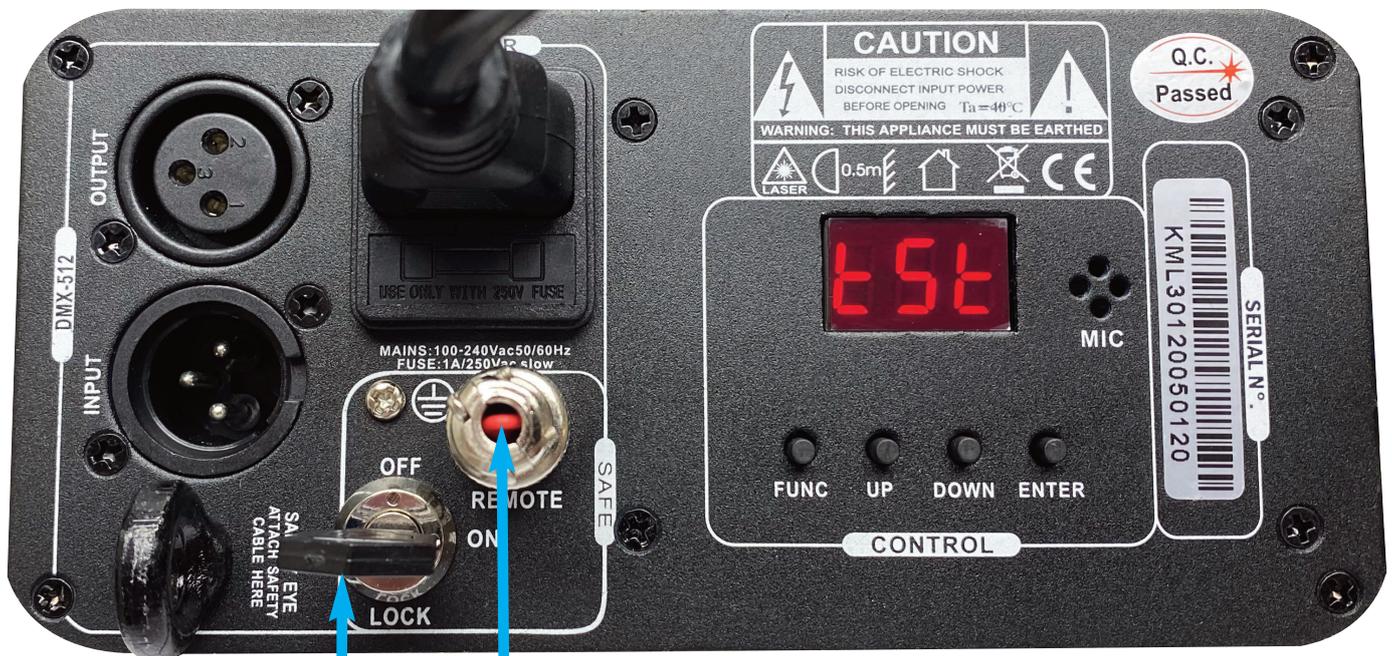

A Remote Key

B Lock Key

1. Connect power cable to Laser Light.
2. Connect power cable plug in to a mains socket.
3. Make sure the Remote Key (A) is installed.
4. Make sure the Lock Key (B) is installed.
5. Turn power on at mains socket.
6. Turn the Lock Key from the OFF position to ON.

The Laser Light will now function.