



CREATE THE BEST WATER YOU CAN

INSTALLATION INSTRUCTION




ULTRAPURE ARAGON 10" TRIPLE UNDER SINK WATER FILTER SYSTEM WITH FLUORIDE REMOVAL & SEDIMENT PROTECTION

Thank You for trusting us with your Water Filtration needs.
Please read and follow the steps below on setting up your Product.

Ensure you check you have received ALL the correct components before you call & arrange the plumber or any installation just in the unexpected case that you have a missing part.

If you need any help, please call us at **1800-769-300** or contact us through our website at www.mywaterfilter.com.au/contacts/ or email us at customerservice@mywaterfilter.com.au

PARTS

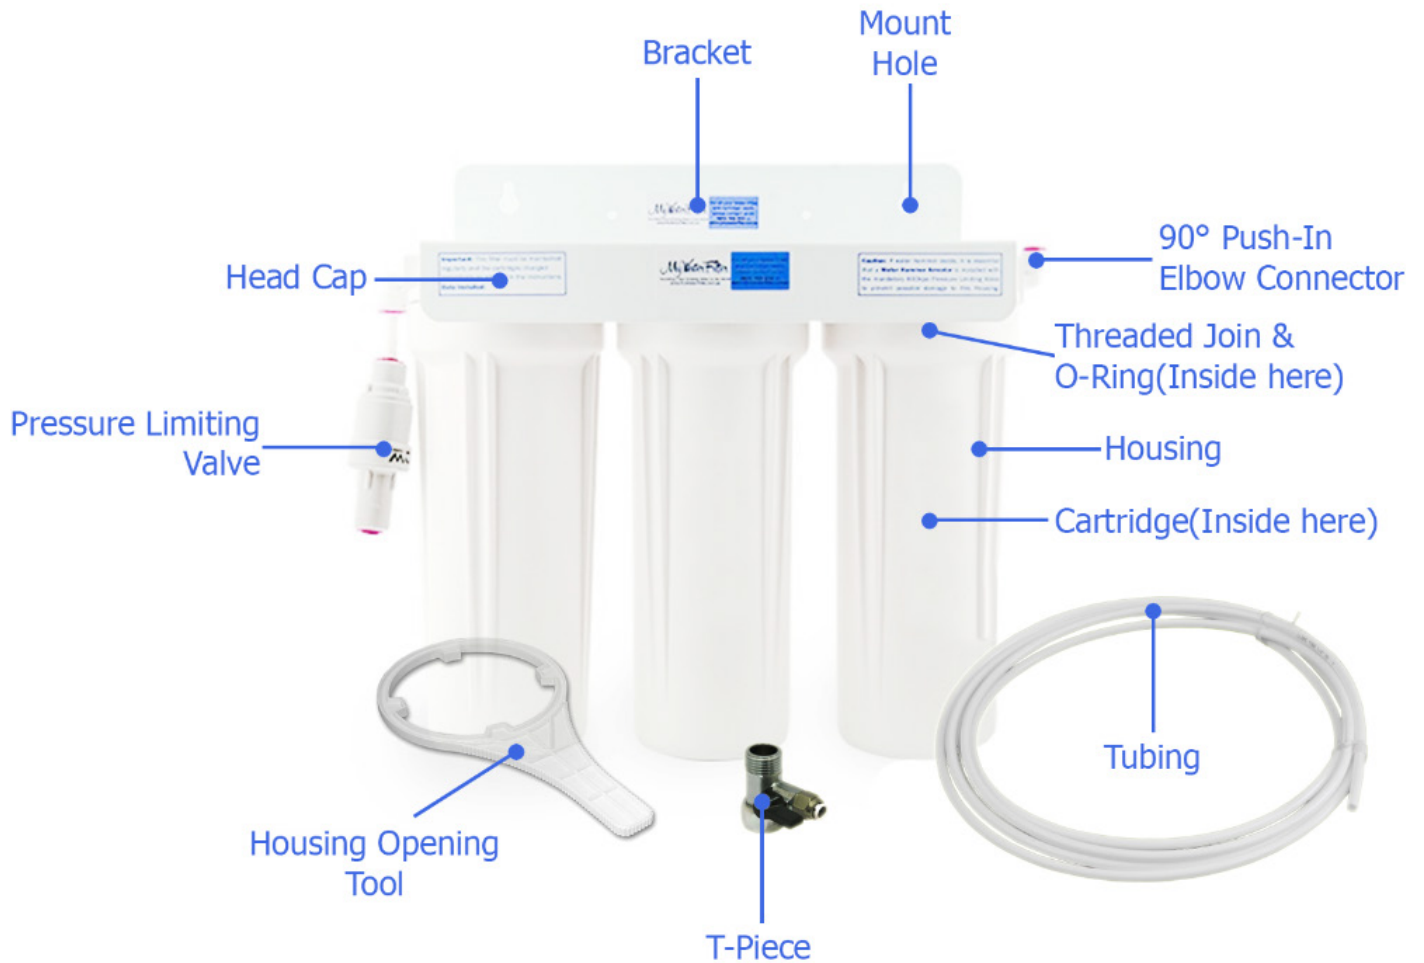

FAUCET PARTS



Escutcheon Plate



Escutcheon Plate Rubber Washer



Locating Rubber Washer



Lock Star Washer



Lock Nut



Quick Connect Faucet Adaptor

BEFORE YOU START

Things you will need:

- ✓ Plumber
- ✓ Electric Drill
- ✓ Thread Tape
- ✓ Spanners
- ✓ Sharp Knife
- ✓ Screwdriver

3 Easy Steps to Install:

1. Install system
2. Install faucet
3. Flush system & cartridges - Now Ready to use.

NOTE: DO NOT FLOW ANY WATER THROUGH THE SYSTEM OR THE CARTRIDGES UNTIL THE CORRECT STEP 3. FLUSHING PROCEDURE HAS BEEN DONE.

1


Take some time to clear any items out of the way to ensure you have a safe, clear area to install the water filter. Ensure there are no trip hazards or anything that can create harm in the work area.

2

Unpack and check that you have received your product in good condition. If it has been damaged in transit, please do not attempt to install or assemble the unit. Alert us immediately or as soon as possible, so we can provide the necessary assistance.

INSTALLATION DIAGRAM

SAME FOR SINGLE, TWIN OR TRIPLE WATER FILTERS

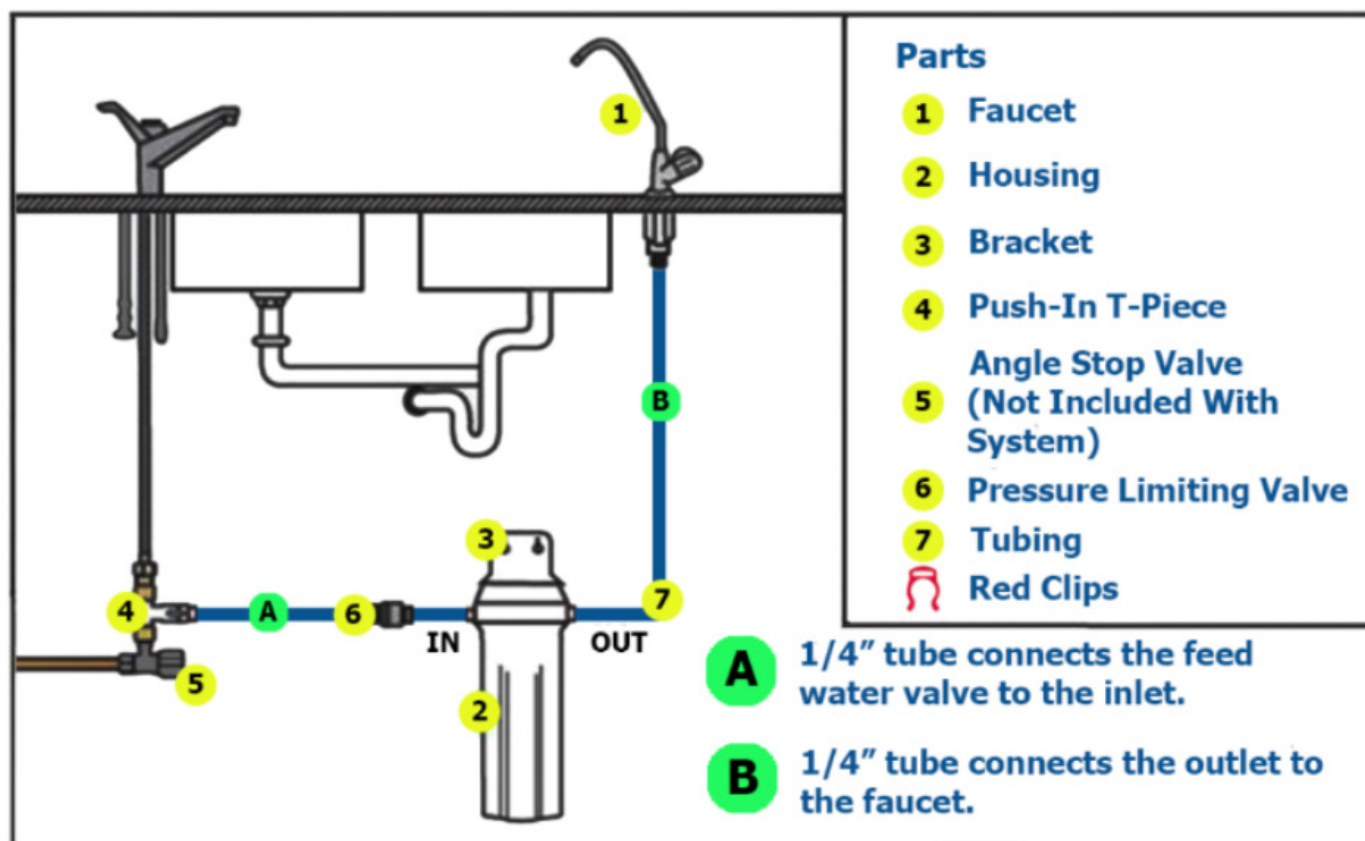

1. EASY INSTALLATION GUIDE

HOW TO INSTALL A TRIPLE UNDER SINK WATER FILTER

INSTALLATION GUIDE




CLICK HERE TO WATCH THE VIDEO



1. Get a towel and put it inside the cupboard. This will help to absorb water in case there's spillage or leaks while working.
2. Turn off the cold water supply via the angle stop valve under the sink or at the water metre out the front of the property.
3. Turn on the sink tap to drain water & release any pressure, then disconnect the braided flexible hose from the water source using a spanner by turning counter-clockwise.
4. Clean and remove any remaining thread tape from the male thread end of the water supply connection.

5. Wrap some thread tape around the male thread of the connector, then screw on the provided t-piece connector by turning clockwise via the swivel female end. Use a spanner to tighten. Make sure that the push-in hose end is facing the location where the under sink water filter unit will be mounted. Apply thread tape to the male end connector of the t-piece then screw on the braided flexible hose via the swivel end female connector of the hose. (See diagram below)

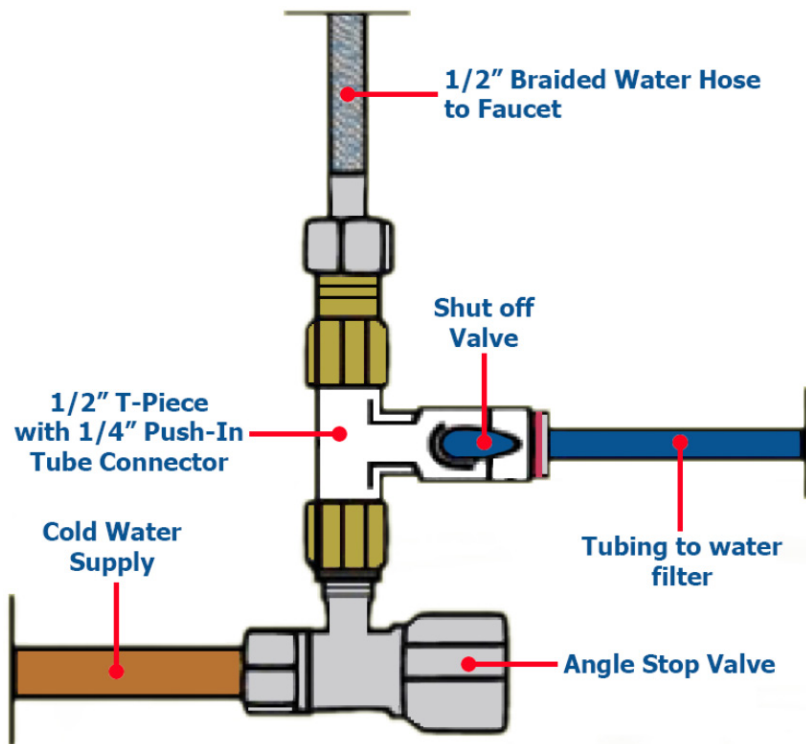

6. Place the water filter into position (Ensure you have a minimum of 30mm of space under the water filter housing so you are able to remove the housings to replace the cartridges when required) Drill 2 x holes in accordance with the mounting holes of the under sink bracket. Screw the mounting screws into the holes, then mount the under sink water filter onto the screws, tighten as required.
7. Push the water hose into the push-in connector of the t-piece, then cut the water hose to length & insert the cut end of the hose into the PLV, then the PLV connects via water hose into the inlet side of the water filter.

Use the remaining hose to push into the outflowing side of the water filter ready to connect onto the faucet. Push on a red clip at each connection if supplied. (Please note this system can be installed without red clips if required).

2. HOW TO INSTALL THE UNDER SINK FAUCET

1. Before you start, take some time to ensure there are no hazards or electricity that can harm you.
2. Ensure you are competent, otherwise, ask for assistance from a qualified person.
3. Select the best position where you would like to install your drinking water faucet on your sink or bench top.
4. Once the best position is determined BEFORE YOU DRILL make sure you are able to locate the thread of the faucet under the sink to tighten the nut once the faucet hole has been drilled and the faucet is pushed through the hole. Ensure you are able to fill your kettle & other home appliances you use under the selected faucet position.
5. Stick a piece of 1cm x 1cm tape over where you are going to drill your hole for your faucet. This will secure your drill bit so it does not move around on the smooth steel sink or benchtop and create any damage.
6. Use a centre punch or pointed object to mark a spot where to drill if drilling into steel.
7. Drill a pilot hole through the steel sink or benchtop using a small drill bit around a 3mm to 5mm. Then drill a 12 millimetre hole through the pilot hole big enough for the faucet shaft to fit through. (If drilling a stone bench top get a competent person)



8. Insert the escutcheon plate of the faucet onto the faucet shaft, then the escutcheon rubber washer.
9. Insert the faucet shaft through the newly drilled hole. Once the faucet is in the hole, insert the rubber washer onto the faucet shaft from under the sink, then the lock washer, then screw on the lock nut provided.



10. Tighten the faucet holding nut. Connect the water hose with the connection supplied, the most common connector used nowadays is a simple push-on connector. If you are connecting your water hose using the old style ferrule connection, please find the instructions for that on the faucet box. Your water filter is now installed.

Please read the **How to Flush your ULTRAPURE Aragon 10" Triple Under Sink Water Filter System with Fluoride Removal & Sediment Protection** before you flow any water into your system and inspect for leaks at that time.

NOTE: DO NOT FLOW ANY WATER THROUGH THE SYSTEM OR THE CARTRIDGES UNTIL THE CORRECT STEP 3. FLUSHING PROCEDURE HAS BEEN DONE.

3. HOW TO FLUSH YOUR UNDER SINK WATER FILTER:



[CLICK HERE TO WATCH THE VIDEO](#) 

1. Connect your water filter as required. **DO NOT TURN ON THE WATER YET**

CARTRIDGE POSITIONS:

Sediment Removal Cartridge - position 1

Fluoride Removal Cartridge - position 2

Aragon Cartridge - position 3

2. Get the housing opening tool and open the 3 housings, remove any cartridge packaging if not already removed before installing each cartridge as below.
3. Ensure the Sediment Removal Cartridge is installed into position 1, the Fluoride Removal Cartridge is installed into position 2 and **NO** cartridge is installed into position 3.

4. Screw back on the three housings and tighten.
ENSURE NO CARTRIDGE is installed into position 3. Housing 3 must be empty before starting the flushing procedure.
5. Slowly turn on the water at the t-piece. The filter will start to fill with water. Keep the water flowing only flushing the cartridges in position 1 and position 2 for a minimum of 10 minutes.
NOTE: The Fluoride Removal Cartridge works very well at removing Fluoride from the water, however, this cartridge **MUST** be flushed for a minimum of 10 minutes.
6. After flushing the Sediment Removal Cartridge and Fluoride Removal Cartridge for 10 minutes turn off the water at the T-piece, leave the faucet open to release any pressure, remove the 3rd housing and install the Aragon Cartridge into housing position 3. No need to remove the cartridges in position 1 and position 2.
7. Turn on the water and flush all 3 cartridges at the same time for 5 minutes straight.
8. You can get a bucket to save the water being flushed for the plants if preferred.
9. Whilst the water is flowing, **adjust the incoming water T-piece into the correct position to ensure the water is flowing from your drinking water faucet at a maximum of 2.5 litres per minute for best filtration results**, your water filter is now ready for use.

NOTE: Cartridges with carbon inside can emit black water when first flushed. This will become clear quite quickly.

The slower we filter our water - the better water quality we create. If it interests you, for maximum performance & Fluoride removal, slow the flow rate right down to 1 litre per minute or even slower, you can even fill containers at this slow rate you can use the water from later on.

PLEASE READ: If the water filter is unused for 5 or more days turn it on and flow water through the filter for 2 minutes before use.

HOW TO CHANGE CARTRIDGES

1. Turn off the t-piece cold water supply valve under the sink.
2. Turn on the faucet. This will drain the remaining water & release any pressure built up inside the under sink water filter system.
3. Get a towel and put it inside the under sink cupboard floor. This will help to absorb water in case there's spillage or leaks while working.
4. Get the housing opening tool and insert it onto the under sink water filter housing you wish to remove.



5. Turn the housing opening tool to the left until the seal breaks open. Now turn by hand until the housing is removed.

NOTE: There might be water left inside the housing, Please avoid spilling it onto the floor. Drain the water into the kitchen sink.

6. Remove the old cartridges and discard into the rubbish bin. Get the new cartridges and remove the packaging for both cartridges if not already removed.

CARTRIDGE POSITIONS:

Sediment Removal Cartridge - position 1

Fluoride Removal Cartridge - position 2

Aragon Cartridge - position 3

7. Ensure the Sediment Removal Cartridge is installed into position 1, the Fluoride Removal Cartridge is installed into position 2 and **NO** Aragon cartridge is installed into position 3.
8. Screw back on the three housings and tighten.
ENSURE NO CARTRIDGE is installed into position 3. Housing 3 must be empty before starting the flushing procedure.



9. Slowly turn on the water. The filter will only take a minute to fill. Keep the water flowing only flushing the cartridges in position 1 and position 2 for a minimum of 10 minutes.

NOTE: The Fluoride Removal Cartridge works very well at removing Fluoride from the water, however, this cartridge **MUST** be flushed for a minimum of 10 minutes.

10. After flushing the Sediment Removal Cartridge and Fluoride Removal Cartridge for 10 minutes, turn off the water at the T-piece, turn on the faucet to release any pressure, remove the 3rd housing and install the Aragon Cartridge into housing position 3. No need to remove the cartridges in position 1 and position 2.
11. Turn on the water and flush all the cartridges for 5 minutes straight. You can get a bucket to save the water being flushed for the plants if preferred.
12. Whilst the water is flowing, **adjust the incoming water T-piece into the correct position to ensure the water is flowing from your drinking water faucet at a maximum of 2.5 litres per minute for best filtration results**, your water filter is now ready for use.

NOTE: Cartridges with carbon inside can emit black water when first flushed. This will become clear quite quickly.

The slower we filter our water - the better water quality we create. If it interests you, for maximum performance & Fluoride removal, slow the flow rate right down to 1 litre per minute or even slower, you can even fill containers at this slow rate you can use the water from later on.

PLEASE READ: If the water filter is unused for 5 or more days turn it on and flow water through the filter for 2 minutes before use.

My Water Filter

CREATE THE BEST WATER YOU CAN

FOR CUSTOMER SERVICE

CALL US AT 1800-769-300

MY WATER FILTER PTY LTD