
USER MANUAL

**MODEL NUMBER:
FISP-WC
AND RELATED UNITS**

**Wall Mounted Concentrate Foam and
Sanitize Unit**

English (Original Instructions)

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

WARNING



Read this manual completely and understand the machine before operating or servicing it.

- Read all instructions before installing or operating unit.
- Always wear appropriate personal protective equipment (PPE) when operating or servicing unit.
- Always follow all chemical safety precautions and handling instructions provided by the chemical manufacturer and Safety Data Sheet (SDS).
- If this unit is modified or serviced with parts not listed in this manual, the unit may not operate correctly.
- Never point the discharge wand at yourself, another person, or any object you do not want covered in chemical.
- Always depressurize unit after use (as described in the After Use Instructions). Always store unit depressurized, with the discharge valve in the closed position.
- Do not exceed an incoming air pressure of 100 psi (7 bar).
- Do not exceed a fluid temperature of 100°F (37°C).
- Always flush the unit with fresh water for 5 minutes when switching from an alkaline to an acid or an acid to an alkaline.
- Never use unit with hydrocarbons or flammable products.
- Only use clean and dry air. Air must be filtered and free of moisture or pump life will be diminished. If needed, install an air dryer before unit.
- Do not use an air lubricator before the unit.

PROTECT THE ENVIRONMENT

Please dispose of packaging materials, old machine components, and hazardous fluids in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.

*Specifications and parts are subject to change without notice.

OPTIONS		
	FOAM SYSTEM: Pump Seal Material	SPRAY SYSTEM: Pump Seal Material
FISP-WC	Santoprene (S)*	Santoprene (S)*
	Viton (V)	Viton (V)
	Kalrez (K)	Kalrez (K)
Add bold option codes to item number as shown. *For Santoprene pump seals on both systems (standard unit), no option code is needed. Examples: <ul style="list-style-type: none"> • FISP-WC (standard unit with Santoprene pump seals on both systems) • FISP-WCVV (unit with Viton pump seals on both systems) • FISP-WCVS (unit with Viton pump seals on the foam system and Santoprene pump seals on the spray system) • FISP-WCSK (unit with Santoprene pump seals on the foam system and Kalrez pump seals on the spray system) 		

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

REQUIREMENTS		
	FOAM SYSTEM:	SPRAY SYSTEM:
Compressed air requirements	40-80 psi (3-5 bar) with 5-10 cfm (141.6-283.3 l/min)	40-80 psi (3-5 bar) with 2 cfm (56.6 l/min)
Water requirements	10-100 psi (0.69-6.9 bar)	10-100 psi (0.69-6.9 bar)
	Backflow prevention is required – consult local plumbing ordinances for more information.	
Liquid temperature range	40-100°F (4.4-37°C)	
Chemical compatibility	Chemical products used with this equipment must be formulated for this type of application and compatible with unit materials and pump seals. For more information on chemical compatibility, consult the manufacturer or SDS for your product or contact our customer service department.	

SPECIFICATIONS		
	FOAM SYSTEM:	SPRAY SYSTEM:
Power type	Compressed air	Compressed air
Chemical pickup type	Draws from concentrated product	Draws from concentrated product
Dilution ratio range (water:chemical)*	14:1 to 320:1	34:1 to 640:1 with ST2520 fan tip; 24:1 to 640:1 with ST2550 fan tip
Number of products unit can draw from (and whether it draws simultaneously or one at a time)	One product	One product
Suction line length/diameter	8 ft. (2.4 m) clear hose with 1/4 in. (6.4 mm) inside diameter	8 ft. (2.4 m) clear hose with 1/4 in. (6.4 mm) inside diameter
Discharge hose diameter/length	50 ft. (15.2 m) hose with 3/4 in. (19.1 mm) inside diameter	50 ft. (15.2 m) hose with 1/2 in. (12.7 mm) inside diameter
Discharge wand/tip type	7 in. (17.8 cm) stainless steel wand with zero tip and ball valve	Polypropylene trigger handle with 25° fan tip
Output distance	25-30 ft. (7.6-9.1 m)	10-12 ft. (3.0-3.7 m)
Output volume	20-45 gal/min (75.7-170.0 l/min) of foam	2 gal/min (7.6 l/min) of liquid with ST2520 fan tip; 4-5 gal/min (15.1-18.9 gal/min) of liquid with ST2550 fan tip
Flow rate*	2 gal/min (7.6 l/min)	2 gal/min (7.6 l/min) with ST2520 fan tip; 4-5 gal/min (15.1-18.9 l/min) with ST2550 fan tip
Pump seals	Santoprene, Viton, or Kalrez	Santoprene, Viton, or Kalrez

*Dilution rates and flow rates given are based on chemical with viscosity of water and factory air pressure settings.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

Installation Instructions:

1. Remove all components from packaging.
2. Select desired area to mount the control box.
Note: We recommend mounting the control box at a height of 6 feet (1.8 m) or less. The chemical suction lines must reach the bottom of the chemical containers. The bottom of the chemical containers should not be positioned higher than the bottom of the control box.
3. Attach the control box mounting feet to the back of the control box, using the four screws provided in the parts package.
4. Mount the control box to the wall using the screws and plastic anchors provided in the parts package.
Note: To drill holes for the plastic anchors, use a 5/16 inch drill bit.
5. Mount the hose hangers (SSHH-F) in a convenient location using the screws and anchors provided in the parts package.
6. Attach the foam discharge hose assembly to the foam discharge hose barb (HBSS1234) and secure it with the hose clamp provided in the parts package.
7. Attach the sanitizer discharge hose assembly to the sanitizer discharge hose barb (HBSS1238) and secure it with the hose clamp provided in the parts package.
8. Connect the air inlet hose barb (HBSS1438) provided in the parts package to the air inlet valve (BVB14) located on the side of the control box. Then attach a 3/8 inch I.D. air line from your air compressor to the air inlet hose barb, and secure it with the hose clamp provided in the parts package.
9. Connect a water line to the unit. The control box has a 1/2 inch FPT water inlet fitting (SSA12). A garden hose adapter fitting assembly (SSA12, SNB34GH, SA12B) is included in the parts package.
Note: A back-flow preventer must be installed in the water line – check local plumbing codes to ensure proper installation.
10. Open the cover of the control box. Insert the proper metering tips and connect the chemical intake lines to the injector inlet barbs.
Note: Use the included metering tip color charts to determine the appropriate metering tips based on the products and dilution rates you will be using.
11. Place the other end of the chemical intake lines into the chemical containers.
Note: The chemical suction lines must reach the bottom of the chemical containers. A strainer must be used on each chemical intake line.

METERING TIP COLOR CHART FOR FOAM FUNCTION

Metering tip color	Ounces of chemical per gallon of water*	Dilution ratio (water:chemical)*
Turquoise	0.40	320:1
Pink	0.80	160:1
Light blue	0.95	135:1
Brown	1.30	98:1
Red	1.40	92:1
White	1.85	69:1
Green	1.90	67:1
Blue	2.65	48:1
Yellow	2.95	43:1
Black	4.80	27:1
Purple	6.40	20:1
Gray	6.80	19:1
No tip	9.20	14:1

*Injection rates will vary based on chemical viscosity, air pressure, and many other factors. We recommend testing unit output to verify injection rate prior to use.

METERING TIP COLOR CHART FOR SANITIZE FUNCTION

Metering tip color	WITH ST2520 FAN TIP		WITH ST2550 FAN TIP	
	Ounces of chemical per gallon of water*	Dilution ratio (water:chemical)*	Ounces of chemical per gallon of water*	Dilution ratio (water:chemical)*
Copper	0.20	640:1	0.20	640:1
Pumpkin	0.30	427:1	0.30	427:1
Burgundy	0.40	320:1	0.40	320:1
Lime	0.41	312:1	0.41	312:1
Tan	0.42	305:1	0.42	305:1
Orange	0.54	237:1	0.67	191:1
Turquoise	0.61	209:1	0.72	177:1
Pink	1.01	127:1	1.18	108:1
Light blue	1.28	106:1	1.42	90:1
Brown	1.35	95:1	1.52	84:1
Red	1.82	70:1	2.7	47:1
White	1.89	67:1	2.8	46:1
Green	2.09	61:1	3.0	43:1
Blue	2.70	47:1	3.31	38:1
Yellow	3.71	34:1	5.2	24:1
No tip	7.37	17:1	13.5	10:1

*Injection rates will vary based on chemical viscosity, air pressure, and many other factors. We recommend testing unit output to verify injection rate prior to use.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

Operation Instructions:

1. Follow all instructions from chemical manufacturer.
2. With the discharge valves (HV60, PSG12) in the closed position, open the air inlet valves (BVB14).
3. Follow the instructions for the desired function:

To Foam:

4. Point the foam discharge wand in a safe direction and open the discharge valve (HV60) to begin foaming. The discharge valve (HV60) should be completely open while foaming.
5. While the unit is running and discharging product, adjust the needle valve (NV14Y), located inside the control box, to regulate the wetness or dryness of the foam:
 - a. Close needle valve completely in clockwise direction.
 - b. Open needle valve in counter-clockwise direction 3 complete turns.
 - c. Continue to open needle valve in ¼ turn increments, allowing 30 seconds between adjustments, until desired consistency of foam is achieved.
6. To stop foaming, close the discharge valve (HV60).

To Sanitize:

7. Point the spray discharge wand in a safe direction and open the discharge valve (PSG12) to begin spraying. The discharge valve (PSG12) should be completely open while spraying.
8. To stop spraying, close the discharge valve (PSG12).

After Use Instructions:

1. Place the chemical suction lines into a container of water.
2. With the unit running, open the discharge valves (HV60, PSG12), and allow the unit to be flushed with fresh water for approximately 2-4 minutes or until all chemical has been discharged from the unit.
3. Shut off the air supply to the unit by closing the air inlet valves (BVB14).
4. Shut off the water supply to the unit.
5. Open the discharge valves (HV60, PSG12) to relieve any pressure remaining in the unit.
6. Close the discharge valves (HV60, PSG12) after all pressure has been relieved from the unit. Store the unit with the discharge valves (HV60, PSG12) in the closed position.

Maintenance Instructions:

To keep the unit operating properly, periodically perform the following maintenance procedures:

Note: Before performing any maintenance, disconnect the unit from the compressed air and water supply and depressurize it as described in the After Use Instructions.

- Inspect the pumps (P56/P56K/P56V) for wear and leaks.
- Inspect all hoses for leaks or excessive wear. Make sure all hose clamps are in good condition and properly secured.
- Replace the filter (AFR25) located within each of the air regulators (R25) as needed. Clean by unthreading the air regulator bowl (ABR25) from the air regulator (R25).
- Check the chemical metering tips, suction lines, and strainers for debris and clean as needed.
- Drain your air compressor tank on a regular basis to help extend pump life. An air source with a high moisture content will accelerate pump wear. Note: If your air source has a high moisture content, you may wish to install a water separator (WS-20CFM) before the unit.
- Check for proper water pressure on the water pressure gauge (WRG14). To check the pressure:
 - o With the unit running, open the discharge valve (HV60/HV34) and allow the unit to run for about 1 minute.
 - o Close the discharge valve (HV60/HV34).
 - o Check the water pressure gauge (WRG14). The pressure should read 30 psi (2.1 bar).
 - o If necessary, adjust the water regulator using the flathead screw on the regulator body. The water pressure should be set at 30 psi (2.1 bar). Setting the pressure higher or lower may damage the unit or cause it to malfunction.

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

Troubleshooting Instructions:

For foam and/or spray function:


- Check to ensure that the discharge hoses are uncoiled properly, and that there are no kinks that could obstruct fluid flow.
- Check the air regulator bowls (ABR25) and air filters (AFR25) for debris such as water, oil, or rust particles. Clean by unthreading the air regulator bowl (ABR25) from the air regulator (R25).
- If air passes through a pump (P56/P56K/P56V) without cycling, the pump needs to be replaced.
- Check for proper air pressure on the air gauges (AG100). The air regulators (R25) are factory set at 50 psi (3.4 bar). Operating range for the foam system is 40-80 psi (3-5 bar) with 5-10 cfm (141.6-283.3 l/min). Operating range for the spray system is 40-80 psi (3-5 bar) with 2 cfm (56.6 l/min).
- If the unit operates at a reduced pressure:
 - Check the air compressor supplying the unit. If the pressure is less than 40 psi (2.8 bar), turn the unit off until the compressor can catch up.
 - If the air supply is 50 psi (3.4 bar) or above, check the air gauge (AG100), which should read near 50 psi (3.4 bar). If the air gauge reads more or less than 50 psi (3.4 bar), adjust the pressure by turning the knob on the top of the air regulator (R25).
- Check the chemical metering tips, suction lines, and strainers for debris or damage. Clean or replace as needed. To prevent damage to the unit, strainers must always be used.

For foam function only:

- If the needle valve (NV14Y) is open too far, the pump (P56/P56K/P56V) may cycle improperly due to lack of air pressure. If this occurs, close and readjust the needle valve (NV14Y) as described in the Operation Instructions.
- Make sure proper foaming chemical and concentration are being used.
- If foam comes out wet, no matter where the needle valve (NV14Y) is positioned, the check valve (CV38) may need to be replaced.
- If solution backs up into the air regulator bowl (ABR25), the check valve (CV38) needs to be replaced.


READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

CONTROL BOX ASSEMBLY

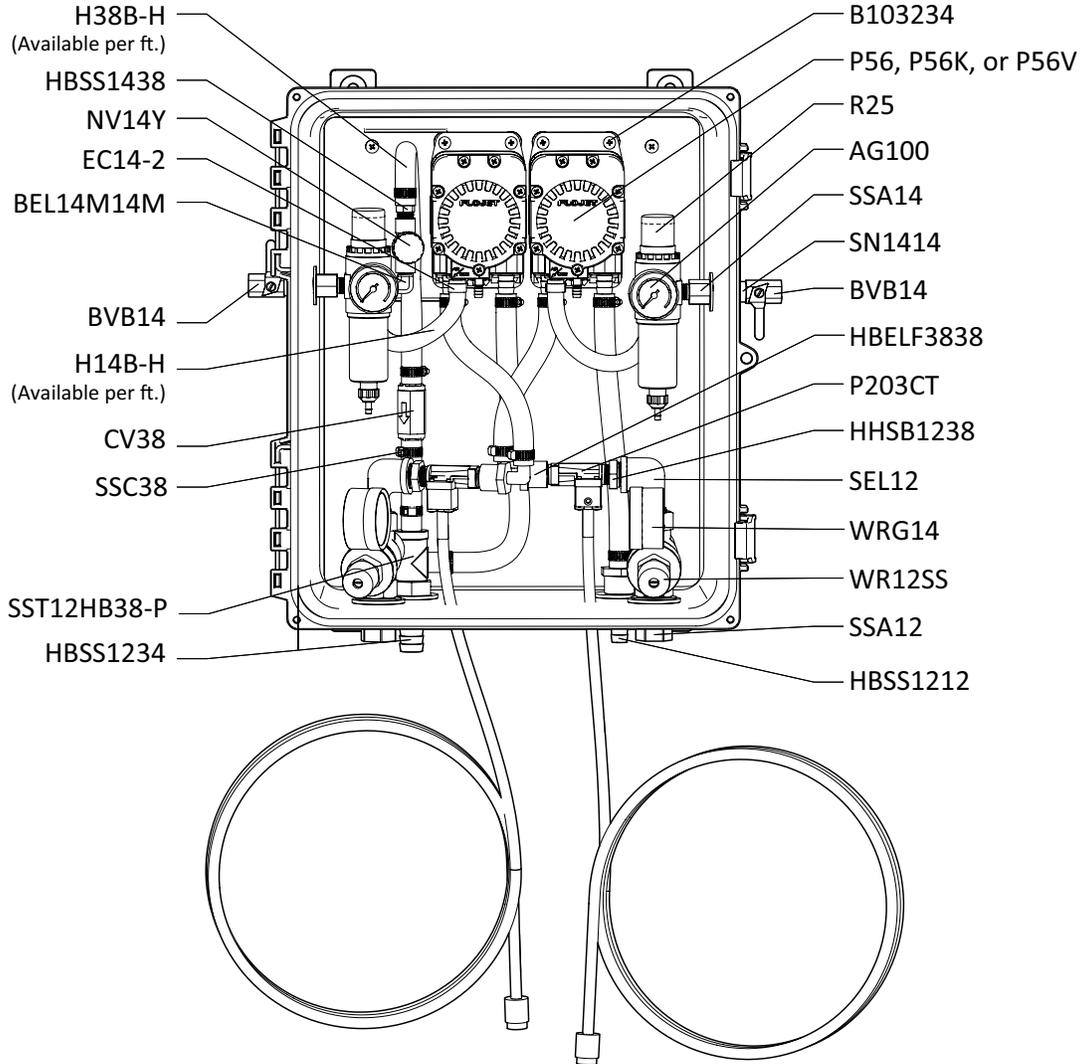

LEGACY WATER REGULATOR ASSEMBLY

LEGACY PARTS DIAGRAM

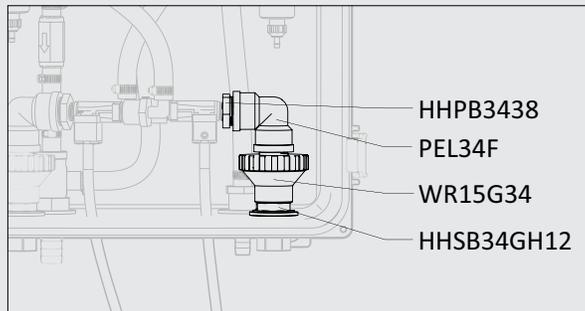


LEGACY PARTS LIST

ITEM NUMBER	DESCRIPTION
HHPB3438	HEX HEAD POLY REDUCER BUSHING 3/4in X 3/8in
HHSB34GH12	STAINLESS HEX HEAD BUSHING 3/4in MGH BY 1/2 FPT
PEL34F	3/4in FEMALE POLY PIPE ELBOW 90
WR15G34	WATER PRESSURE REGULATOR - 3/4in FGH BY 3/4in MPT Body ABS, internal parts, SS, PP and Santo


READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

**FOAM HOSE AND WAND ASSEMBLY
ITEM NUMBER: SSWA38-HA50**

ZERO TIP FOAM WAND ASSEMBLY
ITEM NUMBER: SSWA38

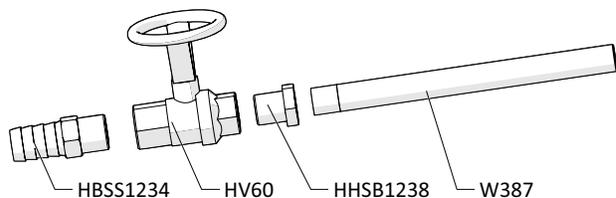


50 ft (15 m) FOAM HOSE ASSEMBLY
ITEM NUMBER: H34-50

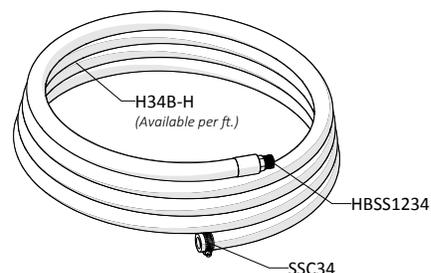


**SPRAY HOSE AND WAND ASSEMBLY
ITEM NUMBER: SGA12-HA50**


FAN TIP SPRAY WAND ASSEMBLY
ITEM NUMBER: SGA12

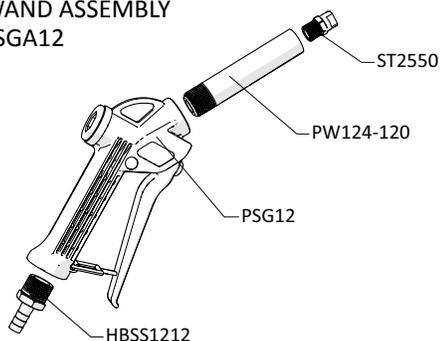


50 ft (15 m) SPRAY HOSE ASSEMBLY
ITEM NUMBER: H12-50

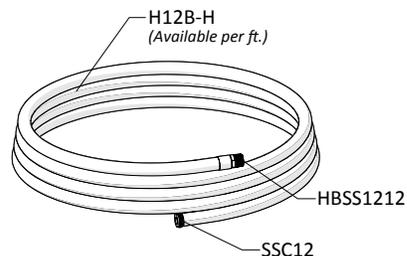

**ANTI-KINK FOR FOAM HOSE
ITEM NUMBER: AKSS34**

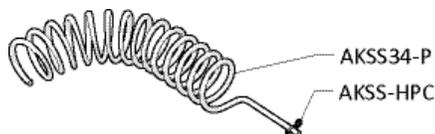


**ANTI-KINK FOR SPRAY HOSE
ITEM NUMBER: AKSS12**

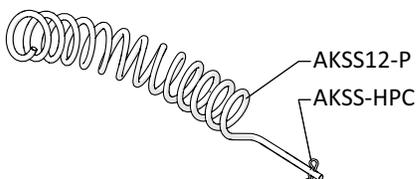

OPTIONAL COMPONENT

WATER SEPARATOR
ITEM NUMBER: WS-20CFM

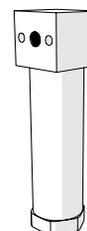

READ ALL INSTRUCTIONS BEFORE OPERATING EQUIPMENT

ITEM NUMBER	DESCRIPTION
AG100	1.5 INCH DRY MODEL 20 DUAL SCALE GAUGE
AKSS12-P	SS ANTI-KINK SPRING FOR 1.2 INCH HOSE
AKSS34-P	SS ANTI-KINK SPRING FOR 3/4 INCH HOSE
AKSS-HPC	ANTI-KINK STAINLESS STEEL HITCH PIN CLIP
B103234	10-32 X 3/4 PHIL TRUSS MACH SCR 18-8
BCVR1	10-32 X 1/2 PHIL PAN HEAD SS
BEL14M14M	BRASS ELBOW 1/4in MPT X 1/4in MPT
BVB14	AIR INLET VALVE - VA BRS 025-4F4F-BT, NICKEL
CV38	PVC CHECK VALVE 3/8 BARBS - SS SPRING
DEMA-MTKUL	DEMA - METERING TIP KIT - ULTRA LEAN FOR P203CT
EC14-2	OETIKER CLAMP 13.8
F12SS	STAINLESS .875 ID FERRULE FOR 1/2 INCH HOSE
F34SS-L	SS CRIMP FERRULE 1.90inches X 1.5 inches LONG
FWLG14	.569 ID X 1.28 OD X .08 THICK FLAT WASHER SS 18-8
FWP12	7/8 ID X 1.5 OD X 0.05 THK SSFW
FWP78	7/8in BY .137 BY 1 1/4in FLATWASHER 18-8 PLN
H12B-H	1/2 INCH BLUE GOODYEAR HORIZON HOSE - Available per ft.
H14B-H	1/4 INCH BLUE HOSE- GOODYEAR HORIZON - Available per ft.
H34B-H	3/4 INCH BLUE GOODYEAR HORIZON HOSE - Available per ft.
H38B-H	3/8 INCH BLUE GOODYEAR HORIZON HOSE - Available per ft.
HBELF3838	HOSE BARB ELBOW 3/8" BY FPT 3/8"
HBFS1238	HOSE BARB 3/8 X FEMALE PIPE THREAD 1/2 IN STAINLESS STEEL
HBSS1212	STAINLESS HOSE BARB 1/2 X 1/2
HBSS1234	STAINLESS HOSE BARB 1/2 X 3/4
HBSS1438	STAINLESS HOSE BARB 1/4 MPT X 3/8 BARB
HBSEL1814	304 STAINLESS ELBOW 1/8 INCH NPT X 1/4 INCH HOSE BARB
HHPB3438	HEX HEAD POLY REDUCER BUSHING 3/4in X 3/8in
HHSB1238	HEX HEAD S.S. REDUCER BUSHING 1/2in X 3/8
HHSB34GH12	STAINLESS HEX HEAD BUSHING 3/4in MGH BY 1/2 FPT
HV60	1/2in STAINLESS BALL VALVE - w/ WELDED NUT
NV14Y	FLOW CONTROL VALVE - INCLUDES BLACK KNOB
NV14Y-HNDL	KNOB FOR 2839-1/4 NEEDLE VALVE
P14	COUNTERSUNK PLUG-HEXAGON 1/4
P203CT	PLASTIC INJECTOR KIT INCLUDES INJECTOR - INTAKE HOSE - FOOT STRAINER AND WEIGHT - TIP KIT
P56	PUMP WITH SANTOPRENE SEALS - INCLUDES HOSE BARBS, AIR FITTING, AND EXHAUST BARB
P56K	5700 PUMP WITH KALREZ SEALS - INCLUDES HOSE BARBS, AIR FITTING, AND AIR PORT
P56V	5700 PUMP WITH VITON SEALS - INCLUDES HOSE BARBS, AIR FITTING, AND AIR PORT

20756103B	Polypro G57 Air Port x HB Straight, w/ Viton o-ring
HB14P	1/4in BRASS HB AIR FITTING /G57/P56
HB5638	HOSE BARB FOR P56 PUMP
HB5638K	HOSE BARB FOR P56K PUMP
HB5638V	HOSE BARB FOR P56V PUMP
PB16138	POLYPROPYLENE CONTROL BOX - WORKING DIMS 16x13x8 - PUMP MOUNT
PB16138-GSKT	NEOPRENE GASKET 0.220 INCH ROUND CORD STOCK - 61.125 INCHES
PB16138-LATCH	LATCH FOR PB16138
PB16138-PIN	STAINLESS STEEL HINGE PIN FOR CONTROL BOX PB16138 - 1/8 x 4 3/4 x 1/2inches
PBFT-PP	MOUNTING FEET FOR POLYBOX - PB16138 - POLYPROPYLENE
PEL34F	3/4in FEMALE POLY PIPE ELBOW 90
PL16138	CONTROL BOX LID - POLYPROPYLENE - 16x13x8 - HINGED LOCKABLE LID
PSG12	1/2 IN POLY SPRAY GUN WITH O-RING AND GRAY HANDLE & 316SS
PSGORV	PSG12 O RING
PW124-120	1/2in BLACK POLY PRO X 4in - SCH.120 - 1/2in MPTOE & 1/4in FPTOE
R25	AIR REGULATOR - 1/4fpt TWO PORT 1/8fpt TWO PORT - INCLUDES FILTER AND BOWL
AFR25	AIR FILTER for R25
ABR25	METAL AIR BOWL for R25
S1034FHL	10 X 3/4 PHIL FLAT HI-LO THRD SCREW 18-8
SN1414	STAINLESS 1/4MPT X 1/4MPT NIPPLE
SSA12	STAINLESS MALE/FEMALE S.S. ADAPTOR 1/2in X 1/2in
SSA14	SS304 MALE/FEMALE ADAPTOR 1/4 NPT X 1/4 NPT
SSC12	WORM GEAR CLAMP, S/S (.31-.91)
SSC34	WORM GEAR CLAMP, S/S (.75-1.25)
SSC38	WORM GEAR CLAMP, S/S (.25-.63)
SSHH-F	S.S. LASER CUT HOSE HANGER - FLAT STOCK
SST12HB38-P	STAINLESS TEE COMBO 1/2in FPT X 3/8 in BARB
ST2520	VEEJET NOZZLE - STAINLESS STEEL 2520
ST2550	VEEJET NOZZLE, S.S. 2550
STR34	1in SEAL/STRAINER FOR 3/4 GH FITTINGS
W387	S.S. 304 SPRAY WAND 3/8in MPT X 7in LONG - THREAD ON ONE END
WMS14	14 X 1 1/4 HEX W/H SMS SLOTT, S/S
WMS14A	5/16 X 1 1/2 STRAIGHT PLASTIC ANCHOR
WR12SS	WATER PRESSURE REGULATOR - STAINLESS STEEL - 1/2 INCH FPT
WR15G34	WATER PRESSURE REGULATOR - 3/4in FGH BY 3/4in MPT Body ABS, internal parts, SS, PP and Santo
WRG14	WATER PRESSURE REGULATOR GAUGE FOR WR12SS
WS-20CFM	Tsunami WATER SEPARATOR 20 CFM