

HERITAGE SERIES

CLASSIC 570 CHARCOAL BRAAI

ASSEMBLY & OPERATING INSTRUCTIONS



This instructions manual contains important information necessary for the proper assembly and safe use of the appliance.

Read these instructions and warnings carefully so as to familiarize yourself with the appliance before use.

Keep this manual for future reference.

megamaster[™]
TOGETHER, MADE BETTER[™]

MODEL NO. FSBK0022



Questions, problems, missing parts? Before returning to your retailer, call our Customer Service Department at Tel: (010) 001 6342, 8 a.m. - 5 p.m., CAT, Monday-Friday. Or send us an E-mail at service@megagroup.co.za. Visit us online at: www.megamaster.co.za

19000707A0

THIS MANUAL IS DESIGNED TO FIT INTO THE BOTTOM DRAWER.

BUT THAT'S NOT WHERE IT BELONGS

We get it. You've just unboxed your Megamaster Braai and you can't wait to fire it up. Those steaks, fish, vegetables and everything else you could possibly imagine certainly aren't going to braai themselves.

At Megamaster, we believe anything worth doing is worth doing well. That's why, as with all of our products, we've put a lot of thought and effort into this user manual. It really is the first step towards making your time with friends, family and flavour truly better.

**Make your braai experience even better with
our Megamaster accessories. Visit
megamaster.co.za to view our range of
covers, tongs, trays and more!**

Manufactured in China. Distributed by Megamaster
+27 (0)12 802 1515 PO Box 15, Woodlands, 072, South Africa
www.megamaster.co.za

megamaster[™]
TOGETHER, MADE BETTER[™]

TABLE OF CONENTS



Safety Warnings	3	Care and Maintenance	19
Braai Usage Information	4	Troubleshooting Guide	20
Operation Warnings	6	Warranty	21
Package Parts List	7		
Assembly Instructions	9		
Installation Checklist ...	17		
Operating Instructions	18		

SAFETY WARNINGS



WARNING

1. Do not store or use petrol or other flammable liquids or vapour in the vicinity of this or any other appliance.
2. Do not store spare LP gas cylinders in the vicinity of the braai or other appliances.

WARNING

1. To reduce the risk of fire, burn hazard or other injury, read the manual carefully and completely before using your braai.
2. Your braai will get very hot. Never lean over the cooking area while using your braai. Do not touch cooking surfaces, braai housing, lid or any other braai parts while the braai is hot and in operation, or until the gas braai has cooled down after use.
3. Failure to comply with these instructions may result in serious bodily injury / death.
4. DO NOT LEAVE THE BRAAI UNATTENDED WHILE COOKING.
5. FOR OUTDOOR USE ONLY.

DANGER

1. Never use your braai in a garage, porch, shed, or any other enclosed area.
2. DO NOT use this appliance under overhead combustible surfaces.
3. Do not install this unit in combustible enclosures.
4. The minimum air space clearance from sides and back of unit to combustible construction is 36 in. (91cm) from the sides and 36 in. (91cm) from the back.
5. Never operate this appliance within 10 ft. (3 m) of any structure, combustible material or LP gas cylinders.
6. Never operate this appliance within 25 ft. (7.5 m) of any flammable substance.
7. This braai is not intended to be installed in or on recreational vehicles and/or boats.

ELECTRICAL WARNINGS



WARNING
















 
 

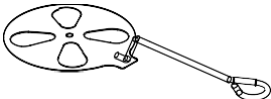

1. If an external electrical source is utilized for lights or rotisserie motors: The outdoor cooking appliance, when installed, must be electrically grounded in accordance with local building regulations.
2. Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.

SAFETY PRACTICES TO AVOID PERSONAL INJURY


- The charcoal kettle must never be used indoors or for heating purposes.
- Do not repair or replace any part of the charcoal kettle unless specifically recommended in this manual. All other service should be referred to a qualified technician. This charcoal kettle is not intended to be installed in or on recreational vehicles or boats.
- Children should not be left alone or unattended in an area where the charcoal kettle is being used. Do not allow them to sit, stand or play in or around the charcoal kettle at any time.
- Do not touch the charcoal kettle while the charcoal kettle is in operation, or until the charcoal kettle has cooled down after use.
- Do not use gasoline, alcohol, or other highly volatile fluids to ignite charcoal. If using charcoal starter fluid(not recommended),remove any fluid that may have drained through the bowl vents before lighting the charcoal.
- Do not add charcoal starter fluid or charcoal infused with charcoal lighter fluid to already hot or warm charcoal. Cap starter fluid after use and place a safe distance away from the grill.
- Use heat-resistant braai mitts or gloves while cooking, adjusting air vents(dampers), adding charcoal and handling thermometer or lid.
- Extinguish charcoal when finished cooking. To extinguish, close bowl vent and lid damper and place lid on bowl. Do not use water to control flare-ups or to extinguish charcoal.
- Never dump hot charcoal where it might be stepped on or be a fire hazard. Never dump ashes or charcoal before they are fully extinguished.
- Do not use this charcoal kettle unless all parts are in place. This charcoal kettle must be properly assembled according to the assembly instructions. Improper assembly may be dangerous.
- Do not leave the charcoal kettle unattended while cooking.
- Do not operate the charcoal kettle under unprotected combustible constructions. Use only in well ventilated areas. Do not use in buildings, garages, sheds, breezeways or other such enclosed areas.
- Keep the area surrounding the charcoal kettle free from combustible materials including, fluids, trash and vapors such as gasoline or charcoal lighter fluid. Do not obstruct the flow of combustion and ventilation air.
- A maximum weight of 2.27kg of charcoal is allowed on the unit per use.

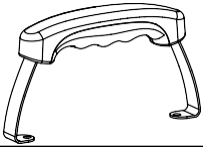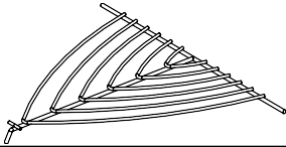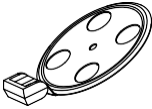**NOW THAT WE GOT
ALL THE SAFETY
INFORMATION OUT
OF THE WAY, LET'S
START WITH SOME
ELBOW GREASE!**

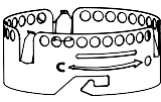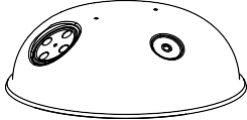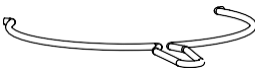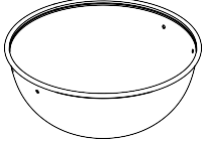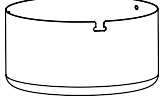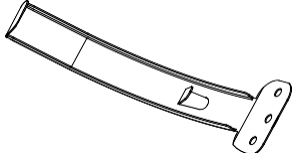Package parts List

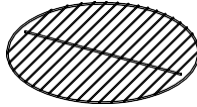
No	Part	Qty	No	Part	Qty
1		3	11		1
2		1	12		2
3		1	13		1
4		1	14		1
5		1	15		1
6		3	16		1
7		3	17		1
8		1	18		2
9		2	19		1
10		1	20		2

Tools Needed

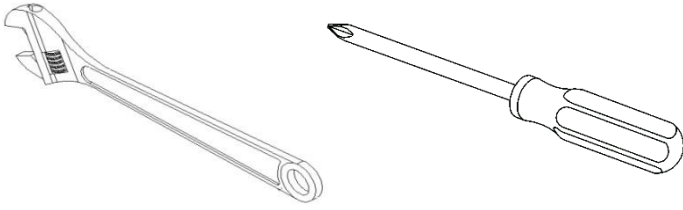


Hardware Package List

 
M6 x 12

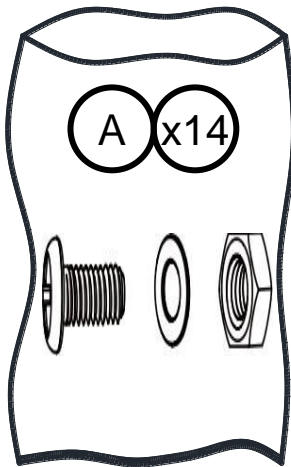


M6 x 30

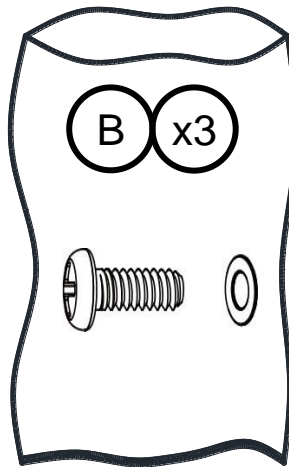 



M8

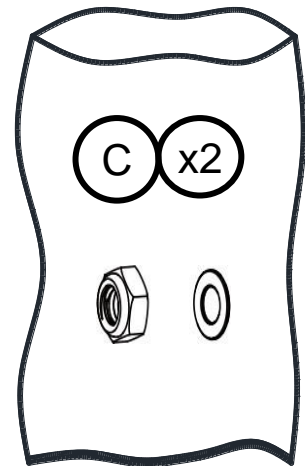 


M5 x 16

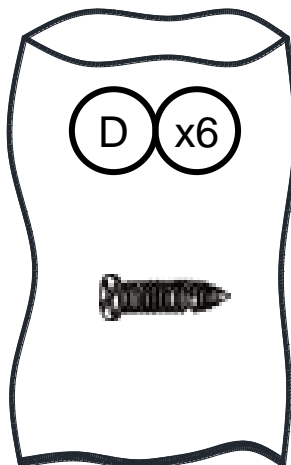 

Assembly Instructions

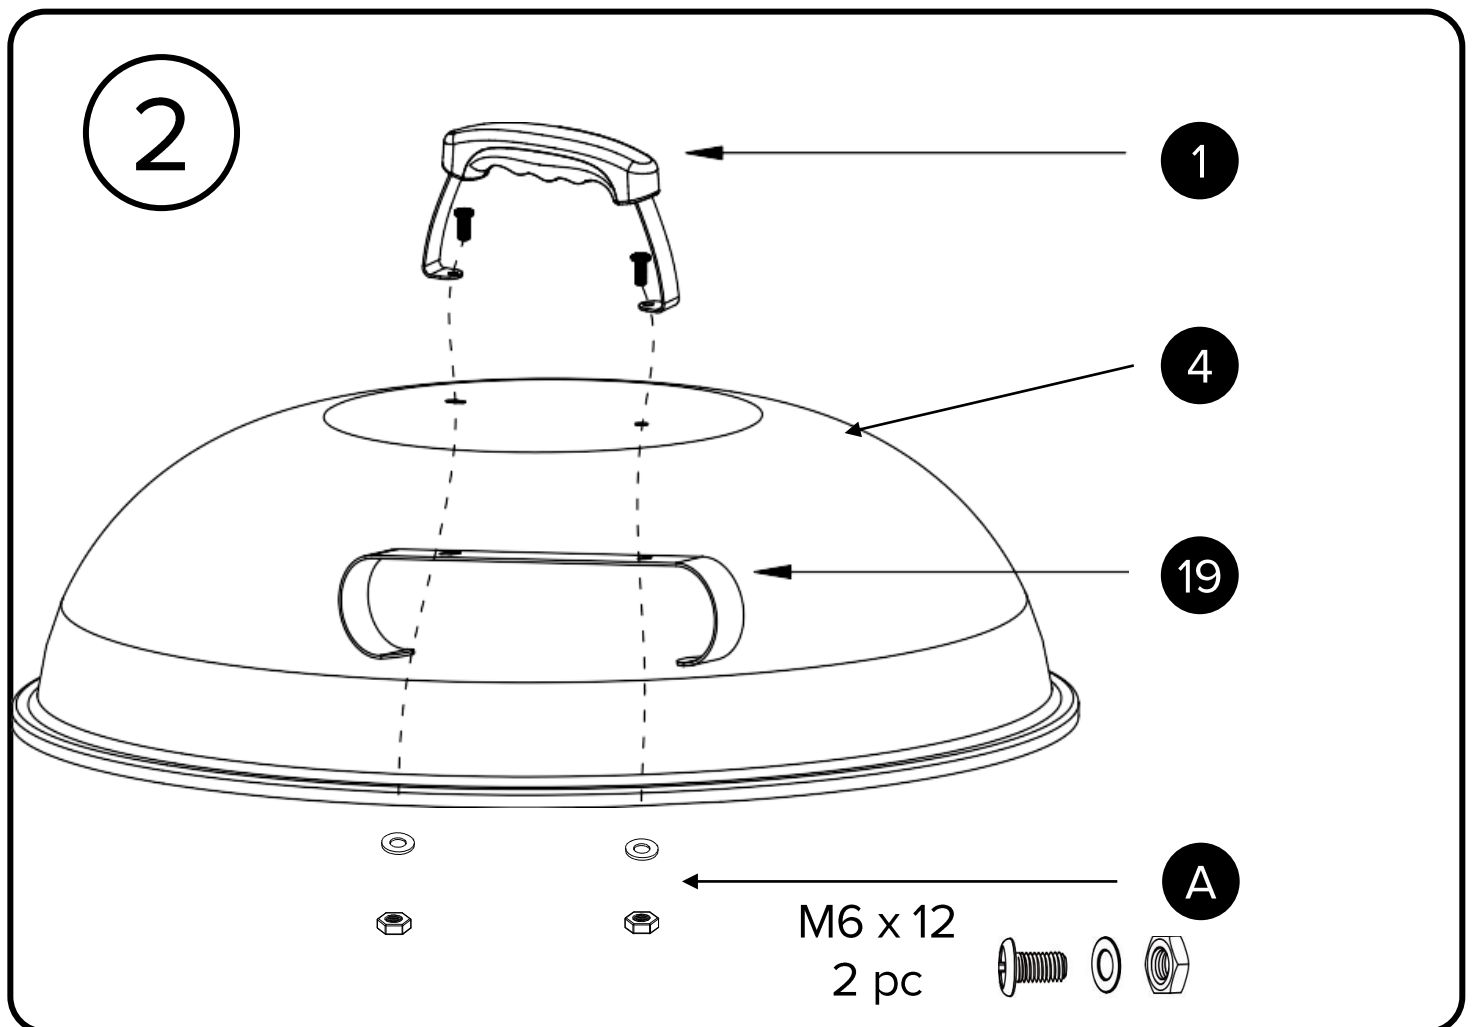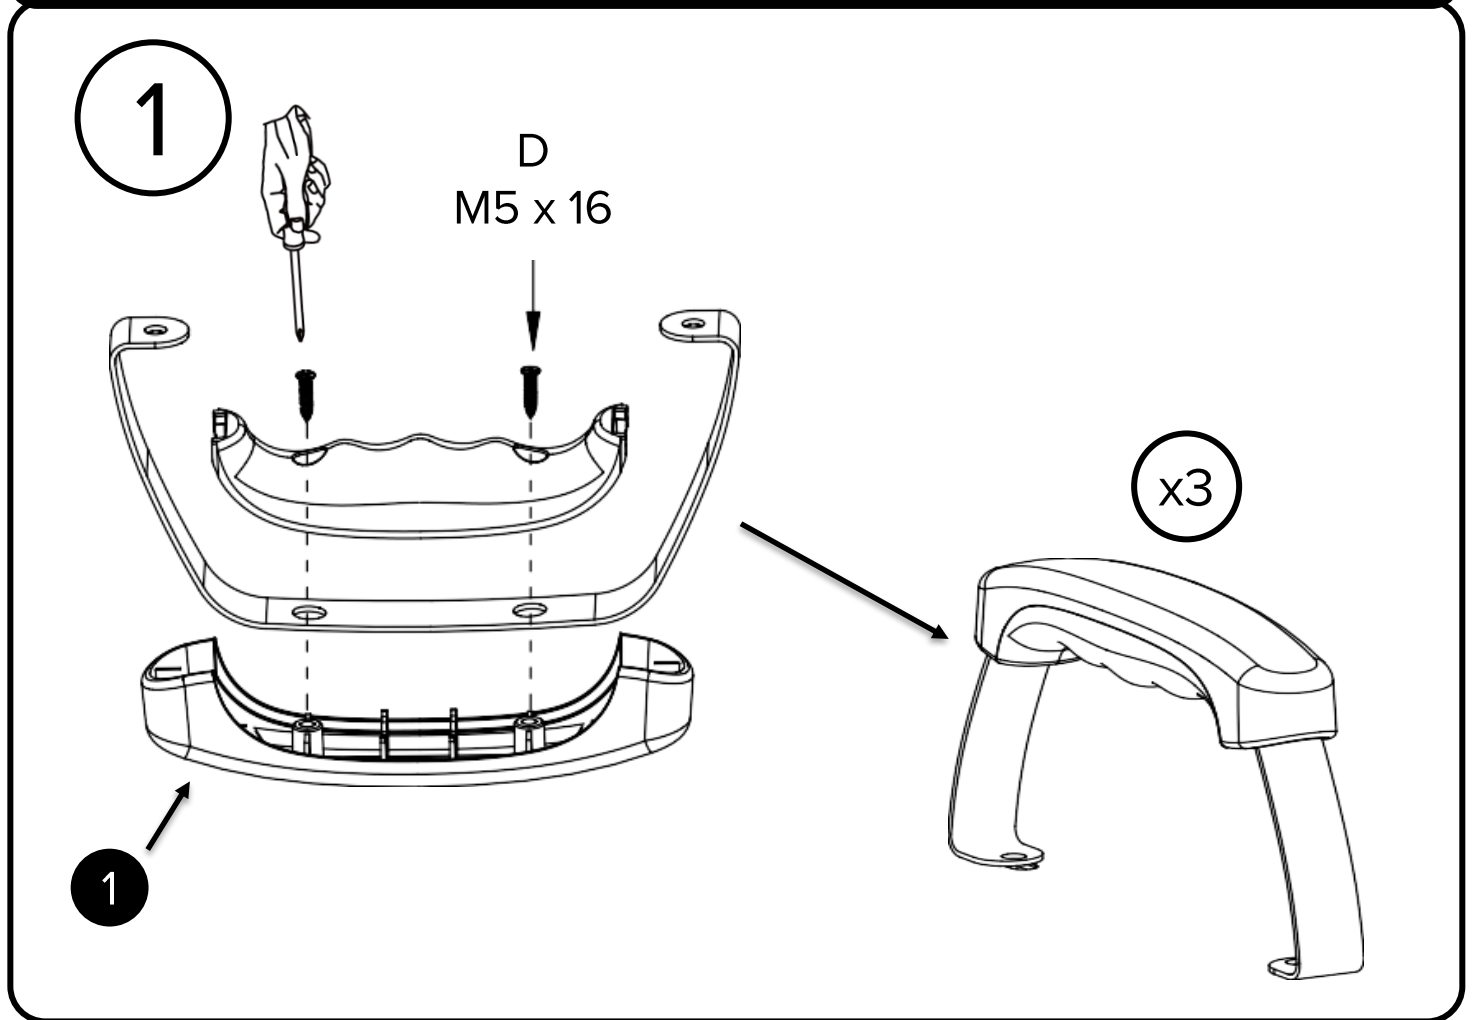  


3

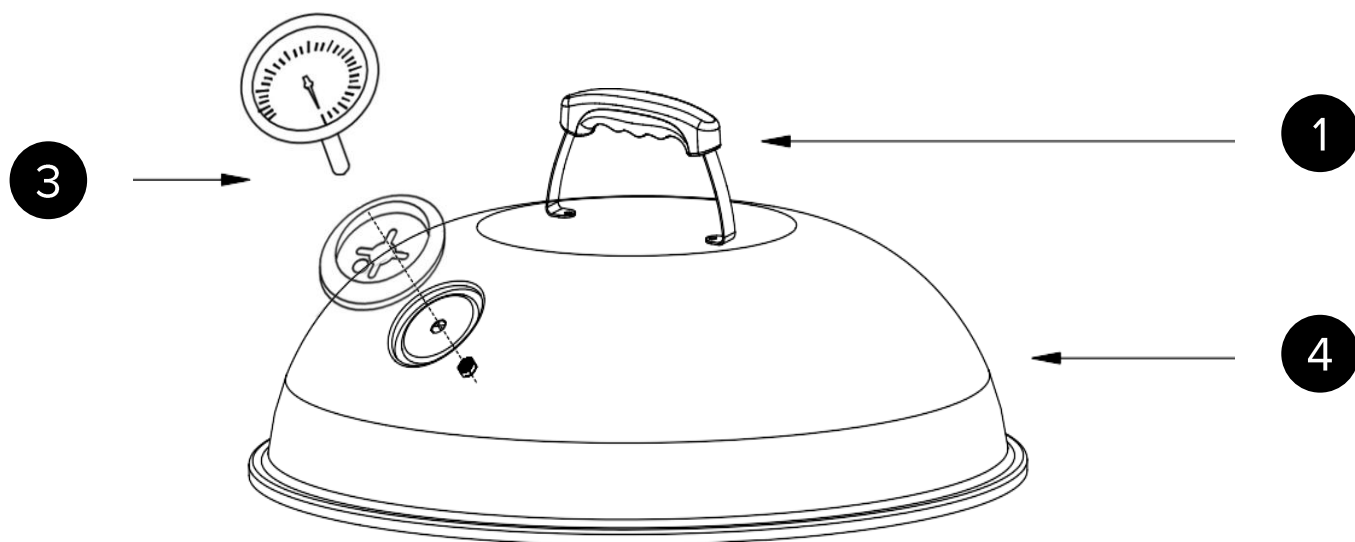 

4

 M6 x 12
1 pc

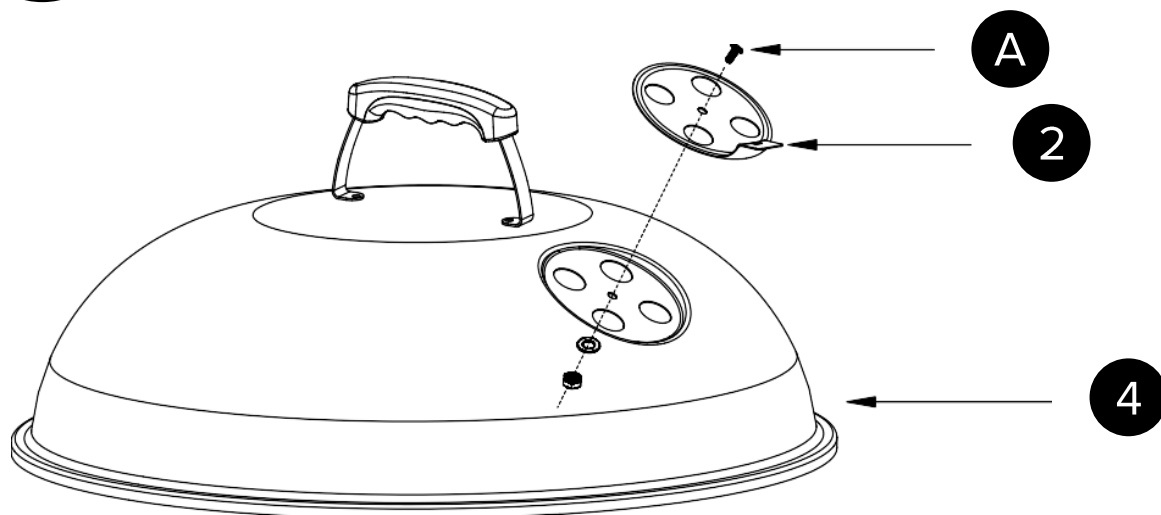


Assembly Instructions

5


M6 x 12

 4 pc



A

 
1

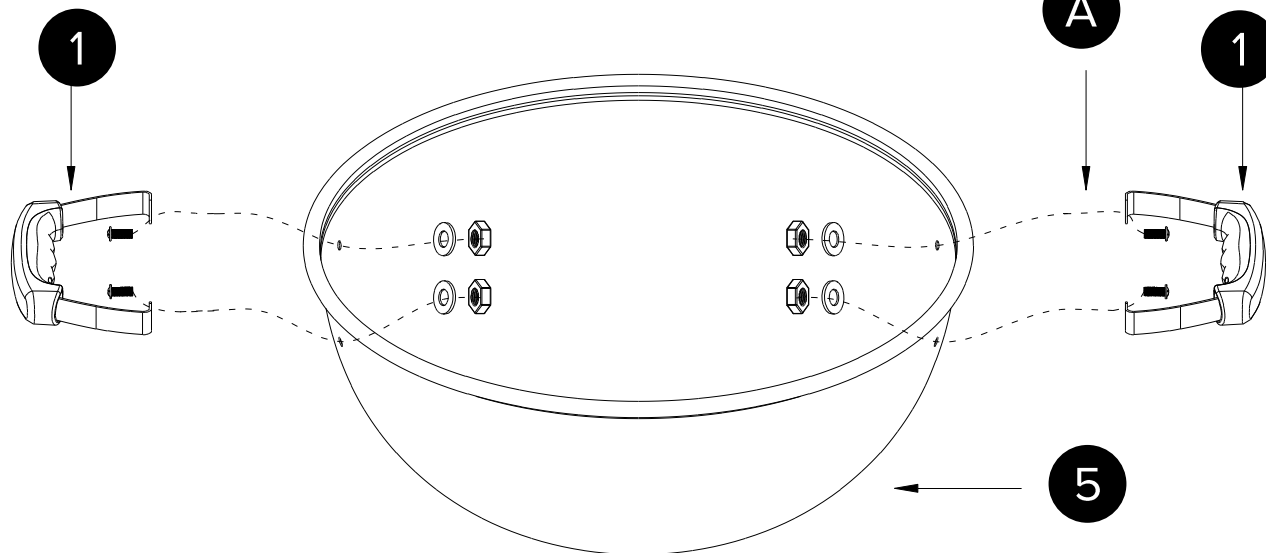

6

M6 x 12

 6 pc




A


6

5

 
7

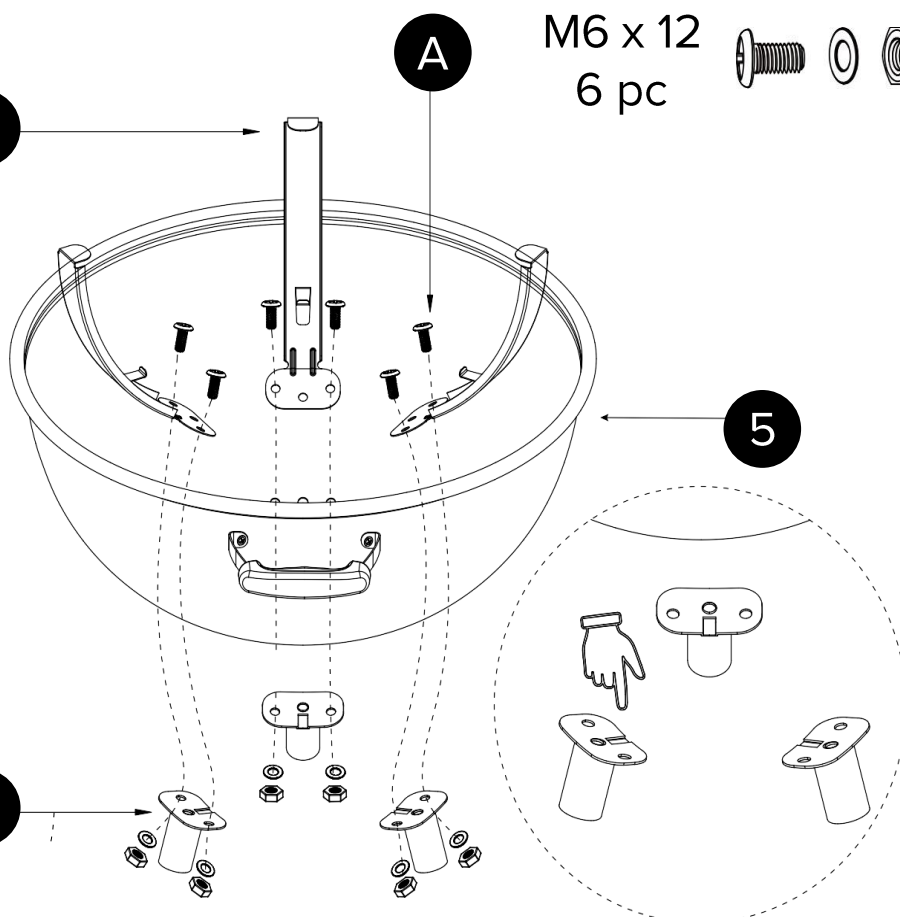

7

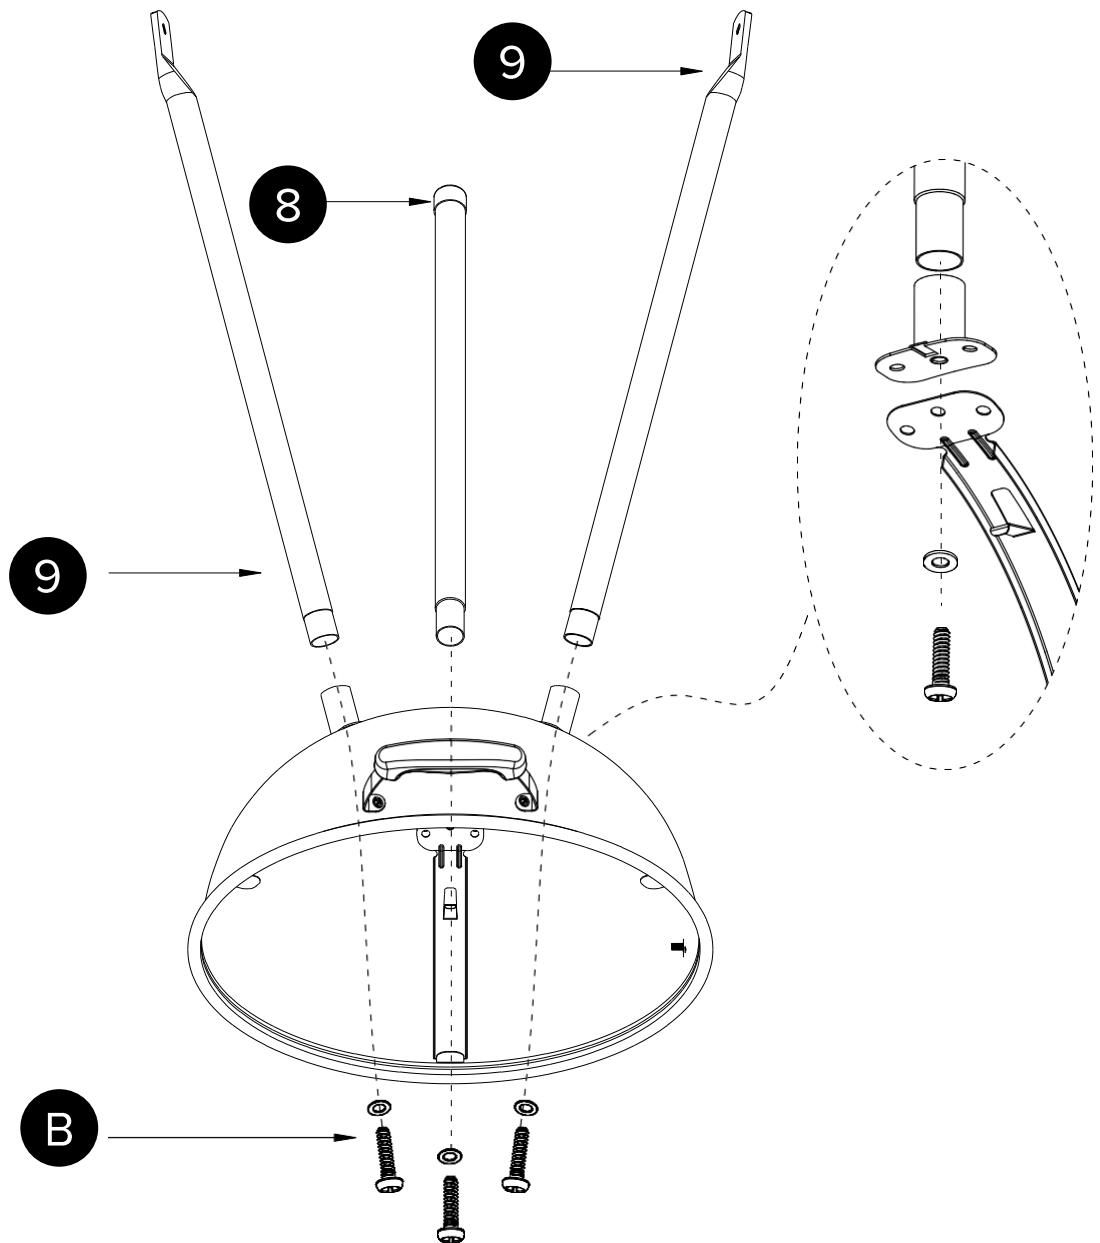 

M6 x 30
3 pc

 

8

11

 
10

A




M6 x 12
1 pc


9

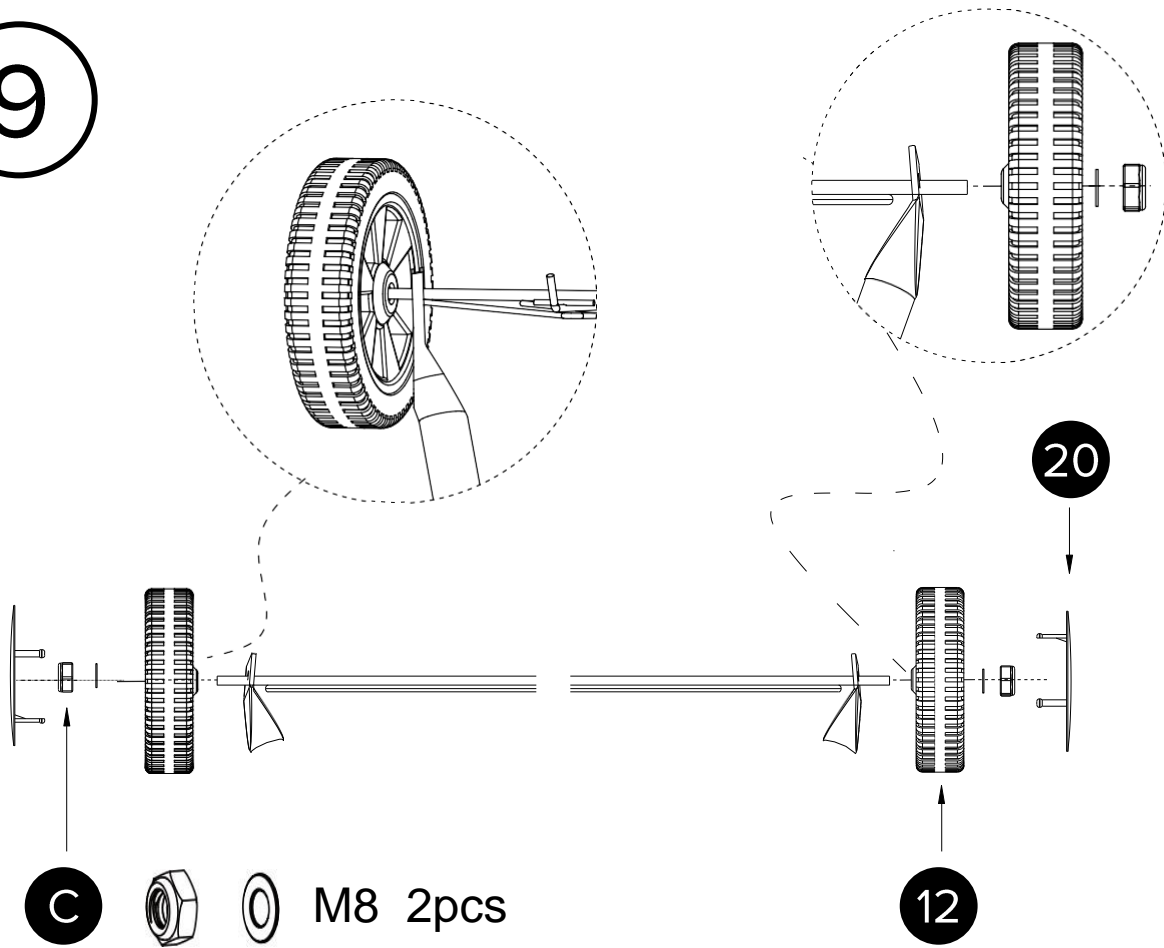


10

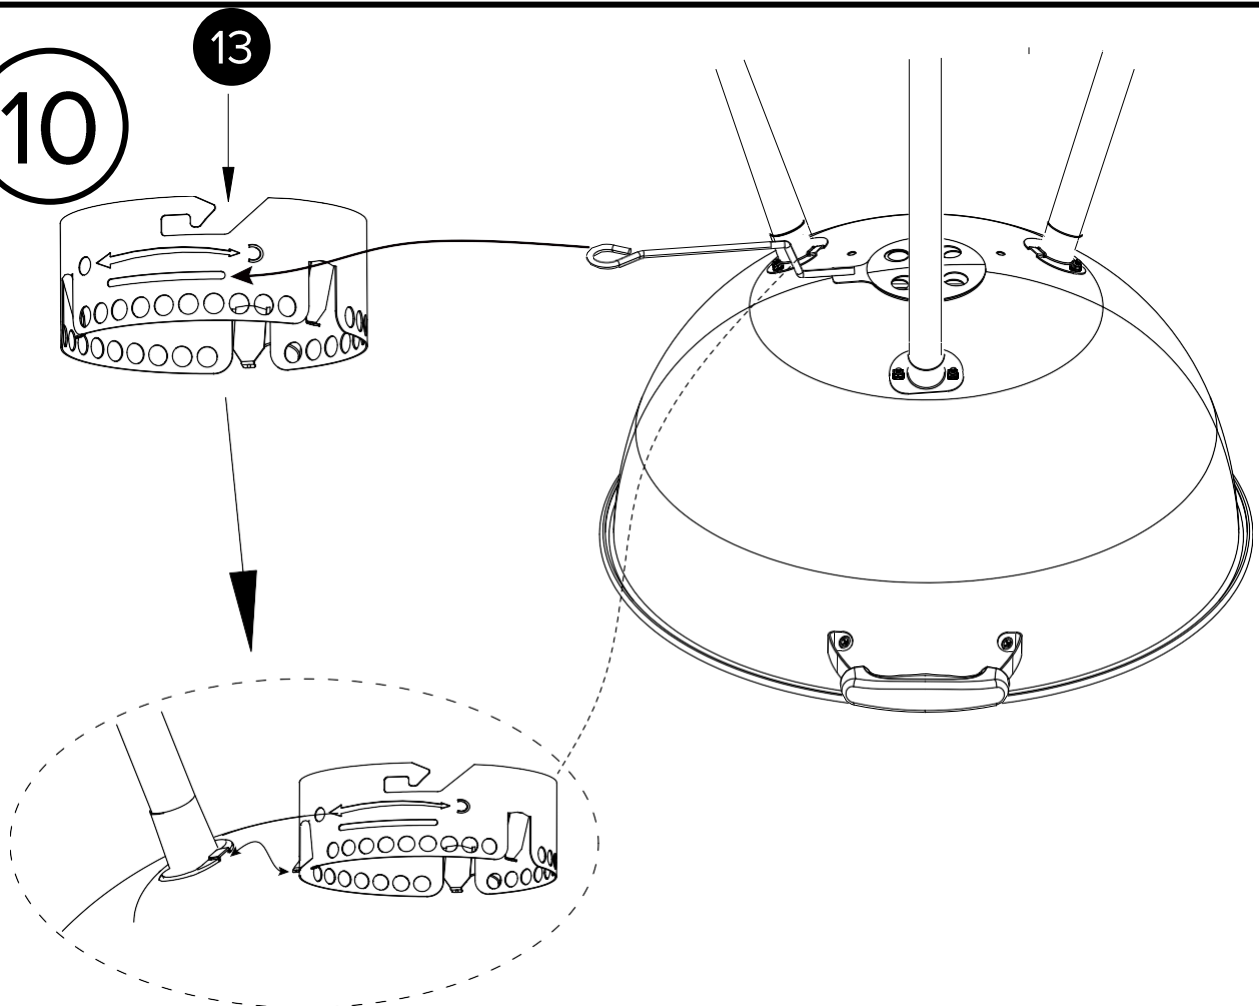 


11

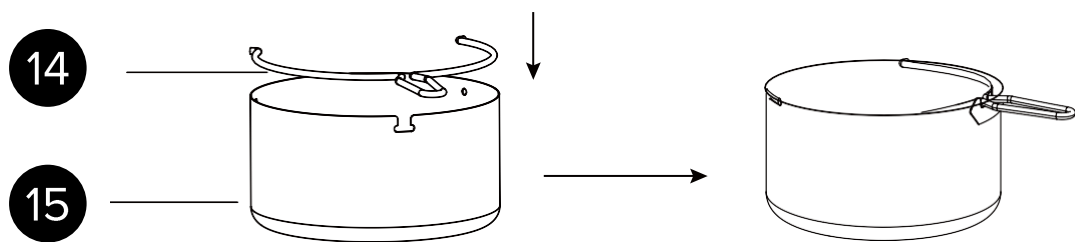 

12

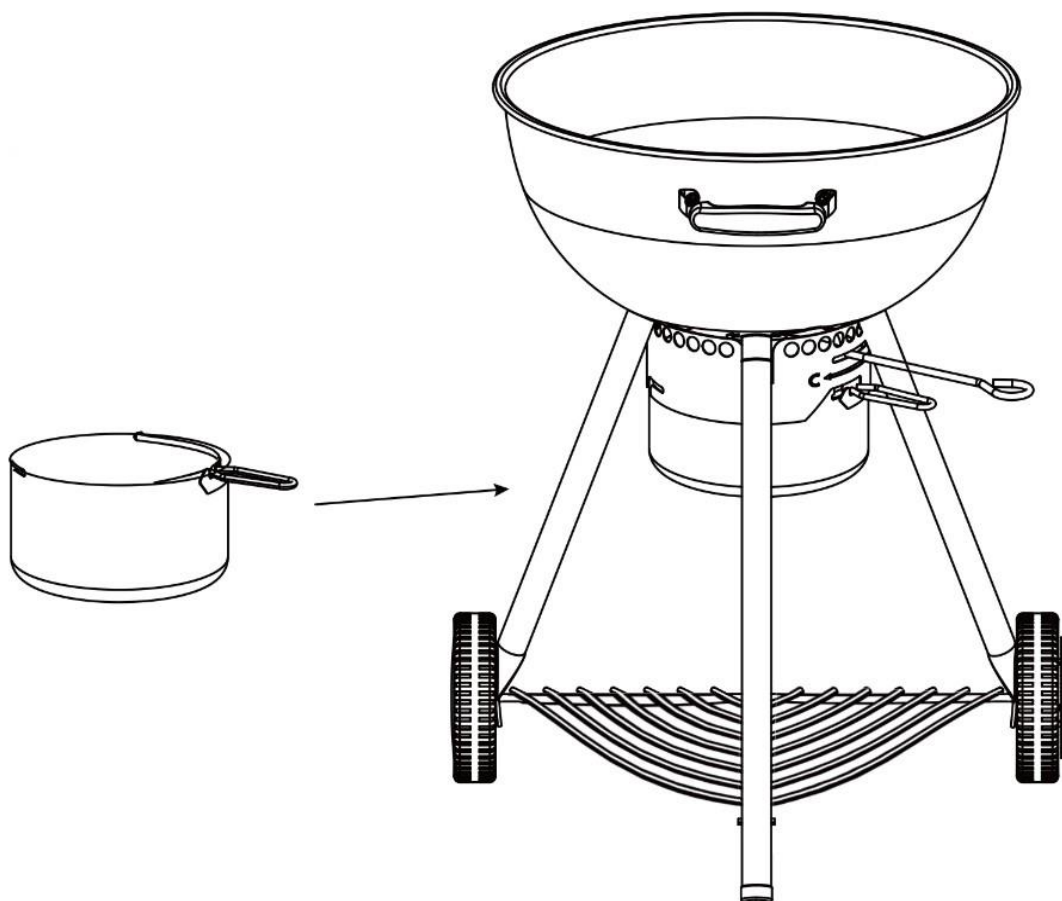 

13

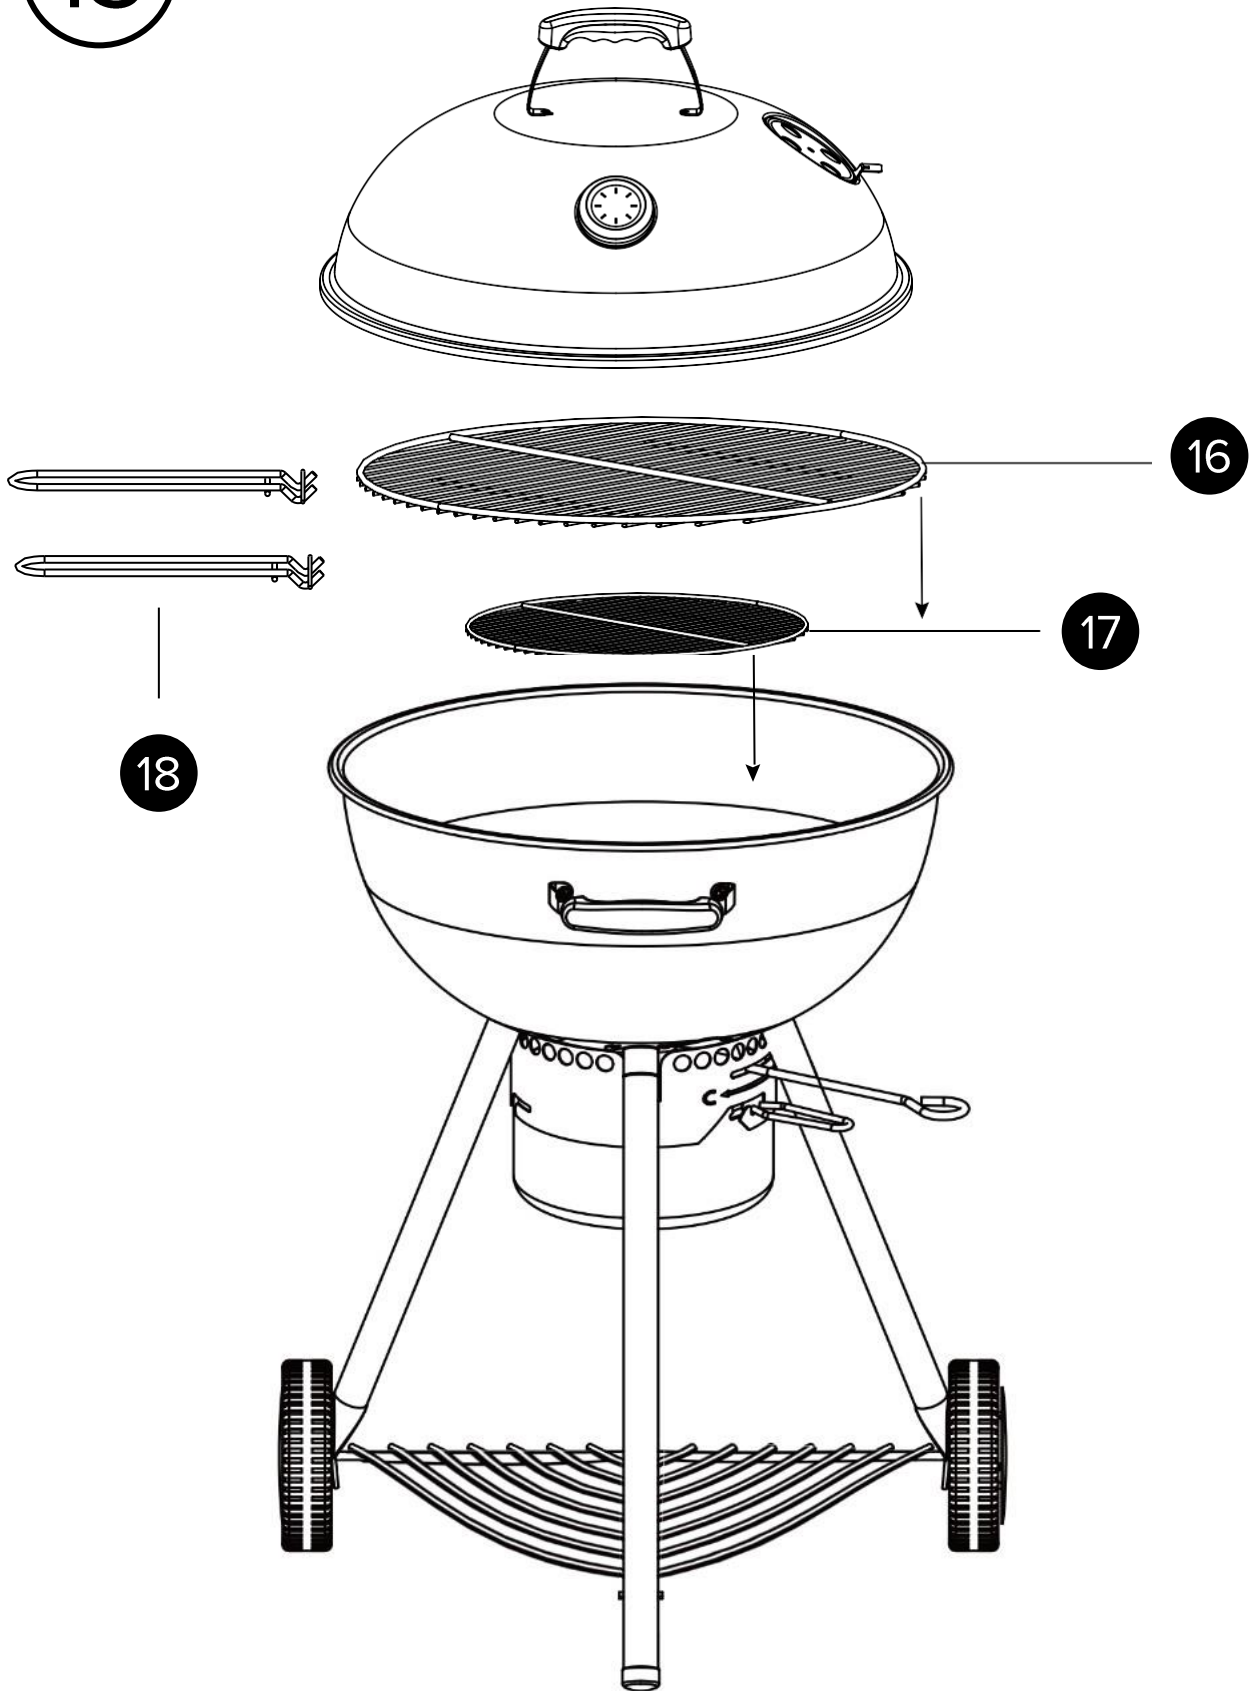 

INSTALLATION FINAL CHECKLIST


- ✓ Minimum clearance from the sides and back of the unit to combustible constructions is 36 in. (91cm) from the sides and 36 in. (91cm) from the back.
- ✓ All internal packaging removed.
- ✓ Removed all packaging, including straps, before using the braai.
- ✓ All screws, nuts and bolts are tight.
- ✓ Unit is stable and level.

WHEW,

We feel much better knowing you're safer for having taken the time to go through that first section thoroughly.

Now, let's get on with putting your Megamaster braai together so you can unleash your inner kebab/pesto mushrooms / gourmet boerie roll rock star!

CAUTION: DO NOT LEAVE THE BRAAI UNATTENDED WHILE COOKING.

 **Warning:** Please read the following instructions carefully before attempting to assemble, operate or install the product. The charcoal kettle becomes extremely hot and can cause burning. Failure to comply with these instructions may result in serious bodily injury.

How to use your charcoal kettle

Before light

1. Choose a proper location to grill
2. Only use this charcoal kettle in a well-ventilated area. Do not use in a garage, building, breezeway, or any other enclosed area.
3. Keep the charcoal kettle on a secure, level surface at all times.
4. Do not use charcoal kettle within five feet of any combustible material. Combustible materials include, but are not limited to, wood or treated wood decks, patios, and porches.

Preparing the charcoal kettle for lighting

1. Remove the lid and position it on the side of your charcoal kettle using the lid hook located on the inside of the lid.
2. Remove the cooking (top) grate from your charcoal kettle.
3. Remove the charcoal (bottom) grate and clear ashes or chunks of old charcoal from the bottom of the bowl. Charcoal requires oxygen to burn, so be sure that nothing clogs the vents.
4. Release the ash catcher, then dispose of the ashes.
5. Open bowl vent by moving the handle to the open position.
6. Replace charcoal (bottom) grate.

Lighting Charcoal

1. Light the charcoal using fire lighters or newspaper.
2. For best results, use Megamaster Rhino Balls.



Cleaning

Follow a few basic maintenance instructions to keep your grill looking and grilling better for years to come!

- For proper air flow and better grilling, remove accumulated ashes and old charcoal from the bottom of the kettle and the ash catcher before use. Make sure that all of the charcoal is fully extinguished and the grill is cool before doing so.
- You may notice "paint-like" flakes on the inside of the lid. During use, grease and smoke vapors slowly oxidize into carbon and deposit on the inside of your lid. Brush the carbonized grease from the inside of the lid with a stainless steel bristle grill brush. To minimize further build-up, the inside of the lid can be wiped with a paper towel after cooking while the grill is still warm(not hot).
- If your grill is subject to a particularly harsh environment, you will want to clean the outside more often. Acid rain, chemicals and salt water can cause surface rusting to appear. Megamaster recommends wiping down the outside of your grill with warm soapy water. Follow up with a rinse and thorough drying.
- Do not use sharp objects or abrasive cleaners to clean the surfaces of your grill.

Storage and Rust Prevention

- Store your charcoal grill when not in use. Store your charcoal grill in areas free of moisture and humidity, Do not leave your charcoal grill out in direct sunlight or rain exposure.
- Keep your charcoal grill safe by purchasing a protective cover. The charcoal grill will sweat under the cover so check periodically to make sure it is not rusting.
- Polishing or swiping the charcoal grill with baby oil will help prevent rust by forming a thin protective layer on the steel.
- Coastal regions are more prone to rust, so it is advised to take extra precaution and check you charcoal grill regularly for sings of rust.
- Rust spokes can be cleaned using a good quality brush or stainless steel cleaner, check your local Megamaster retailer for our range of cleaning products.

PROBLEM	SOLUTION
When attempting to light my braai, the flames die out.	Make sure all the vents are open and bottom bowl is free of ash.
How do I add charcoal when cooking?	Using the grid lifters supplied, lift the cooking grid and add the charcoal.
How long to preheat the grill?	Preheating your grill with the lid closed for 10 to 15 minutes prepares the cooking grate. With all of the charcoal glowing red, the temperature under the lid should reach 260° C
Oil the food - not the grate	Oil prevents food from sticking and also adds flavor and moisture. Lightly brushing or spraying the food with oil works better than brushing the grate.

WARRANTY



The manufacturer warrants to the original consumer-purchaser only that this product shall be free from defects in workmanship and materials after correct assembly and under normal and reasonable home use for the periods indicated below beginning on the date of purchase. The manufacturer reserves the right to require photographic evidence of damage, or that defective parts be returned, postage and/or freight pre-paid by the consumer, for review and examination. Megamaster obligation is limited to repair, replacement, or depreciated value, at the option of Megamaster.

•ALL PARTS: 1 year *LIMITED* warranty (Includes, but not limited to, frame, housing, cart) **Does not cover chipping, scratching, cracking surface corrosion, scratches or rust.*

Upon consumer supplying proof of purchase as provided herein, Manufacturer will repair or replace the parts which are proven defective during the applicable warranty period. Parts required to complete such repair or replacement shall be free of charge to you except for shipping costs, as long as the purchaser is within the warranty period from the original date of purchase. Reasonable proof of your date of purchase. The original consumer-purchaser will be responsible for all shipping charges of parts replaced under the terms of this limited warranty. This limited warranty is applicable in South Africa only, is only available to the original owner of the product and is not transferable. Manufacturer requires, you should retain your sales receipt and/or invoice. If the unit was received as a gift, please ask the gift-giver to send in the receipt on your behalf, to the below address. Defective or missing parts subject to this limited warranty will not be replaced without registration or proof of purchase. Missing parts needs to be reported within 7 days of purchase. This limited warranty applies to the functionality of the product **ONLY** and does not cover cosmetic issues such as scratches, dents, corrosions or discoloring by heat, abrasive and chemical cleaners or any tools used in the assembly or installation of the appliance, surface rust, or the discoloration of stainless steel surfaces. Surface rust, corrosion, or powder paint chipping on metal parts that does not affect the structural integrity of the product is not considered a defect in workmanship or material and is not covered by this warranty. This limited warranty will not reimburse you for the cost of any inconvenience, food, personal injury or property damage. If an original replacement part is not available, a comparable replacement part will be sent. You will be responsible for all shipping charges of parts replaced under the terms of this limited warranty.

MANUFACTURER WILL NOT PAY FOR:

- Service calls to your home.
- Repairs when your product is used for other than normal, single-family household or residential use.
- Damage resulting from accident, alteration, misuse, lack of maintenance/cleaning, abuse, fire, flood, acts of God, improper installation, and installation not in accordance with electrical or plumbing codes or misuse of product.
- Any food loss due to product failures.
- Replacement parts or repair labor costs for units operated outside South Africa.
- Pickup and delivery of your product.
- Postage fees or photo processing fees for photos sent in as documentation.
- Repairs to parts or systems resulting from unauthorized modifications made to the product.
- The removal and/or reinstallation of your product.
- Shipping cost, standard or expedited, for warranty/non warranty and replacement parts.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

Repair or replacement of defective parts is your exclusive remedy under the terms of this limited warranty. Manufacturer will not be responsible for any consequential or incidental damages arising from the breach of either this limited warranty or any applicable implied warranty, or for failure or damage resulting from acts of God, improper care and maintenance, grease fire, accident, alteration, replacement of parts by anyone other than manufacturer, misuse, transportation, commercial use, abuse, hostile environments (inclement weather, acts of nature, animal tampering), improper installation or installation not in accordance with local codes or printed manufacturer instructions.

THIS LIMITED WARRANTY IS THE SOLE EXPRESS WARRANTY GIVEN BY THE MANUFACTURER. NO PRODUCT PERFORMANCE SPECIFICATION OR DESCRIPTION WHEREVER APPEARING IS WARRANTED BY MANUFACTURER EXCEPT TO THE EXTENT SET FORTH IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTY PROTECTION ARISING UNDER THE LAWS OF ANY STATE, INCLUDING IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, IS HEREBY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Neither dealers nor the retail establishment selling this product has any authority to make any additional warranties or to promise remedies in addition to or inconsistent with those stated above. Manufacturer's maximum liability, in any event, shall not exceed the documented purchase price of the product paid by the original consumer. This warranty only applies to units purchased from an authorized retailer and or re-seller.

If you wish to obtain performance of any obligation under this limited warranty, you should write to:

Megamaster Customer Service

PO Box 15, Woodlands, 0072, South Africa

*All consumer returns, parts orders, general questions, and troubleshooting assistance can be acquired by calling **010 001 6342** or sending an e-mail to **service@megagroup.co.za***

THANK YOU.

You are now a Megamaster manual pro!
Get out there and enjoy making your braaing
experience even better.

For great inspiration and recipes to use your braai, check out
the recipe pages on our website **www.megamaster.co.za**

Finally, don't forget to keep this manual in a safe place for
future reference.