



Congratulations on the purchase of your new RAVE Sports Wakeboard! To get on the water and enjoy your wakeboard as soon as possible, follow these tips for attaching the fins and bindings.


HOW TO ATTACH FINS

1. Locate the two fins, four stainless steel screws, and four washers enclosed in the RAVE Sports wakeboard package and the pre-drilled holes on the bottom of your wakeboard that match the width of pre-drilled holes in the fins.
2. Position the fins on the bottom of the wakeboard with the wide end of the fin towards the edge of the wakeboard and the holes touching the bottom of the wakeboard, aligning them with the holes in the wakeboard.
3. With a hand screwdriver, attach the screws and washers from the top of the wakeboard into the holes in the fins, tightening until hand tight and the fin is snug against the wakeboard.

HOW TO ATTACH BINDINGS

Note: Proper stance (determined by the width between each binding and the angle at which each binding is placed) is key to minimizing strain and impact on your knees, and changes with the skill level and personal preference of each wakeboarder. Your RAVE Sports Wakeboard includes pre-drilled top holes in groups of four to allow the bindings to be placed at an individualized width and angle.

1. Locate the two boot bindings and four Easy-Grip locking screws included in your RAVE Sports wakeboard package and set them on the top of the wakeboard near the pre-drilled holes in the center of the wakeboard. Place the bindings at a width according to your size and skill level (beginner wakeboarders usually set the bindings at slightly wider than shoulder width).
2. Your RAVE Sports wakeboard bindings are pre-attached to plates with many open grooves so that they can be attached to the wakeboard with the Easy-Grip locking screws at an angle suited to individual choice. Depending upon your skill level, set the bindings to angle out or with your back foot straight-on (see illustration below). Insert an Easy-Grip locking screw into a groove on each side of the two bindings and align with a pre-drilled hole on the top of the wakeboard according to the angle you desire. Twist down by hand until tight and the bindings are secure.

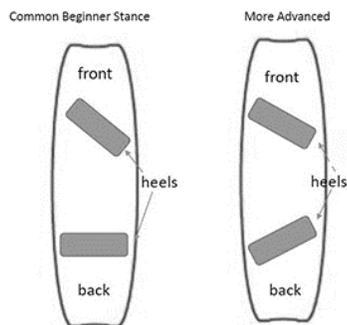

Congratulations! Your RAVE Sports wakeboard is now ready to enjoy.

For more information including links to our YouTube channel with how-to videos, visit www.ravesports.com