

# ChargeTime™

 
## USER GUIDE




*Keeping Your World Connected™*

MODEL: TA-7830US-A00

## LOCATION & DESCRIPTION OF CONTROLS

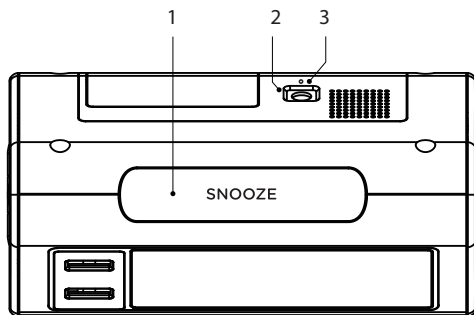


 - ① SNOOZE button
- ② DC Power jack
- ③ DC Power lock screw hole

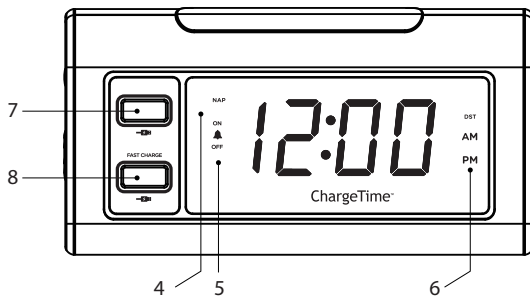


- ④ NAP indicator
- ⑤ ALARM ON / OFF indicator
- ⑥ AM / PM / DST time indicator
- ⑦ USB 1A Charger
- ⑧ USB 2.1A "Fast Charge"

## LEFT VIEW

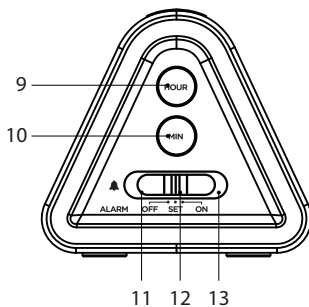 

- 9 HOUR SETTING
- 10 MINUTE SETTING
- 11 ALARM OFF
- 12 ALARM SET
- 13 ALARM ON

## RIGHT VIEW

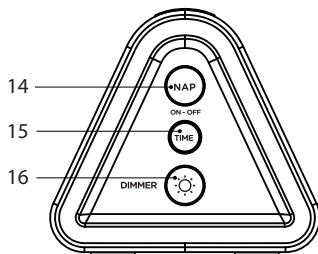 

- 14 NAP ON / OFF
- 15 TIME
- 16 DIMMER



## INSIDE THE BOX

TA-7830US-A00 Clock, Interchangeable AC power adapter (with US), Screws (4X), Plastic wall plug, Security tether, DC power jack lock and AAA batteries (2X).



## TURNING ON THE CLOCK

1. Plug the AC power adapter into the wall socket
2. Plug the DC power jack into the DC socket at the back to turn the unit on.
3. Secure the DC power jack with screw into the DC power lock screw hole.
4. When the clock is powered on, press the TIME button to stop the display from flashing and to set the time.

\* Unscrew the DC jack and unplug it in order to turn the unit off.

\* A 1.5m security tether is provided. Screw one side to the clock and the other side to a securely tether to furniture or wall.



## SETTING THE TIME

1. Press and hold the TIME button and SNOOZE together for 3 seconds, the display will flash.
2. Set the year by pressing HOUR / MINUTE buttons, then press TIME button to confirm
3. Set the month by pressing HOUR / MINUTE buttons, then press TIME button to confirm
4. Set the date by pressing HOUR / MINUTE buttons, then press TIME button to confirm
5. Set Auto-DST feature to on or off by pressing HOUR / MINUTE buttons, then press TIME button to confirm
2. Press HOUR setting to set hours
3. Press MINUTE setting to set minutes
4. To press TIME button again for confirmation

NOTE: If during the time set no key is pressed for 10 seconds, the previous time will be automatically stored.

NOTE: When Auto-DST is enabled, the time will automatically be adjusted at 2:00AM on the designated date (based on US standard) one hour forward in the spring and one hour back in the fall.



## ADJUSTING THE BRIGHTNESS

There are three (3) levels of display brightness. Repeatedly press the Snooze/Dimmer button to select the desired setting.



## SETTING THE ALARM AND SNOOZE TIME

1. Slide the switch to alarm SET, the time display will flash.
2. Press HOUR and/or MINUTE button to set the wake up time.
3. Slide the switch to alarm ON to confirm the alarm time. The alarm LED will light up confirming that alarm is set.
4. Press and hold SNOOZE for 3 sec to set the snooze time (5/10/15 min).
5. Press SNOOZE again to confirm the snooze setting.

## TURNING OFF THE ALARM

1. To silence the alarm with snooze, press the SNOOZE button. The alarm will stop, and will sound again after 5/10/15 minutes (based on the snooze time setting). The alarm indicator will flash.
2. To turn the alarm off slide the switch to OFF.

NOTE: Sliding the alarm switch to OFF, the alarm will be turned off and will not go off the next day.



## NAP FUNCTION

To set the nap function to wake after a short period of time:

1. Press the NAP button to select the desired nap times between 15-90 minutes or OFF. The indicator for nap will light up.
2. To stop the alarm, press SNOOZE or NAP button



## BACKUP BATTERY INSTALLATION

Two (2) 'AAA' batteries are used to back-up clock and alarm time settings and are included with the unit.

1. Remove screws to remove the battery door cover.
2. Insert (2) 'AAA' batteries.
3. Replace the battery door and screw back in place to secure.

Note: The batteries are used to backup the clock and alarm times when the AC adapter is disconnected or there is a power failure. When replacing the batteries, do not disconnect the AC power adapter, otherwise the current time and alarm will be erased.

## BACKUP SYSTEM

All settings are memorized, however, the clock time could occasionally need to be readjusted.

In case of power failure. If backup batteries are not installed, the screen will be flash to indicate this power failure and the necessity to redo your setting



## DUAL USB CHARGING PORTS

This device includes two USB ports. The USB ports support powering and charging most devices including iPhone, iPad, iPod, Android devices, e-readers, digital cameras and more (USB cables sold separately).

The USB ports supply 5V/1A and 5V/2.1A respectively.



## BATTERY PRECAUTIONS

Follow these precautions when using the batteries in this device:

1. Warning - Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated. A reversed battery may cause damage to the device.
4. Do not mix different types of batteries together (e.g Alkaline, Rechargeable, and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge a battery not intended to be recharged - it can overheat and rupture.





## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).  
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**FCC WARNING:** This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. The manufacture is not responsible for any radio or TV interference caused by unauthorized modifications to the equipment. Such modifications could void the user's authority to operate the equipment.

**ATTENTION:** POUR ÉVITER LES CHOC ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE  
ANS LA BORNE CORRESPONDANTE DE LA PRISES ET POUSSER JUSQU'AU FOND.

# SAFETY PRECAUTIONS

- Do not expose this unit or the AC/DC adapter to dripping or splashing water. Keep liquid-filled objects, such as vases, away from this unit and AC/DC adapter.
- To ensure that this unit is completely disconnected, unplug it from the wall.
- Ensure that the AC/DC adapter is easily accessible.
- Please note the information printed underneath the unit.
- Batteries should not be exposed to excessive heat such as direct sunshine, fire, etc.
- Do not impede the ventilation of this unit by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- Keep open flames, such as lighted candles, away from this unit.
- Do not place this unit in closed bookcases, racks, or other spaces without proper ventilation.
- Use only the same or equivalent type batteries as there is a danger of explosion if the incorrect batteries are used or they are installed incorrectly.
- Dispose of batteries properly according to environmental regulations.

# IMPORTANT SAFETY PRECAUTIONS

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Compliance information:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**SURGE PROTECTORS:** It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

CAN ICES-3 (B) / NMB-3 (B)

## Specification

1. Power Adapter AC input: 100-240V 50-60Hz
2. Power Adapter DC output: 5V, 3.5A
3. Battery Backup: 2 x 1.5V "AAA" size batteries (Battery included)
4. USB Jack DC output: 5V/1A x 5V/2.1A

## CONTACT DETAILS

### Europe

TeleAdapt Limited  
Axis 5  
Rhodes Way  
Watford  
WD24 4YW  
United Kingdom  
Tel: +44 (0)1923 810200

### Asia

TeleAdapt HK, Ltd  
Unit G, 15/F, Block 2  
Leader Industrial Center  
No. 188-202 Texaco Road  
Tseun Wan  
Hong Kong  
Tel: +852 2780 9020

### Americas

TeleAdapt Inc  
1315 Greg Street  
Suite 110  
Sparks  
NV 89431  
USA  
Tel: +1 775 355 8585

### Website

For information on other  
TeleAdapt products designed  
for the hospitality industry,  
including specification  
and cut sheet downloads,  
please visit our website at:  
[www.teleadapt.com](http://www.teleadapt.com)

### Middle East

TeleAdapt Limited  
Dubai Media City  
Thuraya Tower 1  
Office 1008  
PO Box 500344  
Dubai  
UAE  
Tel: +971 367 8283



*Keeping Your World Connected™*

[www.teleadapt.com](http://www.teleadapt.com)