


#### ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

### **TEAK BOK OUTDOOR DINING TABLE**

CODE	DESCRIPTION
10269	TEAK BOK OUTDOOR DINING TABLE 162/80/76
10270	TEAK BOK OUTDOOR DINING TABLE 200/100/76
10271	TEAK BOK OUTDOOR DINING TABLE 250/100/76
10272	TEAK BOK OUTDOOR DINING TABLE 300/110/76

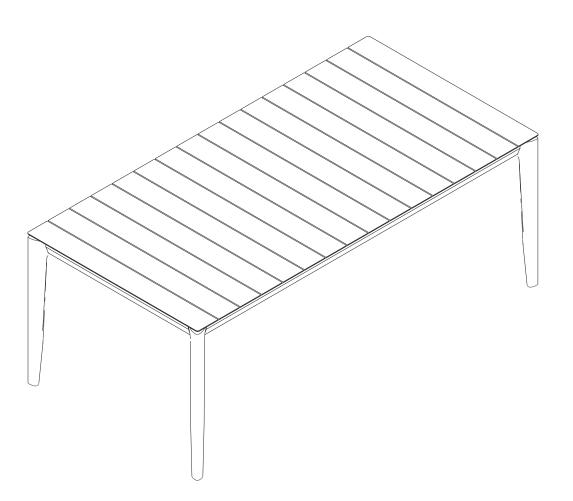



#### TEAK BOK OUTDOOR DINING TABLE ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

#### **NOTE**



- CAREFULLY OPEN THE CARTON,
- REMOVE CONTENTS AND LAY OUT ON CARPET OR THE PACKAGING CARTON BOX OR OTHER PROTECTIVE SURFACE TO AVOID DAMAGE.
- CHECK PACKAGE CONTENTS TO ASSURE ALL THE NECESSARY HARDWARE AND PARTS ARE RECEIVED UNDAMAGED.
- DO NOT USE DAMAGE OR DEFECTIVE PARTS/HARDWARE.
- CONTACT ETHNICRAFT FOR ANY MISSING PART AND /OR HARDWARE.




- READ THE ASSEMBLY INSTRUCTION BEFORE INSTALLATION AND CAREFULLY FOLLOW THE INSTRUCTION GIVEN.
- SEEK THE ADVICE OF A PROFESSIONAL IF YOU ARE NOT FAMILIAR WITH THESE INSTALLATIONS OR HAVE ANY DOUBTS ABOUT THE SAFETY OF THIS INSTALLATION.



IT IS ADVISABLE TO DO THIS ASSEMBLY WITH MINIMUM OF 2 PERSONS.

#### **PARTS TO ASSEMBLE**

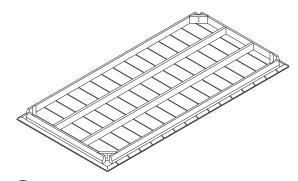

(A) TABLE TOP 1 piece

CODE	DESCRIPTION
P1042	TABLE TOP 162x80
P1010	TABLE TOP 200x100
P1011	TABLE TOP 250x100
P1014	TABLE TOP 300x110

#### **HARDWARE ENCLOSED**









H2036 SPRING WASHER M6 (8pcs)



#### (B) LEG (INTERCHANGEABLE) 4pieces

CODE	DESCRIPTION	
P1012	LEG FOR 162 & 200 LENGTH	
P1013	LEG FOR 250 & 300 LENGTH	

#### **TOOL** (Included in packaged)



#### **SYMBOLS**



DIRECTION



NUMBER OF PERSONS NEEDED





# Ethnicraft

## TEAK BOK OUTDOOR DINING TABLE ASSEMBLY INSTRUCTIONS FOR DINING TABLE INSTALLATION

