

ADVENTURER PORTABLE CHARCOAL BRAAI

Assembly & operating instructions



This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.

Read these instructions and warnings carefully so as to familiarize yourself with the appliance before operating the appliance.

Keep this manual for future reference.

megamaster™
TOGETHER, MADE BETTER™



Questions, problems, missing parts?

Before returning to your retailer, call our Customer Service Department at Tel:

+27 (0)12 802 1515, CAT,

Monday - Thursday: 07:30 – 17:00

Friday: 07:30 – 14:00

Or send us an E-mail at

service@megagroup.co.za or visit us

online at: www.megamaster.co.za

THIS MANUAL IS DESIGNED TO FIT INTO THE BOTTOM DRAWER, BUT THAT'S NOT WHERE IT BELONGS

We get it. You've just unboxed your Megamaster Adventurer Charcoal Braai and you can't wait to fire it up.

At Megamaster, we believe anything worth doing is worth doing well. That's why, as with all of our products, we've put a lot of thought and effort into this user manual. It really is the first step towards making your time with friends, family truly better.

Manufactured in China. Distributed by Megamaster
+27 (0)12 802 1515 PO Box 15, Woodlands, 0072, South Africa
www.megamaster.co.za

megamaster
TOGETHER, MADE BETTER



At Megamaster, we understand that the warmth of the flames is really the warmth of human connection. And that the more we kindle it, the brighter it burns. Times may change. Technology may come or go. But there will always be one real and meaningful place for us to gather. For hugs. For smiles. For literally laughing out loud. Where our hearts and mind are free because we have everything we truly need.

We believe that, in those moments, it’s more than a fire. It’s together made better.

Safety warnings	4
Care and maintenance	5
Parts list	6
Assembly	7
Instruction for use	8
Warranty	9



Warning: Whilst every effort has been made to remove any sharp edges in the manufacture of your Adventurer Charcoal Braai, care should be taken in handling of the product, to avoid any accidental injury.

- Make sure the assembly instructions have been followed correctly.
- Always stand your Adventurer Charcoal Braai outdoors and on level ground. Ensure there is at least 1 metre clearance around all sides of the braai. Keep away from fences, over hanging branches and other combustible materials. The base of the braai will get hot, so ensure it stands on a suitable surface.
- Use charcoal or briquettes and a suitable surface.
- Do not cook before the charcoal or briquettes have a coating of ash.
- **WARNING!** This braai will become very hot, do not move it during operation. Allow the braai to cool before moving.
- **Do not use indoors.**
- **WARNING!** Do not use spirits or petrol for lighting or relighting! Use firelighters.
- **WARNING!** Keep children and pets away.
- Do not attempt to light the fire if lighting fluid has been spilt over clothing.
- Do not try to re-light the fire with lighting fluid as the charcoal may still be hot and cause a flare-up.
- Do not attempt to move the braai once it has been lit.
- Flame-ups can occur if hot fat drips onto the burning charcoal. Keep a water sprayer handy to extinguish the flame.

Charcoal or Briquettes & Firelighter Blocks:


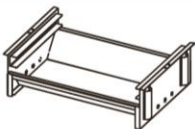



- Place three or four firelighter blocks in the centre of the charcoal grate and light with a match or long safety lighter.
- Place pieces of charcoal/briquettes around each burning block.
Add more charcoal/ briquettes as required, in a pyramid formation.
- When the fuel used is burning, spread coals out evenly. The fire should be ready when the flames and smoke have died down and an even grey ash is visible by day, or an even red glow is visible by night.
- Make sure that the cooking grill is securely fitted to the grill supports so that the cross bar supports lock behind the retaining edges.
- Small quantities of charcoal/briquettes may be added prior to cooking to extend cooking time.
- To help prevent food sticking, apply a thin coating of cooking oil on the grill prior to cooking.
- **ALWAYS WEAR HEAT RESISTANT GLOVES WHEN HANLING THE BRAAI.**



- It is not advisable to completely fill the fire bowl with charcoal/briquettes as the braai may become far too hot to cook successfully. As a guide a 3kg bag of charcoal/briquettes in a 43cm diameter braai should last for at least two full braais.
- If the fire flares up due to dripping fat then douse the flames lightly with a fine water spray.
- When you have finished using the braai, never pour cold water directly on the coals to extinguish them as this may damage your Adventurer Charcoal Braai. Use old cinders, sand or a fine water spray.
- Empty the bottom ash tray when it has completely cooled.
- To clean your braai, soak the cooking grill and tools in hot soapy water as soon as possible after use. Dry thoroughly and store in a dry place. Do not leave your Adventurer Charcoal Braai outside, unprotected from the weather.

PARTS LIST



		
<p>① cooking grid</p>	<p>② fire bowl</p>	<p>③ grid handles</p>
		
<p>④ leg</p>	<p>⑤ side tables</p>	

LET'S UNFOLD TOGETHER



Step 1:

Attach legs (4) to fire bowl (2).

Step 2:


Place cooking grid (1) onto the fire bowl (2).

Step 3:

Attach the braai handles (3) to the cooking grid (1).

Step 4:

Attach the side tables (5) to the side of the fire bowl (2).

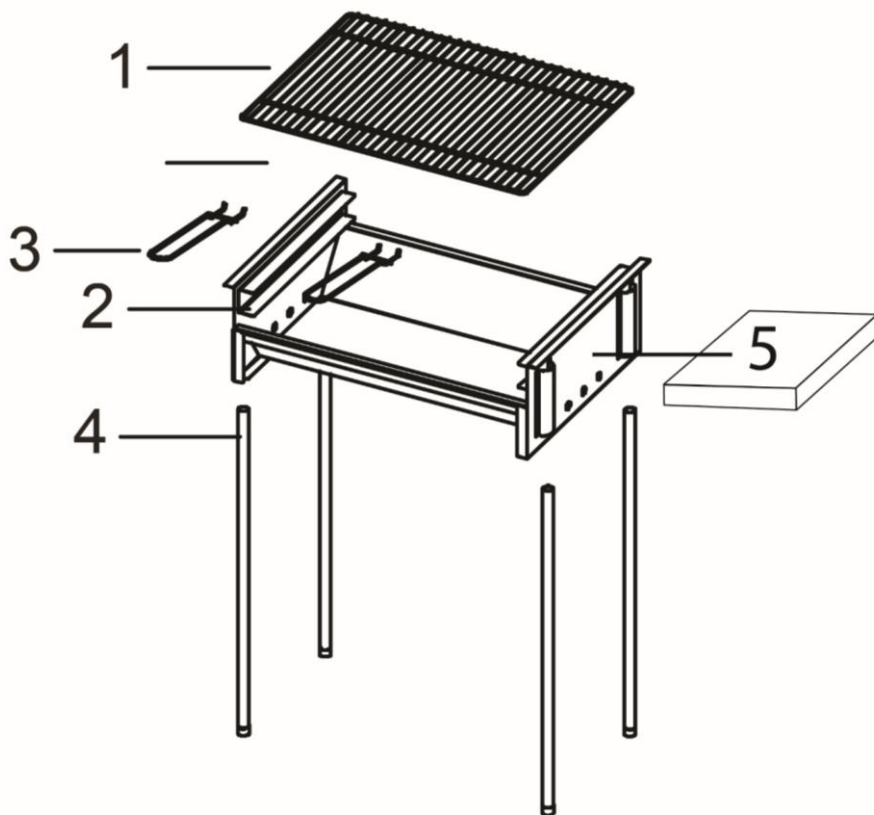

- Make sure the assembly instructions have been followed correctly.
- Set the appliance up in a suitable position, on a level surface away from areas likely to catch fire. The base of the appliance will get hot so ensure it stands on a suitable surface.
- Use charcoal and a suitable lighting method:

Method 1- Lighting Blocks

- Set up your braai in a safe place. Place enough charcoal in the bowl to a depth of 3-5 cm.
- Taking care not to spill any liquid/gel onto your hands or clothes. Apply carefully the lighting fluid/gel over the charcoal.
- If using lighting fluid, wait for 30 seconds to allow the liquid to soak into the charcoal.
- Do not light the charcoal if you have spilt fluid or gel onto your clothes. Light the charcoal using a long taper or safety lighter. The charcoal will then burn for a period with the flames.
- DO NOT squirt liquid onto burning charcoal.
- When flames die down check the charcoal is beginning to glow red, if your coals are going out you should open all vents and allow to cool down before trying to apply more liquids.

Method 2- Lighting blocks

- Place three or four lighting blocks in the centre of the appliance bowl and light with a match.
- Place pieces of charcoal around each burning block. Add more charcoal as required, in a pyramid formation.
- When burning is established, spread the fuel out evenly. After lighting, the fire should be ready for cooking in 30-40 minutes, or when even white ash is visible by day, or when an even red glow is visible by night.
- Make sure that the cooking grill is fully located into the grill supports so that the cross bar supports lock behind the retaining edges.

ALWAYS WEAR OVEN GLOVES WHEN HANDLING.

- Ensure there is at least 1 metre clearance around all sides of the braai, keep away from fences, over hanging branches and other combustible materials. Do not cook before the fuel has a coating of ash.

WARRENTY



The manufacturer warrants to the original consumer-purchaser only that this product (*Adventurer Charcoal Braai*) shall be free from defects in workmanship and materials after correct assembly and under normal and reasonable home use for the periods indicated below beginning on the date of purchase. The manufacturer reserves the right to require photographic evidence of damage, or that defective parts be returned, postage and/or freight pre-paid by the consumer, for review and examination. Megamaster obligation is limited to repair, replacement, or depreciated value, at the option of Megamaster.

•1 year LIMITED warranty (**Does not cover dropping, chipping, cracking, surface corrosion, scratches or rust.*)

Upon consumer supplying proof of purchase as provided herein, Manufacturer will repair or replace the parts which are proven defective during the applicable warranty period. Parts required to complete such repair or replacement shall be free of charge to you except for shipping costs, as long as the purchaser is within the warranty period from the original date of purchase. Reasonable proof of your date of purchase. The original consumer-purchaser will be responsible for all shipping charges of parts replaced under the terms of this limited warranty. This limited warranty is applicable in South Africa only, is only available to the original owner of the product and is *not transferable*. Manufacturer requires, you should retain your sales receipt and/or invoice. If the unit was received as a gift, please ask the gift-giver to send in the receipt on your behalf, to the below address. Defective or missing parts subject to this limited warranty will not be replaced without registration or proof of purchase. Missing parts needs to be reported within 7 days of purchase. This limited warranty applies to the functionality of the product **ONLY** and does not cover cosmetic issues such as scratches, dents, corrosion or discoloring by heat, abrasive and chemical cleaners or any tools used in the assembly or installation of the appliance, surface rust, or the discoloration of stainless steel surfaces. Surface rust, corrosion, or powder paint chipping on metal parts that does not affect the structural integrity of the product is not considered a defect in workmanship or material and is not covered by this warranty. This limited warranty will not reimburse you for the cost of any inconvenience, food, personal injury or property damage. If an original replacement part is not available, a comparable replacement part will be sent. You will be responsible for all shipping charges of parts replaced under the terms of this limited warranty.

MANUFACTURER WILL NOT PAY FOR:

- Service calls to your home.
- Repairs when your product is used for other than normal, single-family household or residential use.
- Damage resulting from accident, alteration, misuse, lack of maintenance/cleaning, abuse, fire, flood, acts of God, improper installation, and installation not in accordance with electrical or plumbing codes or misuse of product.
- Any food loss due to product failures.
- Replacement parts or repair labor costs for units operated outside South Africa.
- Pickup and delivery of your product.
- Postage fees or photo processing fees for photos sent in as documentation.
- Repairs to parts or systems resulting from unauthorized modifications made to the product.
- The removal and/or reinstallation of your product.
- Shipping cost, standard or expedited, for warranty/non warranty and replacement parts.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

Repair or replacement of defective parts is your exclusive remedy under the terms of this limited warranty. Manufacturer will not be responsible for any consequential or incidental damages arising from the breach of either this limited warranty or any applicable implied warranty, or for failure or damage resulting from acts of God, improper care and maintenance, grease fire, accident, alteration, replacement of parts by anyone other than manufacturer, misuse, transportation, commercial use, abuse, hostile environments (inclement weather, acts of nature, animal tampering), improper installation or installation not in accordance with local codes or printed manufacturer instructions.

THIS LIMITED WARRANTY IS THE SOLE EXPRESS WARRANTY GIVEN BY THE MANUFACTURER. NO PRODUCT PERFORMANCE SPECIFICATION OR DESCRIPTION WHEREVER APPEARING IS WARRANTED BY MANUFACTURER EXCEPT TO THE EXTENT SET FORTH IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTY PROTECTION ARISING UNDER THE LAWS OF ANY STATE, INCLUDING IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, IS HEREBY LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

Neither dealers nor the retail establishment selling this product has any authority to make any additional warranties or to promise remedies in addition to or inconsistent with those stated above. Manufacturer's maximum liability, in any event, shall not exceed the documented purchase price of the product paid by the original consumer. This warranty only applies to units purchased from an authorized retailer and or re-seller.

If you wish to obtain performance of any obligation under this limited warranty, you should write to:

Megamaster Customer Service

PO Box 15, Woodlands, 0072, South Africa

All consumer returns, parts orders, general questions, and troubleshooting

assistance can be acquired by calling 010 001 6342 or sending an e-mail to service@megagroup.co.za