



®

TWIN EAGLES, INC.

Defining the Art of Outdoor Cooking

SALAMANGRILL[®] BASE CART ASSEMBLY INSTRUCTIONS



TWIN EAGLES
13231 East 166th St.
Cerritos, CA 90605-1944
1(800) 789-2206
www.twineaglesbbq.com

MODEL TSGB-24

SAVE THIS INSTRUCTIONS FOR FUTURE REFERENCE

**NEED ASSISTANCE? PLEASE CALL:
(800) 789-2206**




PARTS CHECKLIST – SALAMANGRILL® BASE CART

NOTE:

Before assembling the base cart make sure you got all the parts listed on the table below. This is a list of all the parts that are shipped with the product, some are loose and some of them are already installed.

Item Number	Part Number	Part Description	Qty
1	12330	Handle bar, s/s (1" x 15 1/8" – 18 GA)	1
2	13113	Handle brackets	2
3	14125	Hex screws, s/s (Cap 1/4-20 x 1/2)	20
4	20770	Side shelf	1
5	14144	Philip screw, #10-32 x 1/2"	4
6	14409	Towel Ring	1
7	20769Y	Storage Drawer Assembly	1
8	14404	Caster with brakes	4
9	14129	Bushing, snap on	2
			Lbs.
Unit Weight (assembled)			70
Shipping Weight			85

For ordering parts, contact Twin Eagles. Toll free No. (800) 789-2206.

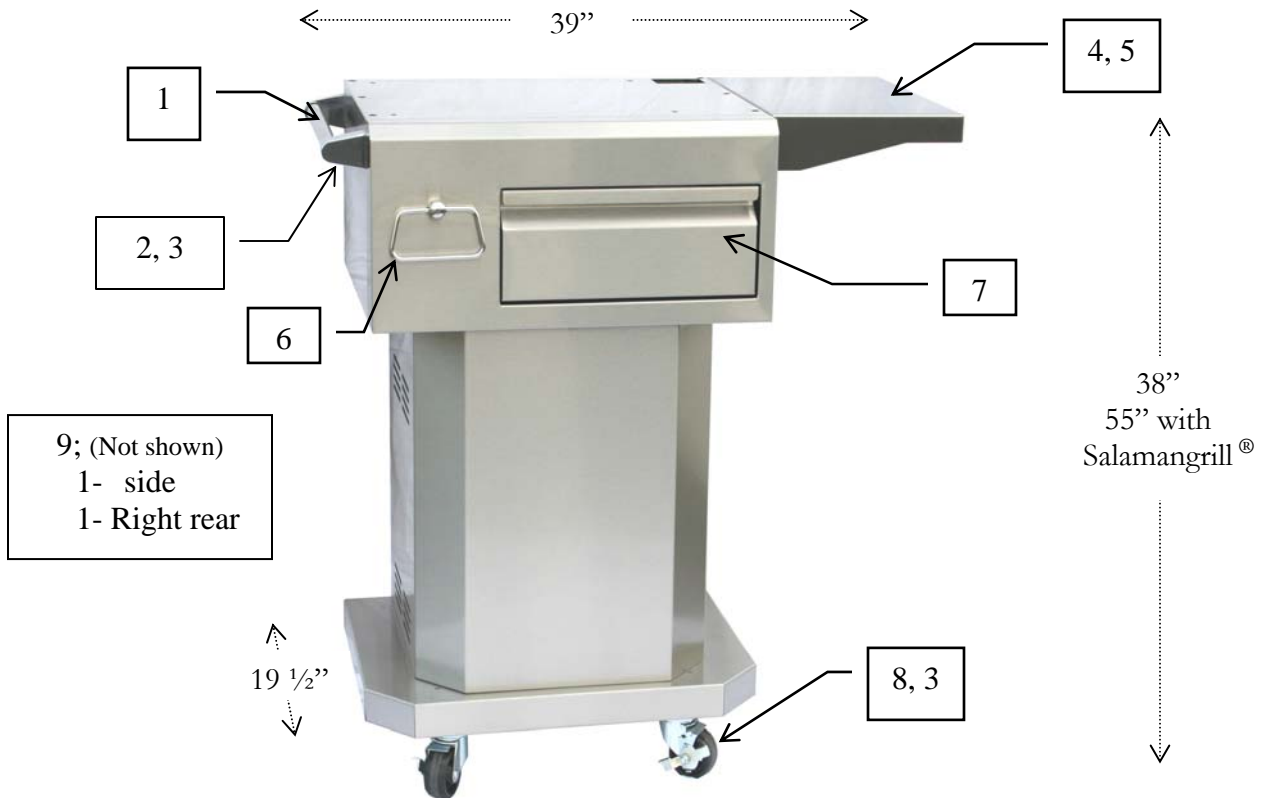

ASSEMBLY INSTRUCTIONS – SALAMANGRILL® BASE CART

NOTE:

- a. Twin Eagles Salamangrill Base Cart is shipped with the handle bar, side shelf and casters uninstalled to prevent any damage during shipping.
- b. Remove the protective plastic film from the components as you are assembling them.

1) HANDLE BAR:




- a. Remove the rear panel (4-philips heads screws).
- b. Bolt (11mm or $\frac{7}{16}$ ") on one of the handle brackets...slide in the handle bar...slide in the other bracket and bolt tight.

2) SIDE SHELF:

- a. Align the shelf to the 4 insert nuts and screw in snug, once all screw holes align, tighten them.

3) CASTERS:

- a. Turn the base cart up-side-down and bolt down a caster to the holes of the base bracket. Repeat for the other 3 casters. Turn the cart right-side-up.
- b. Lock and unlock the casters as shown on the bottom pictures (4b).

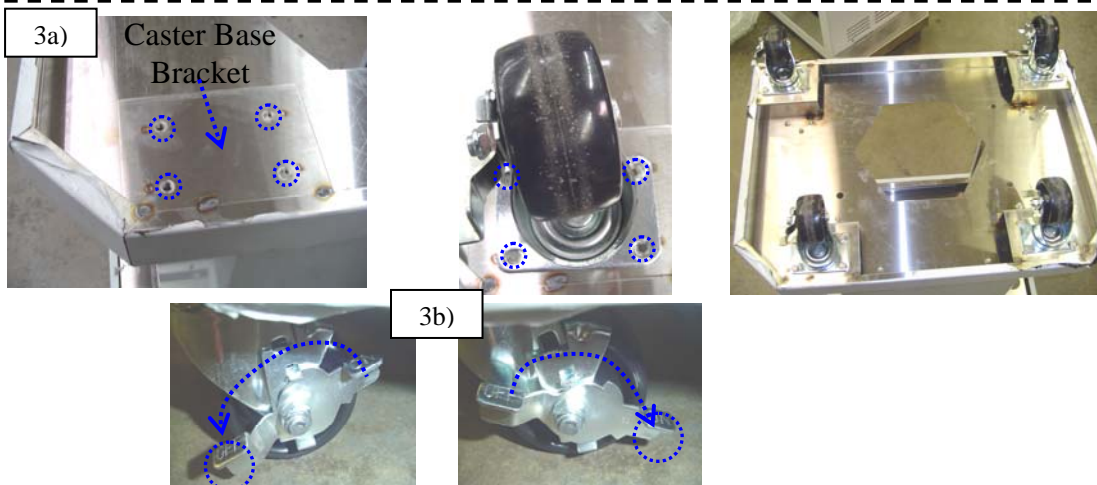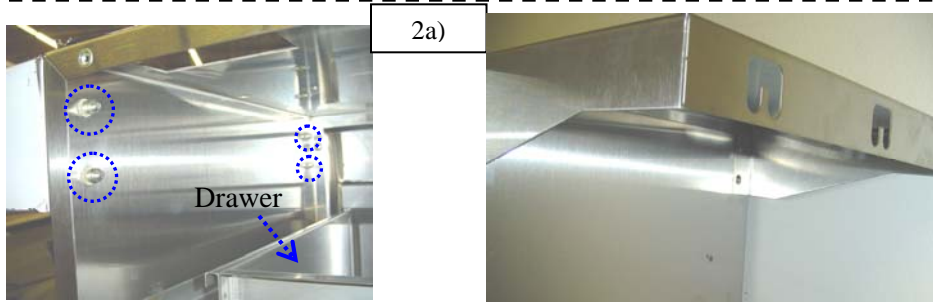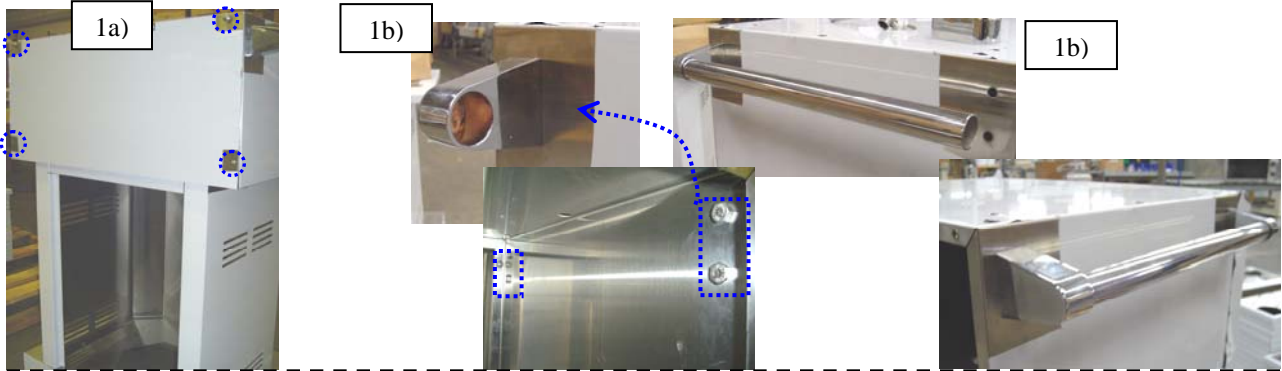

CONTINUE ON NEXT PAGE



INSTALLATION OF SALAMANGRILL® TO THE BASE CART

4) GAS INLET CHANGE:

Before installing the Salamangrill, the gas inlet must be relocated from the back to the bottom.

- a. Remove the back cover of the Salamangrill (6-philips heads screws plus 2 for gas inlet).
- b. Remove the 1” hole plug from the bottom hole and save it you will need it for rear hole.
- c. Bend the flex tubing from the rear direction to the bottom to match the bottom hole opening and screw in from the bottom using the philips screw that were taken off the back.
- d. Place the rear cover back on the unit and place all 6 screws back on. Snap in the 1” hole plug.

5) SALAMANGRILL MOUNTING:

- a. Completely remove the protective plastic film from the base cart top.
- b. Take off the 4 legs at the bottom of the Salamangrill by hand turning counter-clockwise. Careful not to damage the gas inlet fitting.
- c. Place the Salamangrill on the base cart and align it to the hole-pattern on the base cart top.
- d. Secure the Salamangrill onto the cart using the legs as screws. Screw on the 4 legs from the bottom up...push the drawer forward to create more arm room.
- e. Run the LP hose and regulator supplied through the hole of the base and connect to the Salamangrill. Connect regulator to LP tank and with the LP tank valve open conduct LEAK TEST using soapy water solution. If gas leak is found, re-tighten connection. Once no leak is found replace cart rear cover (4 screws).
- f. To turn on Salamangrill:
 - i. Open LP tank valve.
 - ii. Push and turn knob to HI. Push and hold igniter button for about 4 seconds or until burner is lit...you will hear continuous clicking.
 - iii. If burner does not ignite within 4 seconds turn off valve, wait for 5 minutes and repeat procedures.

