


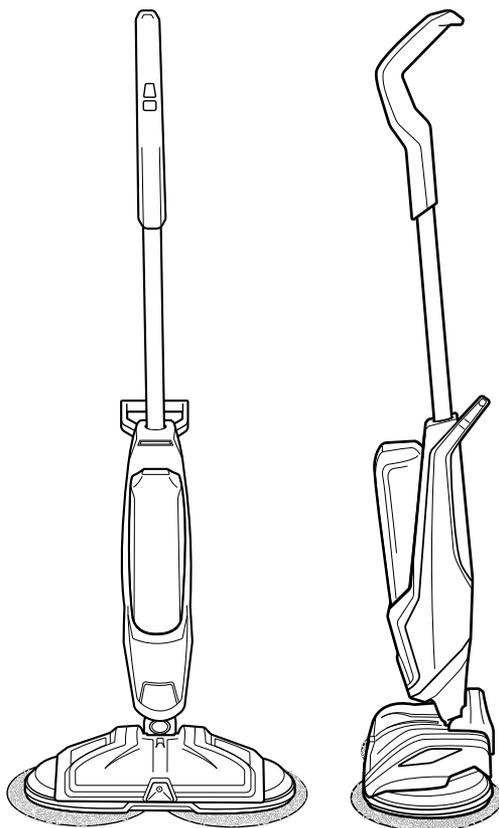

# SPINWAVE® CORDLESS

---

USER GUIDE  
2240F



# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



## WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » Unplug from electrical socket when not in use, before cleaning, maintaining, or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- » Do not immerse in water or liquid.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- » Do not use with damaged cable or plug.
- » If the charger supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- » Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- » The battery is to be disposed of safely.
- » This appliance contains batteries that are only replaceable by skilled persons.
- » Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- » Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- » Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- » This appliance contains batteries that are non-replaceable.
- » The battery must be removed from the appliance before it is scrapped.
- » Do not use with damaged cable or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- » Turn OFF all controls before unplugging.
- » Do not pull or carry charger by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- » Keep charger cable away from heated surfaces.
- » To unplug, grasp the charger plug, not the cable.
- » Do not handle charger plug or appliance with wet hands.
- » Battery pack and charger base output terminals are not to be short-circuited.
- » Do not charge the unit outdoors.
- » The appliance must be disconnected from the supply mains when removing the battery.
- » Do not recharge, disassemble, heat above 60°C, or incinerate.
- » Keep batteries out of reach of children.
- » Dispose of used batteries promptly.
- » Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- » Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energising appliance that have the switch on invites accidents.
- » Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- » Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.

- » Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- » Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- » Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- » Keep the temperature range of between 4-40°C when charging battery, storing unit or during use.
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » Use only as described in this user guide.
- » Use only manufacturer's recommended attachments.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorised service center.
- » Use extra care when cleaning on stairs.
- » Do not use appliance in an enclosed space filled with vapours given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapours.
- » Use indoors only.

## **SAVE THESE INSTRUCTIONS**

### **ORIGINAL INSTRUCTIONS. FOR OPERATION ON A 220-240 VOLT A.C. 50-60 HZ POWER SUPPLY ONLY.**

**THIS MODEL IS FOR HOUSEHOLD USE ONLY.**

### **IMPORTANT INFORMATION**

- » Keep appliance on a level surface.
- » To reduce the risk of a leaking condition, do not store unit where freezing may occur. Damage to internal components may result.

# Thanks for buying a BISSELL® SpinWave® Cordless

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your hard surface floor cleaner works as well as it does today for years to come, so this guide has tips on using, maintaining, and if there's a problem, troubleshooting.

Your cleaner needs a little assembly before getting to work, so flip to the 'Assembly' section on page and let's get started!

## What's In The Box?



Handle



Body of Unit



(4) Soft Touch Pads



(4) Scrubby Pads



Charging Adapter Plug



Storage Tray



236 mL BISSELL Multi-Surface Formula

**NOTE:** Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

Safety Instructions . . . . . 2

Product View & Assembly . . . 5

Formula . . . . . 6

Operations . . . . . 6-12

Maintenance & Care . . . . . 13-14




Troubleshooting . . . . . 15

Warranty & Service . . . . . 16

Product Registration . . . . . 16

# Product View


- 1 Handle
- 2 Digital Controls
- 3 Battery Status Indicator Lights
- 4 Clean Water Tank
- 5 Low Profile Foot
- 6 Power Spin Pads
- 7 Spray Nozzle
- 8 Charging Adapter Plug
- 9 Storage Tray
- 10 Carry Handle
- 11 Charging Port

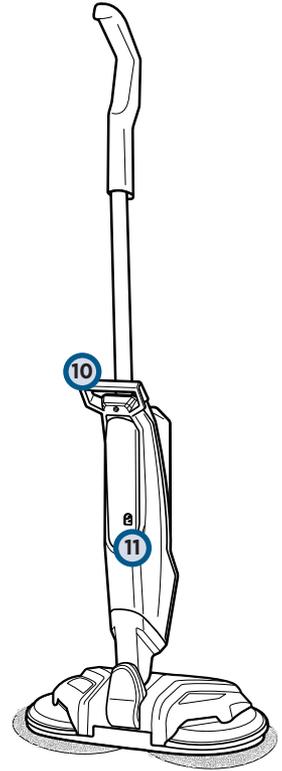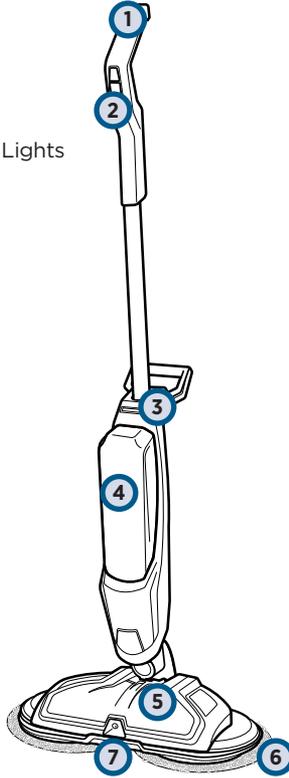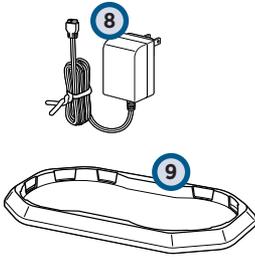

# Assembly

## WARNING

Do not plug in your SpinWave® Cordless until you are familiar with all instructions and operating procedures.

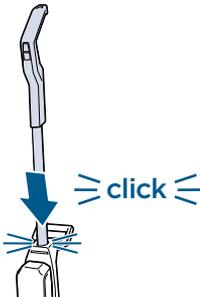

Insert handle into body of unit until you hear a "click".

# Cleaning Formulas

## **⚠️ WARNING**

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL® cleaning formulas intended for use with the hard floor device.


Keep plenty of SpinWave® Cordless formulas on hand so you can clean your sealed hard floors whenever it fits your schedule. Always use SpinWave® Cordless formulas in your machine. Other formulas may harm the machine and may void the warranty.

### **SPINWAVE® CORDLESS FORMULAS**

Multi-Surface Formula	Wood Floor Formula
Great for cleaning ALL sealed hard floors	Restore your sealed wood floors' natural shine


# Charging the Battery

**1**

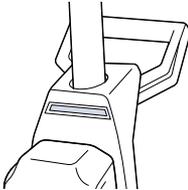

Before charging, make sure unit is OFF by ensuring the battery status indicator lights are not illuminated.

**2**

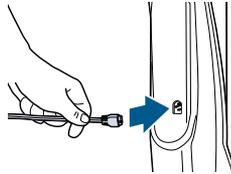

Insert the charging adapter plug into the charging port on the back, right side of the unit.

**3**



Plug the adapter into a suitable wall outlet. The battery status indicator lights will illuminate when charging.

**4**



For maximum run time, charge unit for 4 hours prior to use. Refer to chart on page 7 for understanding the charging status.

**NOTE:** On first use, make sure unit is fully charged before use. To check the battery status, turn the unit ON by pulling the Handle back and pressing the ON/OFF Button. Battery is fully charged when all three blue status lights are illuminated.

# In Use LED Display

 
 
## **WARNING**

Overcharging may cause battery damage, fire or explosion.

Your BISSELL® SpinWave® Cordless machine has an LED light display that will turn on when the ON/OFF Button is pushed to show the battery life status. All LED color is blue.

**TIP:** Be sure to charge unit when there is less than 10% power left and one LED flashing blue.



BATTERY STATUS	LIGHT STATUS
100% to 67%	
66% to 33%	
32% to 10%	
> 10%	
0%	

**NOTE:** Keep the temperature range between 40-104 °F when charging the battery, storing unit or during use.

# Attaching Mop Pads: Option 1

Your BISSELL® SpinWave® Cordless may have come with two different mop pads:




(4) Soft Touch Pads    (4) Scrubby Pads

The **Soft Touch Pad** is for everyday use on delicate flooring like sealed hardwoods and laminate.


The **Scrubby Pad** is used to power through tough, sticky messes.

1

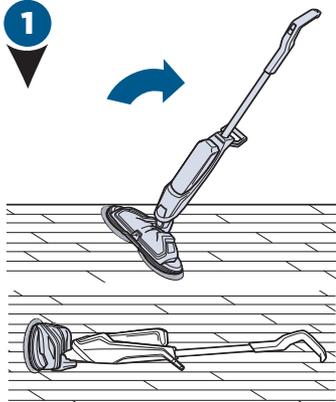


Your SpinWave® Cordless may have come with mop pads attached. If not, to attach mop pads, carefully lay machine down on the floor.

2

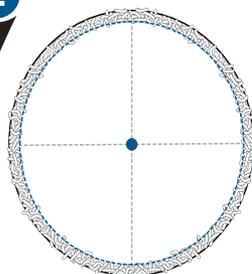


The back of the mop pad has a small dot in the center of the pad.

3

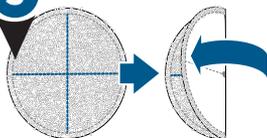

First, fold the pad in half, making sure the cloth material is inside the fold.


4

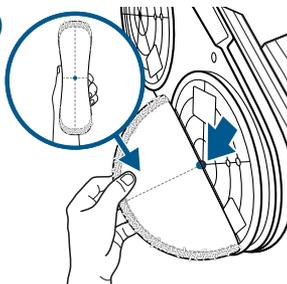

Then, with the mop pad folded, line up the small dot in the center of the pad with the middle screw on the bottom of the foot.



5

Lastly, line up the edge of the mop pad with the inner ring on the foot, attach the mop pad to the hook and loop material on the bottom of the foot.

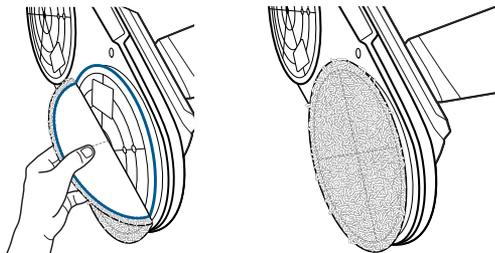

# Attaching Mop Pads: Option 2

  Your BISSELL® SpinWave® Cordless may have come with two different mop pads:




(4) Soft Touch Pads    (4) Scrubby Pads

The **Soft Touch Pad** is best for everyday use on delicate flooring like sealed hardwoods and laminate.

The **Scrubby Pad** is best used to power through tough, sticky messes.


**NOTE:** These next steps are to help you apply the mop pads more accurately onto the machine.

1

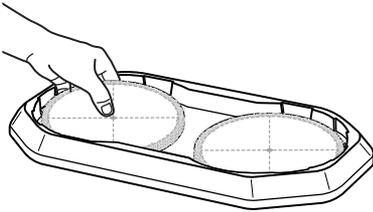

Place clean mop pads upside down in the storage tray. The dot on each mop pad should be facing up.

2

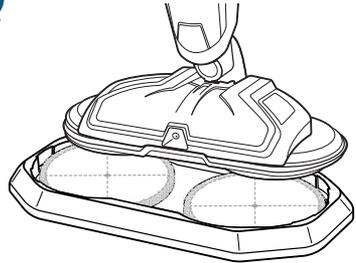


Hover the unit over the mop pads to align in the center, then place the unit down on the mop pads. Now they are attached to the machine.

# Filling Your Clean Water Tank


1

**Clean Water Tank**

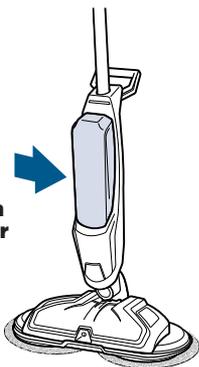

The Clean Water Tank is located on the front of the machine.

2

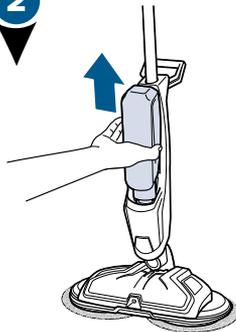

Lift the Clean Water Tank straight up to remove from the machine.


3



Unscrew the cap from the Clean Water Tank.


The Clean Water Tank has two measuring volumes depending on the amount of space you would like to clean.

4

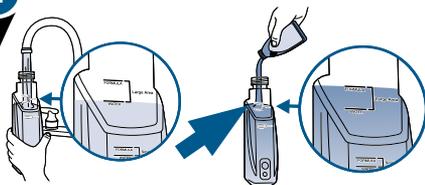

**For large area cleaning**

- Fill Clean Water Tank with warm tap water to the second water fill line.
- Add BISSELL® SpinWave® Cordless formula to the second formula fill line.

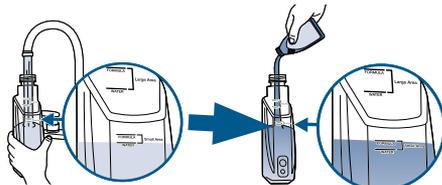

**For small area cleaning**

- Fill Clean Water Tank with warm tap water to the first water fill line.
- Add BISSELL® SpinWave® Cordless formula to the first formula fill line.

5



Screw the cap back onto the Clean Water Tank.

6



Slide the Clean Water Tank back into place until you hear a click.

## A few notes about filling the Clean Water Tank:


- Fill with warm (140°F/60°C MAX) tap water and add the appropriate BISSELL formula. **DO NOT USE BOILING WATER. DO NOT HEAT WATER OR TANK IN MICROWAVE.**

# Cleaning Sealed Hard Floors


**ATTENTION:** This machine is designed to be used only on sealed hard floors and should not be used on carpet or rugs. For best cleaning results, sweep or vacuum the floor surface prior to using to avoid scratching or damaging floors from sharp debris.

**TIP 1:** You may feel a slight vibration when turning ON the machine if the mop pads are not aligned correctly. Wait a few seconds for the pads to adjust themselves. If this doesn't occur, turn the machine OFF and replace mop pads following the instructions in 'Attaching Mop Pads' sections.

**TIP 2:** When you press the ON/OFF Button to start the unit the LED lights will illuminate, but the mop pads will not start rotating until the unit is reclined.

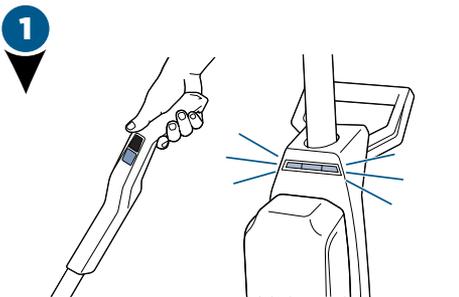

1  
When fully charged, press the ON/OFF Button and the three LED lights will illuminate.

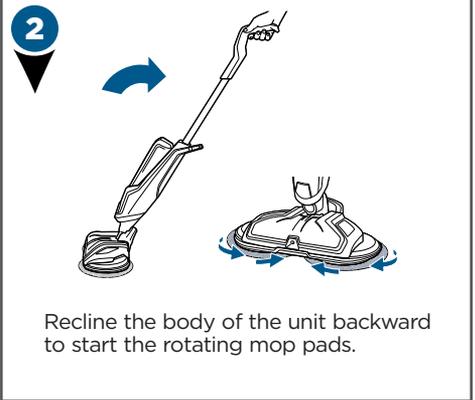


2  
Recline the body of the unit backward to start the rotating mop pads.

**TIP 3:** For optimum cleaning, perform overlapping cleaning strokes while dispensing cleaning formula. Care should be taken to not overwet the floor surface, especially when cleaning wood and other delicate floor surfaces.

**TIP 4:** When cleaning near baseboards, edges or furniture you may feel a slight pull from the unit due to bouncing off the surface.


## Cleaning Sealed Hard Floors (cont'd)

3

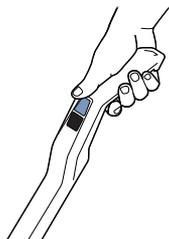

To clean, push the SPRAY Button to dispense formula.

4

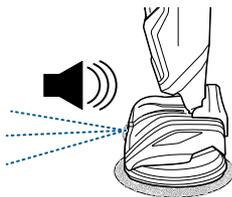

Formula will spray out of the nozzle on the front of the foot. You should hear a soft buzzing noise each time you press the SPRAY Button to indicate formula being dispensed.

5




For more difficult and stuck-on messes, spray formula directly on mess and line up one of the mop pads parallel to the mess. Move mop pad over mess and slowly move machine back and forth to clean, continuing to spray formula as needed.

**NOTE:** When finished cleaning, make sure to push the OFF Button before standing the machine upright as the mop pads will continue to spin until the machine is turned OFF.

**NOTE:** If unit is ON and gets placed in the upright position while still ON, unit will go into standby mode. To power OFF, press the ON/OFF Button or the unit will turn OFF by itself after 10 seconds of no action. You will know it is OFF when the LED lights are no longer illuminated.

6

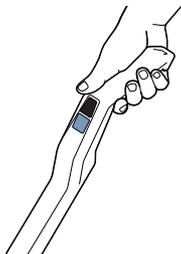

To power OFF the unit, press the unit ON/OFF Button and put unit into upright position. The LED lights will turn OFF.

# Cleaning Your SpinWave® Cordless


## ⚠️ WARNING

Do not set the machine on carpet, rug or other fabric surface when mop pad is removed as hook and loop material on foot may damage them.

## ⚠️ WARNING


Do not store machine on wet mop pads as they may damage wood or other delicate floors.

1

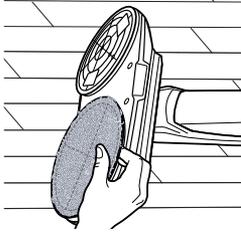


To remove mop pads, simply pull pads off the hook and loop material on the bottom of the machine.

2

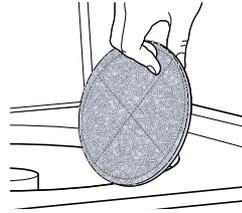

Machine wash separately in warm water. Use only liquid detergents. Do not use bleach or fabric softener. Tumble dry on low. Do not iron. Do not dry clean.

3

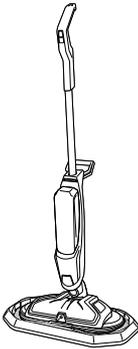

Store upright in storage tray in a dry, protected area until the next use. Since this product uses water, it must not be stored where there is danger of freezing. **Store with dry mop pads.** Wet mop pads may damage wood and other delicate, sealed hard floors.

**NOTE:** Any formula remaining in the Clean Water Tank should be emptied prior to machine storage.

**NOTE:** Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is danger of freezing. Freezing may damage internal components and may void the warranty.

# Disposing the Batteries

## WARNING


This product contains lithium-ion rechargeable batteries. According to local regulations, removal and proper disposal of lithium-ion batteries is required. For removal of batteries in your SpinWave® Cordless, see instructions on this page.

**NOTICE:** Disconnecting the battery will destroy the appliance and invalidate the warranty.

Before proceeding, ensure that:


- The unit is disconnected from the charger.
- The Clean Water Tank has been removed from unit.
- You have flat-head and Phillips-head screwdrivers and rubber-handled wire cutters.

1

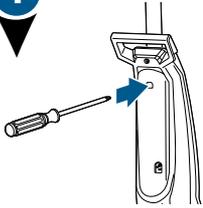


Insert screwdriver into the hole on the back of the unit below the Carry Handle in order to disconnect the handle.

2

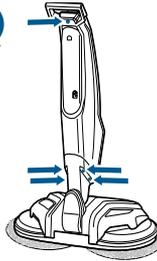


With a Phillips-head screwdriver, remove the 5 screws on the back of the unit.

3

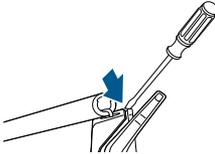


Insert flat-head screwdriver between the top front and back plates located between the Carry Handle and main handle to remove the front body plate.

4

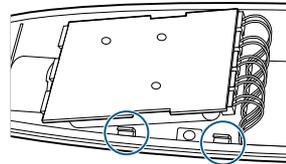


Remove the control panel with battery pack. For leverage, you may need to use the flat-head screwdriver to help remove.

5

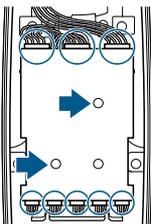

Disconnect the 8 inputs that are connected to the control panel. Then, using a Phillips-head screwdriver, unscrew the two screws on the control board.

6

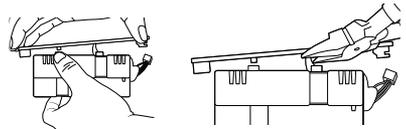

Pull the control panel back from the battery pack. Then, with rubber-handled wire cutters, clip the two metal poles to disconnect the battery pack from the control panel.

**NOTE:** Keep Battery Pack together - DO NOT separate individual batteries.

# Troubleshooting

## **WARNING**

To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

<b>Problem</b>	<b>Possible causes</b>	<b>Remedies</b>
<b>Unit is vibrating/wobbling</b>	Mop pads are not aligned with foot.	Realign the mop pads on the foot.
<b>Reduced spray OR no spray</b>	Clean Water Tank may be empty.	Refill tank.
	Clean Water Tank may not be seated completely.	Turn power OFF. Remove and reseal tank.
	System isn't completely primed.	Hold trigger for 10 to 15 seconds to make sure the formula has flowed to the spray tips.
	Not holding trigger to spray formula.	Hold trigger continuously while using the machine.
	Spray tips on foot clogged.	Turn power OFF. Use a pin to clean the spray tip located front and center of the machine.
<b>Spin plates are not turning or are wobbling</b>	Mop pads are not installed properly.	Turn power OFF and follow instructions on page 6 for replacing mop pads.
	Machine is standing upright.	Recline machine.
<b>Machine is leaking</b>	Cap of Clean Water Tank is not closed properly.	Remove the Clean Water Tank and re-apply the cap.
<b>Unit will not charge</b>	Charger plug/cable not connected.	Make sure charger plug is completely plugged into wall outlet and charging cable is completely plugged into port on the back of unit.
	Not the correct charger.	Use only the charger that comes with machine.
<b>All three (3) LED lights flashing</b>	Pads forced to stop spinning, potentially due to stuck debris, compressed under furniture or was briefly stepped on.	Turn the unit OFF or wait 10 seconds for the lights and machine to turn OFF. Then, press the ON/OFF to start the unit again.
	Heavy and extended usage may cause internal temperature of machine to warm up slightly past the typical operating temperature.	Press ON/OFF Button on Handle one time and wait for unit to cool down and reset.
<b>Two (2) LED lights flashing</b>	Functional issue with machine.	Contact us for additional assistance.

# Consumer Guarantee

This guarantee gives you specific legal rights, in addition to rights you may have under the Australian Consumer Law. If you need additional instruction regarding this guarantee or have questions regarding what it may cover, please contact your local BISSELL Consumer Services on the details set out below.

## Limited 2 Year Guarantee (from the date of purchase by original purchaser)

Subject to the \*CONDITIONS identified below, BISSELL will repair or replace (with new, refurbished, lightly used, or remanufactured components or products), at BISSELL's option, free of charge, any defective or malfunctioning part due to manufacturer defect. This guarantee applies to product used for personal purposes, and not commercial or rental service. This guarantee does not apply to fans or routine maintenance or consumable components such as filters, belts, brush rolls, etc., damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the user guide. BISSELL recommends that the original packaging be kept for the duration of the guarantee period in case such need arises within the guarantee period that the item needs re-packing and transportation.

It may be necessary to obtain some of your personal information, such as a mailing address, to fulfill terms of this guarantee. Any personal data will be handled pursuant to BISSELL's Privacy Policy, which can be found at [www.BISSELL.eu](http://www.BISSELL.eu).

### \*CONDITIONS OF THE GUARANTEE

Subject to whether such loss is reasonably foreseeable, BISSELL and its in-country distributors are not liable for incidental or consequential damages of any nature associated with the use of this product.

### FOR AUSTRALIAN CONSUMERS ONLY:

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAILURE AND FOR COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS GUARANTEE IS IN ADDITION TO OTHER RIGHTS OR REMEDIES UNDER LAW. NOTHING IN THIS GUARANTEE EXCLUDES, LIMITS OR MODIFIES ANY LIABILITY OF BISSELL WHICH IS IMPOSED BY LAW, OR LIMITS OR MODIFIES ANY REMEDY AVAILABLE TO THE CONSUMER WHICH IS GRANTED BY LAW. TO MAKE A CLAIM UNDER THIS GUARANTEE CONTACT BISSELL AUSTRALIA PTY LTD (DETAILS BELOW). CONTACT BISSELL PRIOR TO RETURNING ANY GOODS. WHERE AGREED, BISSELL WILL REIMBURSE REASONABLE POSTAGE / HANDLING COSTS (IF ANY) FOR RETURNING GOODS TO BISSELL. TO CLAIM EXPENSES INCURRED IN MAKING A CLAIM UNDER THIS GUARANTEE PLEASE PROVIDE BISSELL WITH A COPY OF THE RECEIPT OF THE EXPENSES BY EMAIL OR POST.

# Consumer Care

If your BISSELL® product should require service or to claim under our limited guarantee, please contact us as follows:

### Website and Email:

[www.BISSELL.com.au](http://www.BISSELL.com.au)  
[www.BISSELL.co.nz](http://www.BISSELL.co.nz)

### Telephone:

Australia: 1300-247-735

New Zealand: 0800-247-735

### Write:

BISSELL AUSTRALIA PTY LIMITED  
42 Rocco Dr.  
Scoresby 3179  
Victoria  
Australia

Replacement parts and accessories are available for purchase.  
To purchase visit [www.BISSELL.com.au](http://www.BISSELL.com.au).

### Visit the BISSELL website: [www.BISSELL.com.au](http://www.BISSELL.com.au)

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_

Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of the date of purchase in the event of a guarantee claim. See guarantee for details.**



©2019 BISSELL Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 161-6499 01/19 Rev C