



CT110 Quick Guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

PREPARATION/ OPERATION

1. Fill the detergent tank.



2. Turn the ignition key to switch the machine on.



3. Press the brush button to enable brush and suction motor operation.



4. Press the "+" and "-" buttons to set the pressure of the brushes on the work surface.



5. Press the "SELECT" button to adjust the detergent flow according to the type of washing. There are four operating modes:
- STANDARD, the flow is adjusted by pressing the "+" and "-" buttons
 - AUTOMATIC, the flow is set automatically by the machine
 - ECONOMY, the flow is set to the lowest value
 - CHEM DOSE, enables the detergent tank pump.



6. Turn the potentiometer to set work speed.



7. Operate the machine movement pedal. Press it forwards to move the machine forwards.



Press it backwards to move the machine backwards



8. Begin working.



9. When you have finished cleaning, proceed as follows:
- Turn the brush motor off.
 - Turn the ignition key.
 - If necessary, charge the batteries.



DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.



Check the suction filter is undamaged and clean.



Check the detergent output filter is undamaged and clean. Always remember to close the valve upstream of the filter before checking.



Clean the brushes.



Check the squeegee is clean and the blades are not damaged.



Check the battery charge.



To charge, insert the battery charger connector in the connector under the seat.



REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip.



BRUSH ATTACHMENT/RELEASE

Attaching the brushes: THIS MUST BE DONE WITH THE MACHINE OFF, remove the side flaps, then position the brushes under the head drive disk. Lift the right brush with your hands and turn it clockwise, locking it in position on the drive disk. Lift the left brush with your hands and turn it anticlockwise, locking it in position on the drive disk.

Removing the brushes: THIS MUST BE DONE WITH THE MACHINE OFF, turn the right brush anticlockwise to release it from the drive disk. Turn the left brush clockwise to release it from the drive disk.

TROUBLESHOOTING

THE MACHINE DOES NOT COME ON/START UP	CHECK THE EMERGENCY BUTTON IS NOT PRESSED
	CHECK THE BATTERY CHARGE
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL
	CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE
	CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN
	CHECK THE DIRTY WATER DRUM LID SEAL IS UNDAMAGED.
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE TYPE OF BRUSH/PAD IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR.
	CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED