


Water sampling station **EASYPRO** Operating instructions

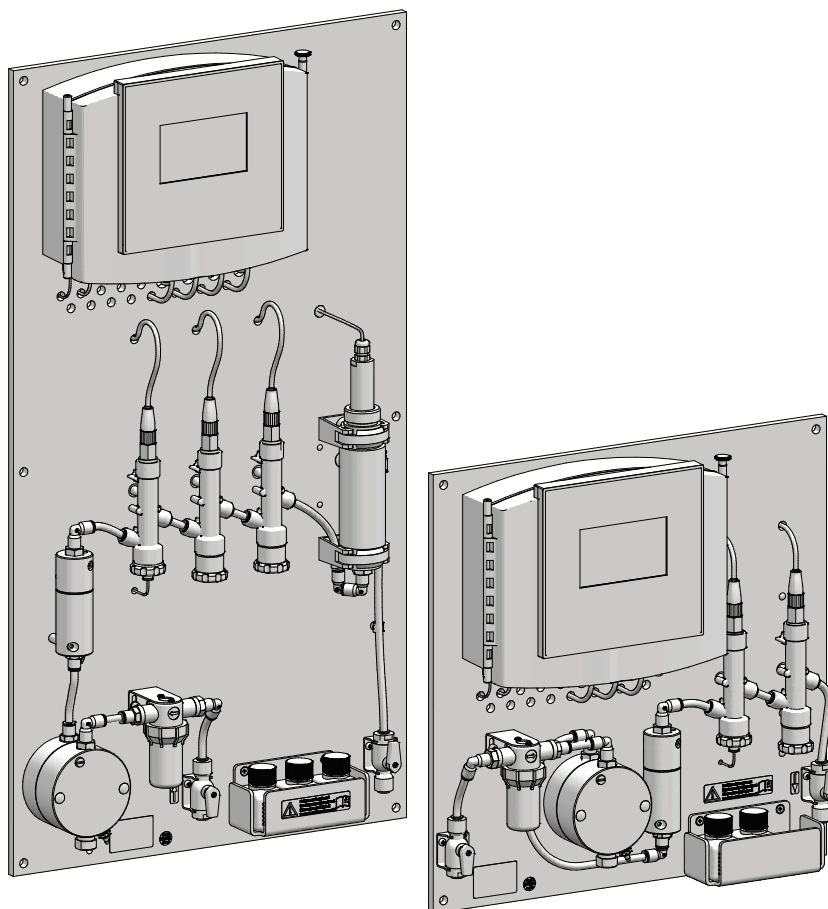

Read the operating manual!

The user is responsible for installation and operation related mistakes!

Table of Contents

1 Notes for the Reader	4	8.2 Configuration assistant	29
1.1 General non-discrimination	4	8.3 Configuration	30
1.2 Explanation of the signal words	4	8.4 Password protection	35
1.3 Explanation of the warning signs	4	8.5 Network settings	36
1.4 Identification of warnings	4		
1.5 Identification of action instructions	4		
2 Safety	5	9 Operation	37
2.1 General warnings	5	9.1 Confirming a message	37
2.2 Hazards due to non-compliance with the safety instructions	5	9.2 Logbook	37
2.3 Working in a safety-conscious manner	5	9.3 Configure trend display	37
2.4 Personnel qualification	5	9.4 Manual mode	38
		9.5 Calibration	38
		9.6 Setpoints and reference sets	42
		9.7 Access via network	44
3 Intended use	7	10 Shutdown	45
3.1 Notes on product warranty	7	10.1 Short-term shutdown	45
3.2 Intended purpose	7	10.2 Long-term shutdown	45
3.3 Foreseeable misuse	7	10.3 Storage	45
		10.4 Transportation	45
		10.5 Disposal	45
4 Product description	8	11 Maintenance	46
4.1 Scope of delivery	8	11.1 Maintenance intervals	46
4.2 Design and function	8	11.2 Finishing maintenance	46
4.3 Position numbers water sampling station	9	11.3 Keeping logfiles	46
4.4 The structure of the flow controller	10	11.4 Measuring cells	46
4.5 Rating plate water sampling station EASYPRO	10	11.5 Flow controller	47
4.6 multi-channel controller TOPAX® MC rating plate	10	11.6 Cleaning the sample water filter	47
		11.7 Updating software	47
5 Technical data	12	11.8 Battery	48
5.1 Water sampling stations for swimming pools	12	11.9 Replacing the fuse	48
5.2 Water sampling stations for industrial applications	13	11.10 Resetting the settings	48
5.3 measuring cell	14	11.11 Finishing maintenance	49
5.4 Technical data multi-channel controller TOPAX® MC	16		
5.5 Multi-channel controller TOPAX® MC measuring inputs	16		
5.6 Multi-channel controller TOPAX® MC output modules	17		
5.7 Controller functions	17		
6 Dimensions	18	12 Fault resolution	50
6.1 Water sampling station EASYPRO 1, 2, MB-C, ME-C	18	13 Modbus addresses	52
6.2 Water sampling station EASYPRO 3, 4, MC-C, MD-C, MP-C, MK-C	18	14 Notes to EU conformity EASYPRO	58
6.3 Water sampling station EASYPRO 1/1, 2/2, MBB-C, MEE-C	19	15 EU declaration of conformity TOPAX® MC	59
7 Installation	20	16 Declaration of no objection	60
7.1 Installation location of the water sampling station EASYPRO	20	17 Warranty claim	61
7.2 Wall mounting	20	18 Glossary	62
7.3 Installing the hydraulics	20	19 Index	63
7.4 Installation multi-channel controller TOPAX® MC	21		
7.5 Electrical installation	21		
7.6 Terminal connection	22		
7.7 Connecting sensors	23		
7.8 Connecting the actors	25		
7.9 Digital inputs	26		
7.10 RC protection for relay	26		
7.11 Connecting Ethernet	27		
7.12 RS485 interface	27		
7.13 Installing the sensors	28		
8 Commissioning of the water sampling station	29		
8.1 First steps	29		

1 Notes for the Reader

These Operating instructions contain information and behaviour rules for safe and designated operation of the Water sampling station **EASYPRO**.

Observe the following principles:

- Read the entire operating manual prior to starting-up the device.
- Ensure that everyone who works with or on the device has read the operating manual and follows it.
- Maintain the operating manual throughout the service life of the device.
- Pass the operating manual on to any subsequent owner of the device.

1.1 General non-discrimination

In this operating manual, only the male gender is used where grammar allows gender allocation. The purpose of this is to make the text easy to read. Men and women are always referred to equally. We would like to ask female readers for understanding of this text simplification.

1.2 Explanation of the signal words





Different signal words in combination with warning signs are used in this operating manual. Signal words illustrate the gravity of possible injuries if the risk is ignored:

Signal word	Meaning
DANGER!	Refers to imminent danger. Ignoring this sign may lead to death or the most serious injuries.
WARNING!	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to death or severe injuries.
CAUTION!	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to minor injury or damage to property.
PLEASE NOTE	Refers to a danger which, if ignored, may lead to risk to the machine and its function.

Tab. 1: Explanation of the signal words

1.3 Explanation of the warning signs

Warning signs represent the type and source of a danger:

Warning sign	Type of danger
	General danger
	Danger from electrical voltage
	Danger from poisonous substances
	Danger of damage to machine or functional influences

Tab. 2: Explanation of the warning signs

1.4 Identification of warnings

Warnings are intended to help you recognise risks and avoid negative consequences.

This is how warnings are identified:

Warning sign	SIGNAL WORD
Description of danger. Consequences if ignored. ⇒ The arrow signals a safety precaution to be taken to eliminate the danger.	

1.5 Identification of action instructions

This is how pre-conditions for action are identified:

- ✓ Pre-condition for action which must be met before taking action.
- ✗ A resource such as a tool or auxiliary materials required to perform the operating instructions.

This is how instructions for action are identified:


- ➔ Separate step with no follow-up action.
- 1. First step in a series of steps.
- 2. Second step in a series of steps.
 - ▶ Result of the above action.
- ✓ Action completed, aim achieved.


2 Safety


2.1 General warnings

The following warnings are intended to help you eliminate the dangers that can arise while handling the device. Risk prevention measures always apply regardless of any specific action.

Safety instructions warning against risks arising from specific activities or situations can be found in the respective sub-chapters.

	DANGER!
<p>Mortal danger from electric shock!</p> <p>Wrongly connected or located cables or damaged ones can injure you.</p> <ul style="list-style-type: none"> ⇒ Replace damaged cables without delay. ⇒ Do not use extension cables. ⇒ Do not bury cables. ⇒ Secure cables to avoid being damaged by other equipment. 	

	WARNING!
<p>Increased risk of accidents due to insufficient qualification of personnel!</p> <p>The device may only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.</p> <ul style="list-style-type: none"> ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications. ⇒ Prevent access to the system for unauthorised persons. 	

	PLEASE NOTE
<p>Do not dispose of the device in the domestic waste!</p> <p>Do not dispose of electric devices via the domestic waste.</p> <ul style="list-style-type: none"> ⇒ The device and its packaging must be disposed of in accordance with locally-valid laws and regulations. ⇒ Dispose of different materials separately and ensure that they are recycled. 	

2.2 Hazards due to non-compliance with the safety instructions

Failure to follow the safety instructions may endanger not only persons, but also the environment and the device.

The specific consequences can be:

- Failure of major unit and system functions.
- Failure of required maintenance and repair methods.
- Risk to persons when working on the device
- Danger to the environment from overdosing.

2.3 Working in a safety-conscious manner

Besides the safety instructions specified in this operating manual, further safety rules may apply. Always observe all safety-related regulations and guidelines applicable at the product's location of use. Note in particular the following items:

- Safety regulations on handling electricity and live components
- Safety regulations on handling hazardous substances
- Accident prevention regulations
- Safety and operating provisions
- Environmental protection provisions
- other applicable directives and laws.

2.4 Personnel qualification

Any personnel who work on the device must have appropriate special knowledge and skills.

Anybody who works on the device must meet the conditions below:

- Attendance at all the training courses offered by the owner.
- Personal suitability for the respective activity.
- Sufficient qualification for the respective activity.
- training into the handling of the device.
- knowledge of safety equipment and the way this equipment functions.
- Knowledge of this operating manual, particularly of safety instructions and sections relevant for the activity.
- Knowledge of fundamental regulations regarding health and safety and accident prevention.

All persons must generally have the following minimum qualification:

- Training as specialists to carry out work on the device unsupervised,
- sufficient training that they can work on the device under the supervision and guidance of a trained specialist.

2.4.1 Specialist staff

Thanks to their professional training, knowledge, experience and knowledge of the relevant specifications, specialist staff are able to perform the job allocated to them and recognise and/or eliminate any possible dangers by themselves.

2.4.2 Trained electricians

Due to their professional training, knowledge and experience as well as knowledge of specific standards and provisions, trained electricians are able to do the electrical work assigned to them and to recognise and avoid any potential dangers by themselves.

They are specially trained for their specific working environment and are familiar with relevant standards and provisions.

They must comply with the legally binding regulations on accident prevention.

2.4.3 Trained persons

Trained persons have received training from the operator about the tasks they are to perform and about the dangers stemming from improper behaviour.

Trained persons have attended all trainings offered by the operator.

2.4.4 Personnel tasks

In the table below you can check what qualifications are the pre-condition for the respective tasks. Only people with appropriate qualifications are allowed to perform these tasks!

Qualification	Activities
Specialist staff	<ul style="list-style-type: none">■ Installing the hydraulics■ Commissioning■ Shut-down■ Fault resolution■ Maintenance■ Entsorgung
Trained electricians	<ul style="list-style-type: none">■ Installing the electrics■ Rectifying electrical faults
Trained persons	<ul style="list-style-type: none">■ Operation■ Storage■ Transportation

Tab. 3: Personnel qualification

3 Intended use

3.1 Notes on product warranty

Any non-designated use of the device can impair its function and the protection provided. This leads to invalidation of any warranty claims!

Please note that liability is on the side of the user in the following cases:

- The water sampling station is operated in a manner which is not consistent with these operating instructions, particularly safety instructions, handling instructions and the section "Intended Use".
- Information on usage and environment (see section 5 „Technical data“ on page 12) is not adhered to.
- If people operate the device who are not adequately qualified to carry out their respective activities.
- Unauthorised changes are made to the device.

3.2 Intended purpose

The **EASYPRO** water sampling station is solely designed for sampling and control applications in the treatment of swimming and bathing water in swimming pools and whirlpools not operated in accordance with DIN 19643, as well as for the treatment of process water. The operational safety of the product supplied can only be ensured if used according to their purpose.

All other types of use are prohibited and will invalidate the warranty.

The controller on the water sampling station monitors the current measured values during water treatment and controls the dosing systems connected for water treatment. In this way, the controller ensures constant water values in various applications and can be deployed universally. Its main application is to maintain the quality of water by evaluating the measurements of chlorine value, pH value and Redox value as well as conductivity.

3.3 Foreseeable misuse

The following section provides information regarding the device applications which are classified as non-intended use. This section is intended to allow you to detect possible misuse in advance and to avoid it.

Foreseeable misuse is assigned to the individual stages of the product lifetime:

3.3.1 Incorrect assembly

- Connecting the mains voltage without a protective earth
- Non-fused or non-standard mains voltage.
- Not possible to immediately or easily disconnect the power supply
- Wrong connecting cables for mains voltage
- Sensors and actors connected to the incorrect terminals or incorrectly configured.
- Protective earth removed.

3.3.2 Incorrect start-up

- Commissioning with damaged or obsolete sensors.
- Commissioning without the establishment of all protective measures,

fastenings etc.

3.3.3 Incorrect operation

- Protective equipment not functioning correctly or dismantled
- Unauthorised modification of the controller.
- Ignoring of alarm or error messages.
- The elimination of alarm or error messages by insufficiently-qualified personnel.
- Bridging the external fuse
- Difficult operation due to insufficient lighting or poor access to the device.
- Operation not possible due to dirty or illegible display.

3.3.4 Incorrect maintenance

- Carrying out maintenance during ongoing operation
- No adequate or regular inspection of correct functioning
- No replacement of damaged parts or cables.
- No securing against reactivation during maintenance work
- Use of the wrong spare parts.

4 Product description

4.1 Scope of delivery

Please compare the delivery note with the scope of delivery. The following components are available for the product. The scope may be less for this version.

- Base plate with LED lighting for the valves
- Multi-channel controller **TOPAX® MC**
- Sample water filter
- Flow controller with integrated temperature sensor
- Flow control
- Measuring cell fittings
- Buffer solutions for adjusting each measuring cell

The measuring cells are packaged separately and not pre-installed.

4.2 Design and function

The water sampling station can continuously measure the level of disinfection (effective chlorine content), the pH value, the Redox value, the total chlorine content, conductivity and the sample water temperature. This water sampling station can therefore be used in the water treatment of public swimming pools, brine baths, hot-water installations and industrial water treatment to control connected systems and control points.

Depending on the version, the water sampling stations are fitted with the relevant measuring technology and a **TOPAX® MC** controller.

4.2.1 Functional diagram of the TOPAX® MC controller

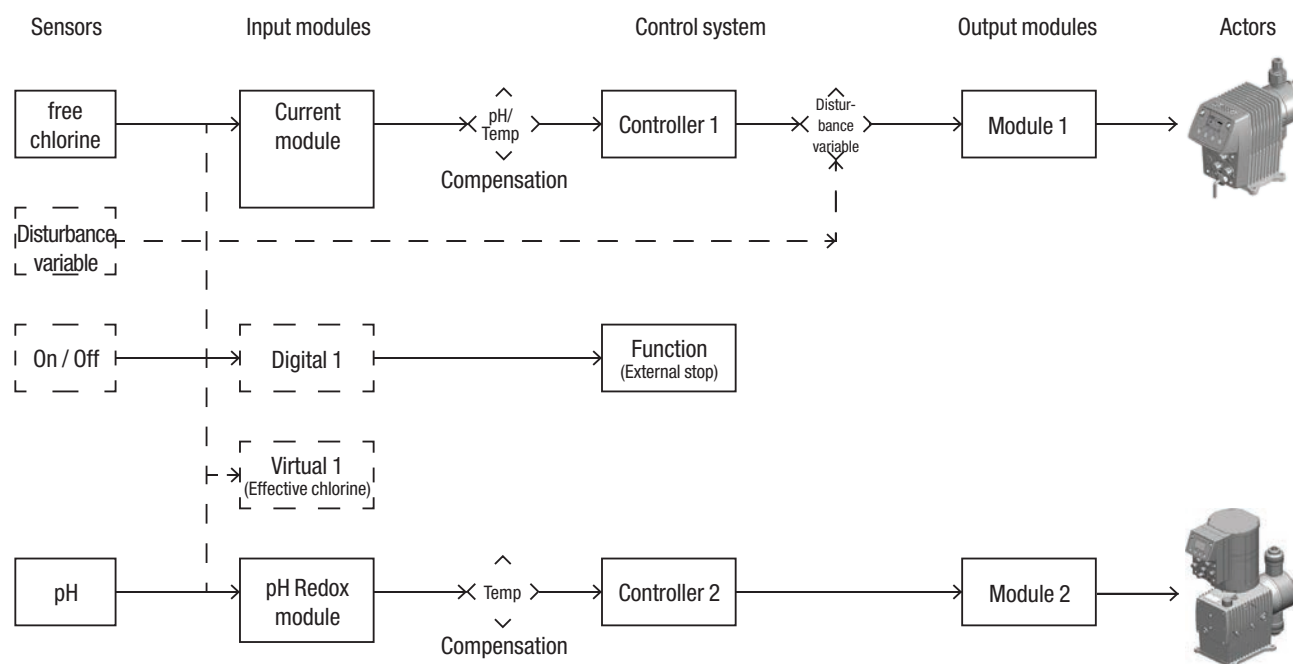


Fig. 1: Functional diagram of a two-channel controller

Gap	Field	Description
Sensors	<ol style="list-style-type: none"> Free chlorine Disturbance variable pH 	<ol style="list-style-type: none"> Measuring the free chlorine. The disturbance variable is a variable flow volume which can be taken into account. Measuring the pH value.
Input modules	<ol style="list-style-type: none"> Current module Digital 1 Virtual 1 pH Redox module 	<ol style="list-style-type: none"> Module for 4 – 20 mA signals and sensors with 24 V voltage supply. Digital input for the external control of a function (here: external stop). Parameter calculated (here: effective chlorine). Module for pH and Redox single-rod measuring cells
Control system	<ol style="list-style-type: none"> Controller 1 Controller 2 	<ol style="list-style-type: none"> Controlling the free chlorine inc. pH/temperature compensation and disturbance variable. Controlling the pH value inc. temperature compensation.
Output modules	<ol style="list-style-type: none"> Module 1 Module 2 	<ol style="list-style-type: none"> Module on slot 1 to connect an actor (here: MAGDOS LD). Module on slot 2 to connect an actor (here: MEMDOS LP).

Tab. 4: Explanation of functional diagram of a two-channel controller

4.3 Position numbers water sampling station

The figure shows a **EASYPRO 4** water sampling station. This version has the maximum equipment. Your water sampling station may differ in terms of scope and fittings.

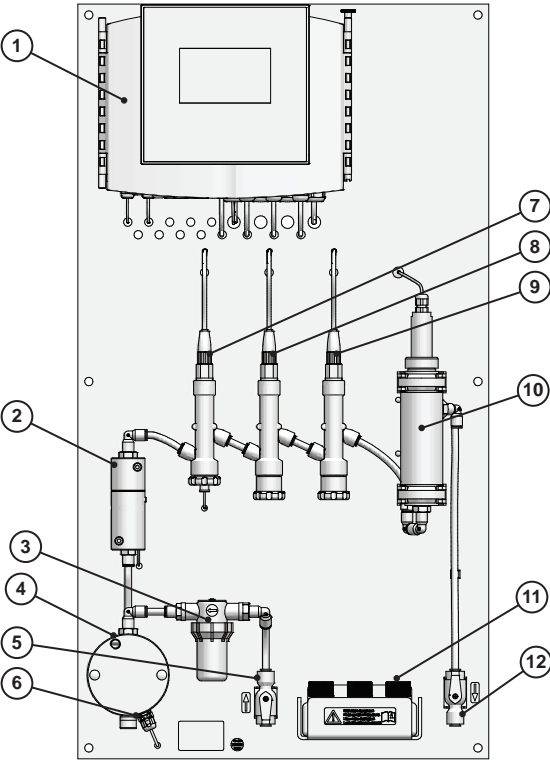


Fig. 2: Water sampling station EASYPRO 4

No.	Position
1	Multi-channel controller TOPAX® MC
2	Flow control
3	Sample water filter
4	Flow controller
5	Inflow tap
6	Extraction point
7	Measuring point 1 (e. g. disinfection measuring cell)
8	Measuring point 2 (e. g. pH value measuring cell)
9	Measuring point 3 (e. g. redox value measuring cell)
10	Measuring point 4 (e. g. conductivity measuring cell)
11	buffer solutions
12	Outflow tap

Tab. 5: Position numbers water sampling station EASYPRO 4

4.3.1 Main view

The main menu view will appear upon the start of the product or 5 minutes after the last input. The main view shows the current values from up to four sensors and further information.

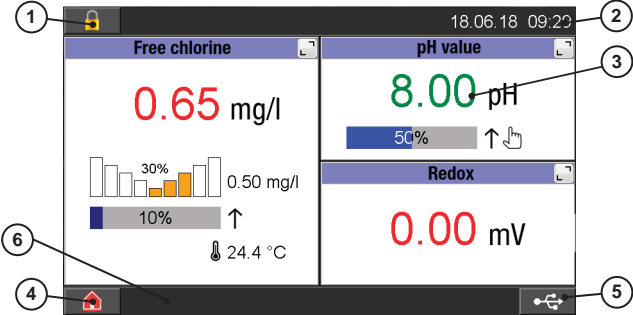


Fig. 3: Main view with three sensors

Item	Function
1	Login/password settings
2	Date/time
3	Measured values
4	Main menu
5	File Browser
6	Status row for messages

Tab. 6: Position numbers main view

4.4 The structure of the flow controller

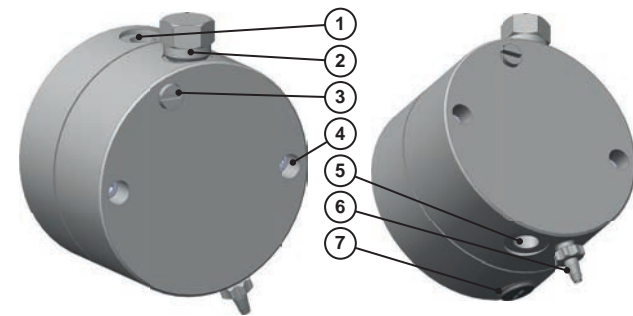


Fig. 4: The structure of the flow controller

Item	Description
1	Outlet connection
2	Inlet connection above (with sealing plugs)
3	Setting screw
4	Fixing screws
5	Inlet connection below
6	Extraction point
7	Temperature measurement point (with sealing plugs)

Tab. 7: Position numbers flow controller

4.5 Rating plate water sampling station EASYPRO

There is information on the product about safety or the product's way of functioning. The information must stay legible for the duration of the service life of the product.

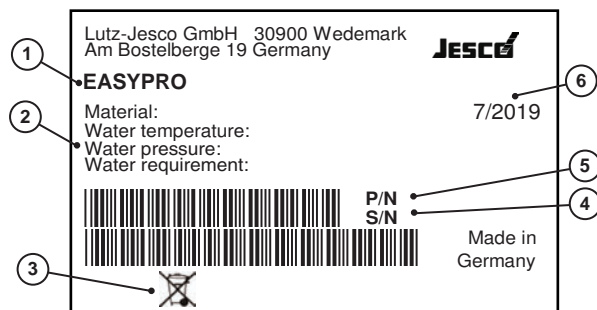


Fig. 5: Rating plate water sampling station **EASYPRO**

No.	Position
1	Product name
2	Technical specification
3	WEEE label
4	Serial number
5	Part number
6	Month/year of manufacture

Tab. 8: Position numbers rating plate water sampling station **EASYPRO**

4.6 multi-channel controller TOPAX® MC rating plate

There is also information on the multi-channel controller **TOPAX® MC** about safety or the product's way of functioning. The information must stay legible for the duration of the service life of the product.

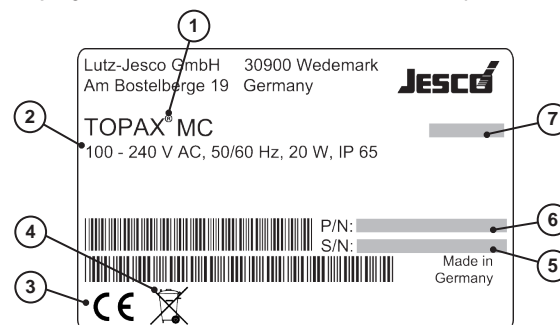


Fig. 6: Multi-channel controller **TOPAX® MC** rating plate

Item	Description
1	Product name
2	Technical specifications
3	Label showing conformity with applicable European directives
4	WEEE label
5	Serial number
6	Part number
7	Month/year of manufacture

Tab. 9: Position numbers rating plate multi-channel controller **TOPAX® MC**

5 Technical data

5.1 Water sampling stations for swimming pools

EASYPRO		MB-C	ME-C	MC-C	MD-C	MP-C	MK-C	MBB-C	MEE-C	
Sample water requirement		l/h	30 approx.						2 x 30 approx.	
Sample water inflow and discharge		mm	PE hose 6/8 + stop valve with G1/4 connection							
Pressure resistance		bar	max. 6			max. 6, air gap required		max. 6		
Pressure loss in the water sampling station		bar	0.3 approx.						2 x 0.3 approx.	
Mesh size sample water filter		µm	300							
Voltage supply			100 – 240 V AC, 50/60 Hz							
Power consumption		W	max. 20							
Analogue outputs for remote transmission			4 x 0/4 – 20 mA, working resistance max. 500 Ω							
Disturbance variable input		mA	0/4 – 20							
Interfaces			Ethernet TCP/IP or RS485 Modbus RTU (optional)							
Protection class			IP65 (electronic controller)							
Ambient temperature		°C	-5 to +45 (no exposure to direct sunlight)							
Control characteristic			P, PI, PID or PD behaviour, control direction selectable with disturbance variable feed forward, 2-side control selectable							
Measuring inputs (depending on version)										
Number of measuring inputs			2		3		4	3	2 x 2	
Free chlorine	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)	-	0 – 15 (dependant on the measuring cell transconductance)	-	0 – 15 (dependant on the measuring cell transconductance)		2 x 0 – 15 (dependant on the measuring cell transconductance)	-
	Diaphragm-covered measuring cell	mg/l	-	-	-	0 – 10 (dependant on the measuring cell)	-		-	
Total chlorine	Diaphragm-covered measuring cell	mg/l	-	-	-	-	0 – 10 (dependant on the measuring cell)	-		
pH value	pH single-rod measuring cell	pH	2 – 12 or 0 – 14 (depending on the single-rod measuring cell)						2 x 2 – 12 or 2 x 0 – 14 (depending on the single-rod measuring cell)	
Redox value	Redox single-rod measuring cell	mV	-	0 – 1000				-		2 x 0 – 1000
Conductivity conductive	Conductivity measuring (k=1)	mS/cm	-					0 – 20 or 0 – 100	-	
Temperature	Pt100	°C	5 – 45						2 x 5 – 45	
Output modules (depending on version)										
Number of output modules			up to 4							
Servomotor relay			2 x 230 V AC, 5 A (ohmic load)							
	kΩ		Potentiometer feedback: 1 – 10							
Servomotor 20 mA			Constant 0/4 – 20 mA output							
			Servomotor with 20 mA feedback							
Relays			2 x 230 V AC, 5 A (ohmic load)							
Optocoupler			2 x 80 V DC, 5 mA							

Tab. 10: Technical data water sampling stations for swimming pools

5.2 Water sampling stations for industrial applications

EASYPRO			1	2	3	4	1/1	2/2
Sample water require- ment	for CS120 excess chlorine measuring cell	l/h	45 approx.	-				
	for all other measuring cells	l/h	30 approx.				2 x 30 approx.	
Sample water inflow and discharge		mm	PE hose 6/8 + stop valve with G1/4 connection					
Pressure resistance	for diaphragm-covered measuring cell	bar	max. 6, air gap required					
	for all other measuring cells		max. 6					
Pressure loss in the water sampling station		bar	0.3 approx.					
Mesh size sample water filter		µm	300					
Voltage supply			100 – 240 V AC, 50/60 Hz					
Power consumption		W	max. 20					
Analogue outputs for remote transmission			4 x 0/4 – 20 mA, working resistance max. 500 Ω					
Disturbance variable input		mA	0/4 – 20					
Interfaces			Ethernet TCP/IP or RS485 Modbus RTU (optional)					
Protection class			IP65 (electronic controller)					
Ambient temperature		°C	-5 to +45 (no exposure to direct sunlight)					
Control characteristic			P, PI, PID or PD behaviour, control direction selectable with disturbance variable feed forward, 2-side control selectable					
Measuring inputs (depending on version)								
Number of measuring inputs			1	2	3	4	2 x 1	2 x 2
Bromine	Diaphragm-covered measuring cell	mg/l	0 – 5 (dependant on the measuring cell)				-	
Free chlorine	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)				2 x 0 – 15 (dependant on the measuring cell transconductance)	
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)	-			-	
	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)				-	
Chlorine dioxide	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)				2 x 0 – 15 (dependant on the measuring cell transconductance)	
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)	-			-	
	Diaphragm-covered measuring cell	mg/l	0 – 2 (dependant on the measuring cell)				-	
Total chlorine	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)				-	
Ozone	Diaphragm-covered measuring cell	mg/l	0 – 2 (dependant on the measuring cell)				-	
pH value	pH single-rod measuring cell	pH	2 – 12 or 0 – 14 (dependant on the single-rod measuring cell)				2 x 2 – 12 or 2 x 0 – 14 (depending on the single-rod measuring cell)	
Redox value	Redox single-rod measuring cell	mV	0 – 1000				2 x 0 – 1000	
Conductivity conductive	Conductivity measuring (k=1)	mS/cm	0 – 100 (depending on the measuring principle)					
Chlorite	Diaphragm-covered measuring cell	mg/l	0 – 2 (dependant on the measuring cell)				-	
Hydrogen peroxide	Diaphragm-covered measuring cell	mg/l	0 – 200 (dependant on the measuring cell)				-	
Temperature	Pt100	°C	5 – 45 (standard version)				2 x 5 – 45 (standard version)	
			5 – 60 (configurable)				2 x 5 – 60 (configurable)	

Output modules (depending on version)			
Number of output modules		up to 4	2 x up to 4
Servomotor relay		2 x 230 V AC, 5 A (ohmic load)	
	kΩ	Potentiometer feedback: 1 – 10	
Servomotor 20 mA		Constant 0/4 – 20 mA output	
		Servomotor with 20 mA feedback	
Relays		2 x 230 V AC, 5 A (ohmic load)	
Optocoupler		2 x 80 V DC, 5 mA	

Tab. 11: Water sampling stations for industrial applications

5.3 Measuring cell

Technical data for connecting a **TOPAX® MC** controller.

5.3.1 Amperometric 3- and open 2-electrode measuring cell

Measuring cell	DMZ3.1	CS120 - Pt/Cu	CS120 - Pt/Ag
Measuring input	all oxidizing ions	all oxidizing ions	all oxidizing ions
Measuring electrode	Gold or platinum (depending on measurement)	Platinum	
Reference electrode	Silver / silver chloride with KCl gel filling	-	
Counter electrode	Precious metal	Copper	Silver
Measuring range	0 – 15 mg/l Cl ₂	0 – 20 mg/l Cl ₂	0 – 20 mg/l Cl ₂
Transfer/slope	20 – 30 µA / mg/l		
Electrolyte	Sample water		
Electrical connection	N attachment head	Free wire end	
Hydraulic connections	hose 6/8 mm	G 5/8	
Pressure range	0 – 6 bar		
Flow rate	30 l/h	40 – 50 l/h	
Measuring principle	amperometric 3-electrode measuring cell with potentiostatic control	Amperometric open 2-electrode measuring cell	

Tab. 12: Amperometric 3- and open 2-electrode measuring cell

5.3.2 Membrane covered measuring cells for measuring free chlorine

Measuring cell	CI 4.2	CI 4.2	CI 4.2	CI 4.2
Measuring input	free chlorine			
Measuring range	0 – 0.5 mg/l Cl ₂	0 – 2 mg/l Cl ₂	0 – 5 mg/l Cl ₂	0 – 10 mg/l Cl ₂
Transfer/slope	4 – 20 mA			
Electrolyte	Diaphragm cap with electrolyte			
Connection	Free wire end			
Pressure range	0 – 0,5 bar			
Flow rate	30 l/h			
Measuring principle	amperometric diaphragm covered cell measuring cell			

Tab. 13: Diaphragm covered measuring cells for measuring free chlorine

5.3.3 Membrane covered measuring cells for measuring chlorine dioxide

Measuring cell	CD 4.2	CD 4.2
Measuring input	Chlorine dioxide	
Measuring range	0 – 0,5 mg/l ClO ₂	0 – 2 mg/l ClO ₂
Transfer/slope	4 – 20 mA	
Electrolyte	Diaphragm cap with electrolyte	
Connection	Free wire end	
Pressure range	0 – 0,5 bar	
Flow rate	30 l/h	
Measuring principle	amperometric diaphragm covered cell measuring cell	

Tab. 14: Membrane covered measuring cells for measuring chlorine dioxide

5.3.4 Diaphragm covered measuring cell for measuring total chlorine

Measuring cell	GCM	GCM	GCM
Measuring input	Total chlorine		
Measuring range	0 – 2 mg/l Cl _{ges.}	0 – 5 mg/l Cl _{ges.}	0 – 10 mg/l Cl _{ges.}
Transfer/slope	4 – 20 mA		
Electrolyte	Diaphragm cap with electrolyte		
Connection	Free wire end		
Pressure range	0 – 1 bar		
Flow rate	30 l/h		
Measuring principle	amperometric diaphragm covered cell measuring cell		

Tab. 15: Diaphragm covered measuring cell for measuring total chlorine

5.3.5 Conductivity measurement (conductive)

Description	Value	
Measuring range	mS/cm	max. 100 (5 % salt content), depending on input module
C factor		1
Electrical connection		M12x1 plug (A-coded)
Pressure range	bar	0 – 6
Measuring principle		Conductivity measurement (conductive)
temperature measurement		Integrated Pt100
Hydraulic connection		PG 13,5
Installation dimension	mm	120 x 12

Tab. 16: Technical data conductivity sensor

5.4 Technical data multi-channel controller TOPAX® MC

TOPAX® MC		
Housing dimensions (W x H x D)	mm	302 x 240 x 107
Voltage supply		100 – 240 V AC, 50/60 Hz
Power consumption	W	max. 20
Analogue outputs for remote transmission		4 x 0/4 – 20 mA, working resistance max. 500 Ω
Disturbance variable input	mA	0/4 – 20
Interfaces		Ethernet TCP/IP or RS485 Modbus RTU (optional)
Protection class		IP65
Ambient temperature	°C	-5 to +45 (no exposure to direct sunlight)
Control characteristic		P, PI, PID or PD behaviour, control direction selectable with disturbance variable feed forward, 2-side control selectable

Tab. 17: Technical data multi-channel controller TOPAX® MC

5.5 Multi-channel controller TOPAX® MC measuring inputs

All measuring inputs consist of an input for temperature measurement via Pt100 and a second input for the measurement of a further water parameter. On some measuring inputs, this input will measure a number of different parameters.

Measuring inputs (depending on version)			
Number of measuring inputs			up to 4
Free chlorine	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)
	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)
Chlorine dioxide	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)
	Diaphragm-covered measuring cell	mg/l	0 – 2 (dependant on the measuring cell)
Total chlorine	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)
pH value	pH single-rod measuring cell	pH	0 – 14 (dependant on the single-rod measuring chain)
Redox value	Redox single-rod measuring cell	mV	0 – 1000 (dependant on the single-rod measuring chain)
Conductivity	Conductive conductivity measuring cell inc. temperature sensor PT100 C = 1	mS/cm	0 – 2, 0 – 20, 0 – 100
Temperature	Pt100	°C	-10 to +90

Tab. 18: Multi-channel controller TOPAX® MC measuring inputs

5.6 Multi-channel controller TOPAX® MC output modules

Output modules (depending on version)		
Servomotor relay		2 x 230 V AC, 5 A (ohmic load)
	kΩ	Potentiometer feedback: 1 – 10
Servomotor 20 mA		Constant 0/4 – 20 mA output
		Servomotor with 20 mA feedback
Relays		2 x 230 V AC, 5 A (ohmic load)
Optocoupler		2 x 80 V DC, 5 mA

Tab. 19: Multi-channel controller TOPAX® MC output modules

5.7 Controller functions

Outputs				Controller functions	Behaviour
Relays	Optocoupler	Servomotor relay	Servomotor 20 mA		
x				On/Off	<ul style="list-style-type: none"> The output switches if a value is exceeded. Hysteresis can be set from 0,1 – 50 %
x	x			Pulse frequency Or 2-sides Pulse frequency	<ul style="list-style-type: none"> Relay: 10 – 100 pulses per minute Optocoupler: 10 – 350 pulses per minute The pulse frequency is dependant on the control deviation and the set control parameters. With a control output power of Y = 25 % and a maximum pulse frequency of 100 pulses/min., the controller would output 25 pulses/min.
x				Pulse length or 2-sides pulse length	<ul style="list-style-type: none"> 0 – 3600 seconds cycle duration Relay output (e. g. for solenoid valve) Depending on the control deviation and the defined control parameters, the relay pulls in or drops out for the set cycle duration. If the cycle lasts 30 seconds and the controller output power is 40 % the relay applies for example for 12 seconds, followed by 18 seconds of non-application.
		x		Servomotor with potentiometer	<ul style="list-style-type: none"> A feedback potentiometer can be connected (1 – 10 kΩ) for servomotors with position feedback. Compensate the feedback potentiometer. During compensation, the servomotor is first started and then stopped automatically.
		x		Servomotor without potentiometer.	<ul style="list-style-type: none"> For servomotors without feedback. Measure and set the runtime of the servomotor.
			x	Continuous output	<ul style="list-style-type: none"> Continuous control output from 0/4 – 20 mA for the actuation of constant actors.
			x	Servomotor with 20 mA feedback	<ul style="list-style-type: none"> Servomotors which are controlled via 0/4 – 20 mA and have a 0/4 – 20 mA position feedback.

Tab. 20: Functions of the individual controllers

6 Dimensions

6.1 Water sampling station EASYPRO 1, 2, MB-C, ME-C

All dimensions in mm

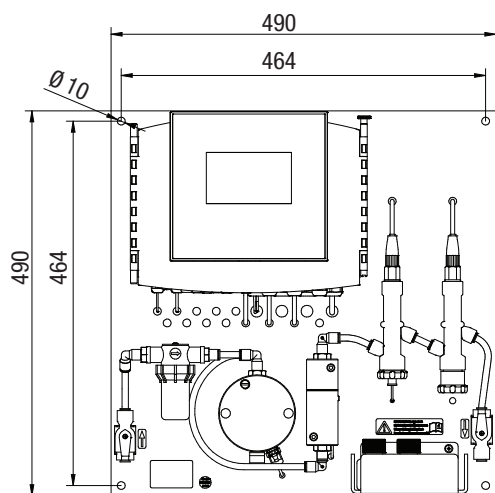


Fig. 7: Dimensions water sampling stations **EASYPRO 1, 2, MB-C, ME-C**

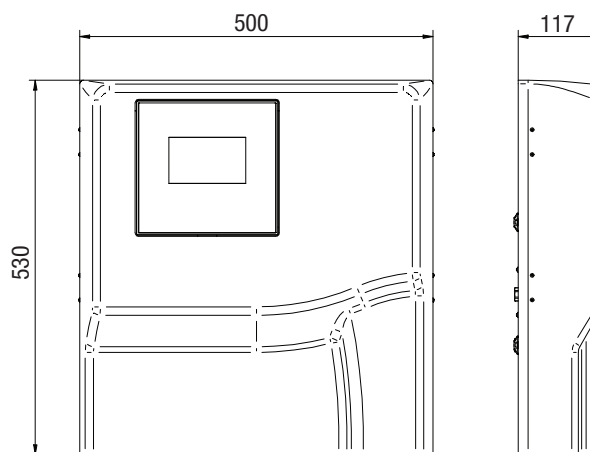


Fig. 9: Dimensions cover water sampling stations **EASYPRO 1, 2, MB-C, ME-C**

6.2 Water sampling station EASYPRO 3, 4, MC-C, MD-C, MP-C, MK-C

All dimensions in mm

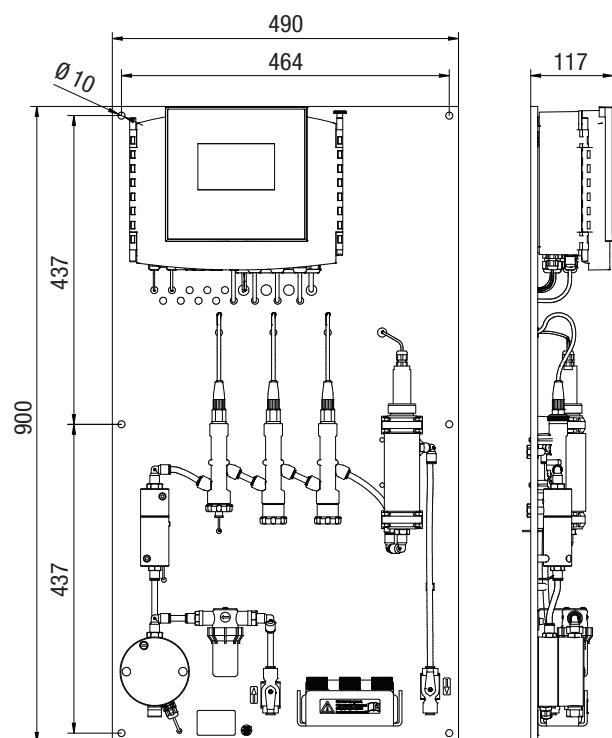


Fig. 8: Dimensions water sampling stations **EASYPRO 3, 4, MC-C, MD-C, MP-C, MK-C**

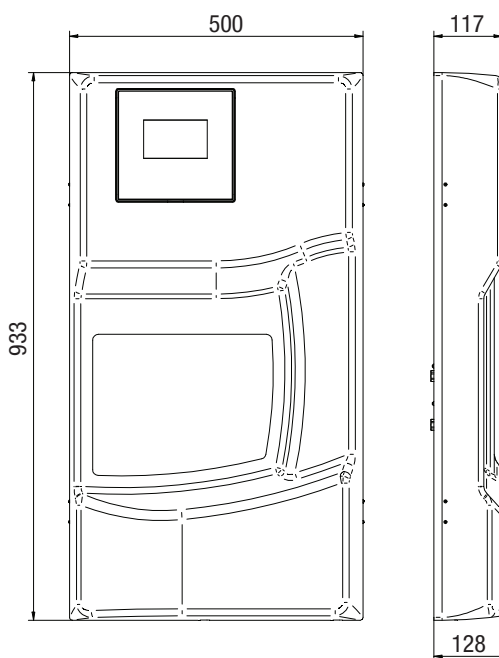


Fig. 10: Dimensions cover water sampling stations **EASYPRO 3, 4, MC-C, MD-C, MP-C, MK-C**

6.3 Water sampling station EASYPRO 1/1, 2/2, MBB-C, MEE-C

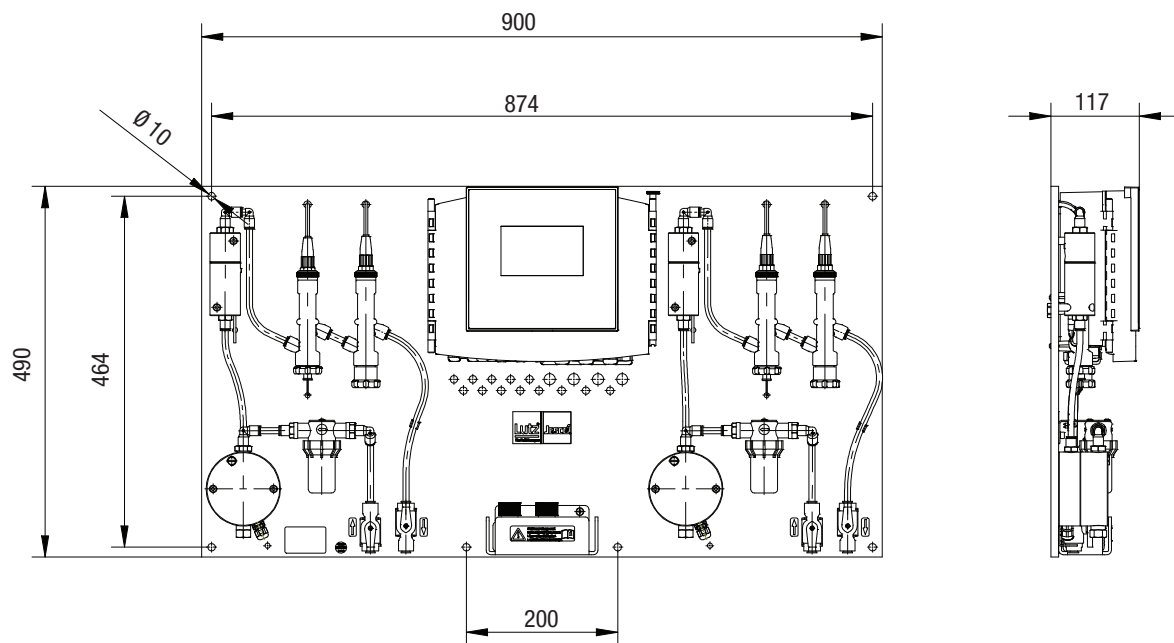


Fig. 11: Dimensions water sampling station **EASYPRO 1/1, 2/2, MBB-C, MEE-C**

7 Installation

7.1 Installation location of the water sampling station EASYPRO

This section takes you through the installation step by step. The following criteria must be taken into account when selecting the assembly location:

- The installation surface is even.
- The installation height is chosen so that the display of the controller is at eye level for the user.
- Below the water sampling station there must be at least 20 cm free space to route the inflow and outflow pipes.
- All lines and cables must be routed without kinks.
- The sample water must reach the water sampling station from the extraction point in as short a distance as possible in order to avoid measured value deviations.
- Avoid direct sunlight or heat radiation.

7.2 Wall mounting

Resources required:

- ✂ Mounting set
- ✂ Drill
- ✂ Phillips screwdriver

The position of the fastening point is to be inferred from the dimensioned drawings in chapter 6 „Dimensions“ on page 18. All 6 drill-holes have to be used. The wall panel is clamped on the mounting bolts between two nuts with washers. The unevenness of the wall can be levelled out by adjusting the nuts until the wall panel is kept level and free from tension.

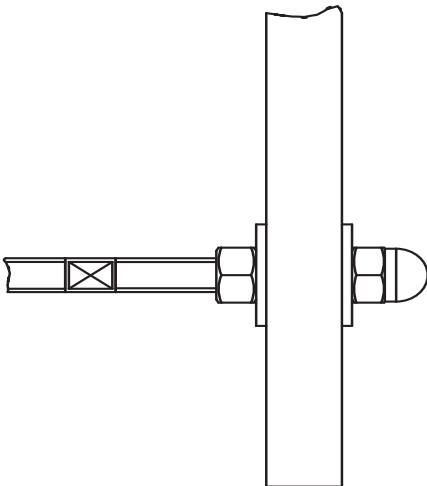


Fig. 12: Wall mounting

7.3 Installing the hydraulics

This section takes you step by step through the installation of the hose connections to the water sampling station.



PLEASE NOTE

Hydraulic distortion of the measurement results

Incorrect installation of the hydraulic lines can distort the measurement results. As a result, the controlling of connected systems and control points may be faulty.

- ⇒ Comply with all the guideline instructions for installing the water sampling station and connected products.
- ⇒ Only use hose connections made from polyethylene (PE) with a diameter of 6/8 mm.
- ⇒ Prevent misrepresentations of the sample water en route to the water sampling station by taking the sample water 30 cm above the bottom of the tank or in the centre of the water pipe. The extracted sample water must reach the water sampling station within a short space of time, thereby arriving with a pressure of 0.2 bar.
- ⇒ If the extraction or supply of the sample water does not satisfy these requirements, an external sample water pump must be installed before the water sampling station.
- ⇒ If you expect heavy soiling (e.g. leaves, coarse, small floating materials, etc.) in the sample water, use an external pre-filter. It helps you prevent blockages in the water sampling station.

Pre-conditions for actions:

- ✓ The wall mounting and electrical installation have been successfully completed.

Perform the following work steps:

1. Connect the extraction point of the sample water to the inflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 5) by plugging the hose into the inflow tap.
2. Connect the return-flow hose of the sample water to the outflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 12) by plugging the hose into the outflow tap.

- ✓ **The hydraulic of the water sampling station have been successfully installed.**

7.4 Installation multi-channel controller TOPAX® MC

Make sure that the installation location complies with the following requirements:

- The display is easily accessible and is visible.
- Plan to leave min. 20 cm free space for the installation of the cable underneath the device. You must be able to install the cable without kinking or damage.
- Various lines (e.g. voltage supply, data cable and sensitive lines for measuring purposes) must be installed separately. The different lines should only cross at 90° so as to prevent falsifications.
- Electrical, magnetic and electromagnetic fields affect signal transmission and can destroy electronic components.
- Compliance with the permissible ambient temperatures (see section 5 „Technical data“ on page 12).

7.5 Electrical installation

The voltage supply to your device can now be performed via a normal Schuko plug or a control cabinet. Perform the specifications of this section for devices without a pre-fitted Schuko plug.

Pre-conditions for actions:

- ✓ The device was installed in accordance with section 7.2 „Wall mounting“ on page 20.
- ✓ A voltage supply with 100 – 240 V AC (50/60 Hz) is available.
- ✓ The voltage supply is deactivated before the start and secured against reactivation.
- ✓ The housing is open.

Resources required:

- ✂ Schuko plug
- ✂ Wire end sleeves 0.75 – 2.5 mm²



DANGER!

Mortal danger from electric shock!

Improperly installed or damaged components in the electronics installation can cause injury.

- ⇒ Ensure that all work on the electrical installation is performed by a qualified electrician.
- ⇒ Ensure that all work on the electrical installation is performed in a de-energised state.
- ⇒ Ensure that the power supply is secured with a fault current protective circuit.
- ⇒ Replace damaged cables or components without delay.

Perform the following work steps:

1. Fit wire end sleeve to the cable ends if the supply cable does not have them.
2. Open the device housing.
3. Lead the supply cable through a cable screw connection to the underside of the device.
4. Turn the cable screw connection union nut until the line is fixed in the screw connection so that the screw connection performs strain relief. Ensure that the feed cable is installed loosely.
5. Connect the voltage supply to the clamps 44 – 52. Observe the division into protective earth (PE), neutral conductor (N) and the phase (L) on the circuit board.

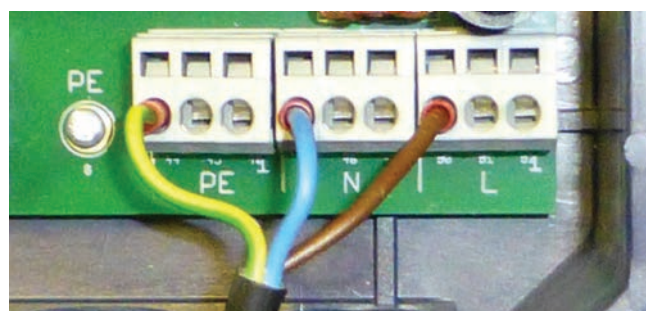


Fig. 13: Connected voltage supply

✓ Electrically installed



Only 3 of 9 clamps are required for connection of the voltage supply. You can use the free terminals to supply further devices with voltage.

The contact load rating amounts to max. 4A.

7.6 Terminal connection

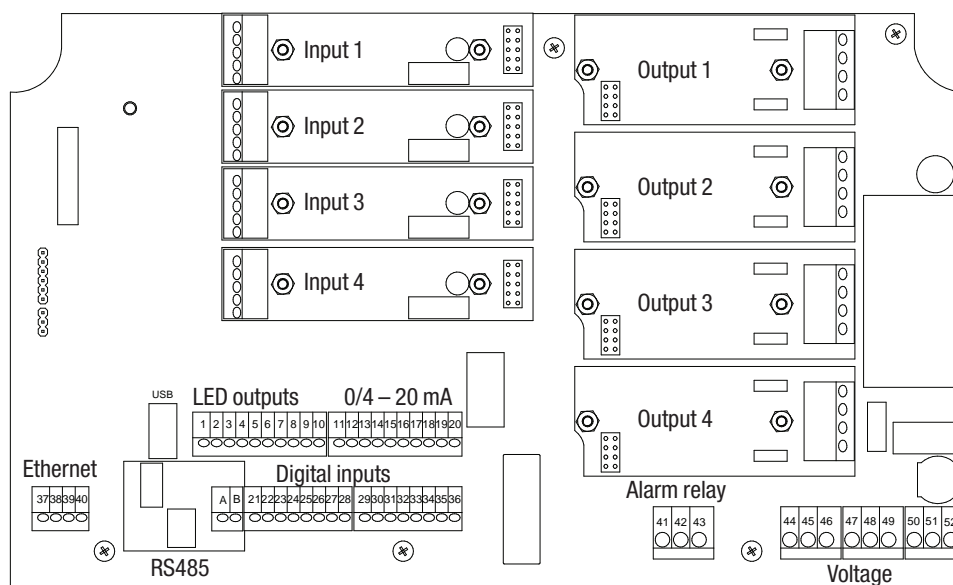



Fig. 14: Overview of the connection clamps

Terminal	Function		Description
1	LED output 1 (red)	+	5 V with 220 Ω series resistance for LEDs of the water sampling stations
2	LED-output 1 (green)	+	
3	LED output 2 (red)	+	
4	LED-output 2 (green)	+	
5	LED output 3 (red)	+	
6	LED-output 3 (green)	+	
7	LED output 4 (red)	+	
8	LED-output 4 (green)	+	
9 – 10	LED output GND	-	Ground for the LEDs
11	Disturbance variable input	+	0/4 – 20 mA
12		-	
13	Analogue output 1	+	0/4 – 20 mA, working resistance max. 500 Ω
14		-	
15	Analogue output 2	+	
16		-	
17	Analogue output 3	+	
18		-	
19	Analogue output 4	+	
20		-	
21 – 36	Digital inputs 1 – 8	+ (odd numbers) - (even numbers)	Function configurable
37 – 40	Ethernet connection		
41 – 43	Alarm relay		Clamps 41 + 42 normal on Clamps 42 + 43 normal off
44 – 46	Connection supply voltage		Protective earth (PE)
47 – 49			Neutral line (N)
50 – 52			Phase (L)

Tab. 21: Terminal connection

7.7 Connecting sensors



DANGER!

Mortal danger from electric shock!

Live parts can inflict fatal injuries.

- ⇒ Disconnect the external power supply before opening the water sampling station or the **TOPAX® MC** controller.
- ⇒ Secure the station to prevent it from being switched on again!

Up to four input modules can be connected to the device. A water parameter and the temperature can be measured with every module.

Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.


Resources required:

- ✗ Sensors
- ✗ Suction connection

Perform the following work steps:

1. Lead the cable through one of the cable screw connections on the underside into the interior of the housing.
2. Connect the wires onto the clamp block of the input modules. Comply with the terminal plans in the following sections.

✓ **Sensor connection completed.**



PLEASE NOTE

Electronic distortion of the measurement results.

Incorrect installation of the electrical cables can distort the measurement results. As a result, the control of connected devices can be faulty.

- ⇒ Do not route the connecting cable parallel to the mains and control connections, and always with a clearance of at least 15 cm. Lay connection junctions at an angle of 90°.

7.7.1 pH Redox module input circuit board

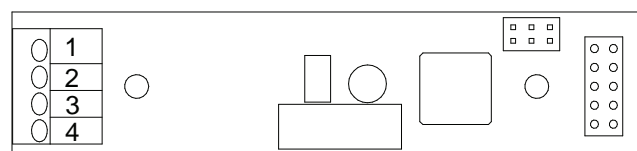


Fig. 15: pH Redox module input circuit board

Terminal	Function	Sensors
1	Temperature input	Resistance thermometer TE110/Pt100
2	Temperature input	
3	- (wire with Ø 1.5 mm)	pH single-rod measuring chain PE110/Redox single-rod measuring chain ME110
4	+ (wire with Ø 2 mm)	

Tab. 22: Terminal connection of the pH Redox module input circuit board

 


Fig. 16: Connect the cable from the pH or Redox single-rod measuring chain correctly

7.7.2 Potentiostat module input circuit board

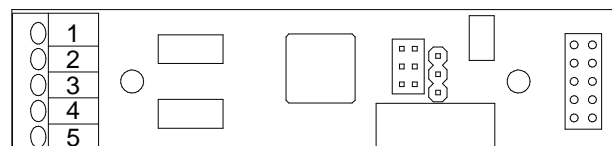


Fig. 17: Potentiostat module input circuit board

Terminal	Function	Sensors
1	Temperature input	Resistance thermometer TE110/Pt100
2	Temperature input	
3	Measuring electrode	3 electrode potentiostat
4	Counter electrode	
5	Reference electrode	

Tab. 23: Terminal connection of the potentiostat module input circuit board

7.7.3 Current module input circuit board

A number of sensors require an operating voltage for their measurement. These sensors are connected to the current module and supplied with 24 V.

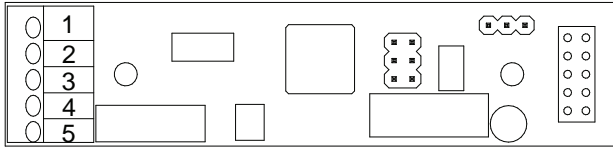


Fig. 18: Current module input circuit board

Terminal		Function	Sensors
1		Temperature input	Resistance thermometer TE110/ Pt100
2		Temperature input	
3	-	-	Excess chlorine measuring cell CS120/conductivity measuring cell
4	+	for CS120**	
	-	for 0/4 – 20 mA	Total chlorine measuring cell GCM/ diaphragm-covered measuring cell Cl 4.1/diaphragm-covered measuring cell CD 4 MA*
5	+	24 V DC output	

Tab. 24: Terminal connection of the current module input circuit board

* Requires 24 V supply module

**red: +; blue, purple: -

7.7.4 Conductive input circuit board to the conductivity module

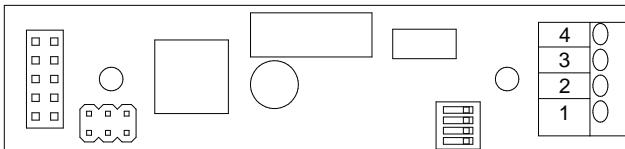


Fig. 19: Conductive input circuit board to the conductivity module

Terminal	Function	Sensors	Wire colour M12 connection cable
1	Temperature input	Conductivity measuring (conductive), k=1	black (BK)
2	Temperature input		blue (BU)
3	Conductivity measurement input		brown (BN)
4	Conductivity measurement input		white (WH)

Tab. 25: Terminal connection of the conductive input circuit board to the conductivity module

DIP switch	0 - 2000 µS/cm	0 – 20 mS/cm	0 – 100 mS/cm
1	OFF	ON	ON
2	OFF	ON	ON
3	OFF	OFF	ON
4	OFF	OFF	ON

Tab. 26: Selecting the measuring range

7.8 Connecting the actors

Depending on the equipment of the device, you have various possibilities of actuating actors such as dosing pumps or regulation valves.

7.8.1 Alarm relay

The alarm relay on the main board forwards alarms.

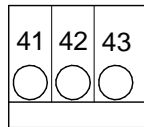


Fig. 20: Alarm relay

Terminal	Function	Description
41 + 42	normal on	The relay works on these clamps as an opener.
42 + 43	normal off	The relay works on these clamps as a closer.

Tab. 27: Terminal connection of the alarm relay

7.8.2 Output circuit board with relay

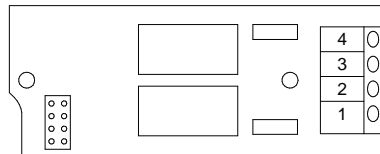


Fig. 21: Output circuit board with relay

Terminal	Function	Description
1	Relay X.2	Second digital output
2		
3	Relay X.1	First digital output
4		

Tab. 28: Clamp connection of the output circuit board with relay

Actors	Configuration
MAGDOS dosing pumps	On/Off
MEMDOS dosing pumps	On/Off
MEMDOS SMART dosing pumps	On/Off
MIDIDOS/MINIDOS dosing pumps	On/Off
Peristaltic pumps	Pulse length

Tab. 29: Actors and relay configuration

7.8.3 Output circuit board with optocoupler



Fig. 22: Output circuit board with optocoupler

Terminal	Function	Description
1	+	Optocoupler x 2
2	-	
3	+	Optocoupler x 1
4	-	
		Second digital output
		First digital output

Tab. 30: Clamp connection of the output circuit board with optocoupler

Actors	Configuration
MAGDOS dosing pumps	Pulse frequency
MEMDOS dosing pumps	
MEMDOS SMART dosing pumps	

Tab. 31: Actors and configuration optocoupler

7.8.4 Servomotor relay output circuit board

This output is suitable for connecting a servomotor with or without feedback via a potentiometer from 1 – 10 kΩ.

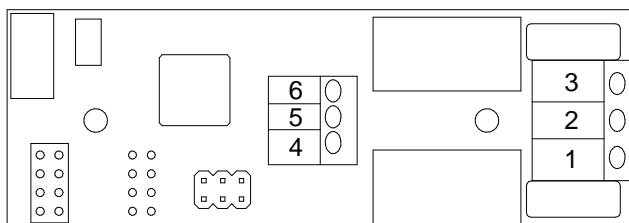
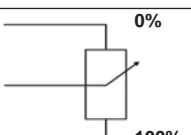


Fig. 23: Servomotor relay output circuit board

Terminal	Function	Description
1 – 2	Opening the regulation valve	Relay output
2 – 3	Closing the regulation valve	Relay output
4		Feedback via potentiometer
5		
6		

Tab. 32: Clamp connection of the output circuit board with servomotor relay

Actors	Configuration
Chlorine gas control valve C 7700	Servomotor with potentiometer/ servomotor without potentiometer

Tab. 33: Actors and configuration servomotor relay

7.8.5 Output circuit board with servomotor 20 mA

The output connects a servomotor with or without feedback.

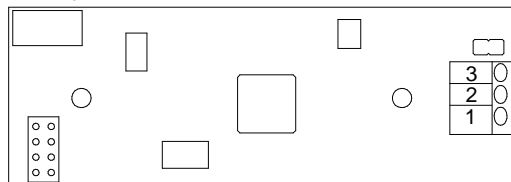


Fig. 24: Output circuit board with servomotor 20 mA

Terminal	Function	Description
1	-	GND
2	Input (feedback)	4 – 20 mA
3	Output	4 – 20 mA

Tab. 34: Clamp connection of the output circuit board with servomotor 20mA

Actors	Configuration
Chlorine gas control valve C 7700	Servomotor with 20 mA/ continuous output (20 mA)
EASYZON chlorine dioxide system	Continuous output (20 mA)
MAGDOS dosing pumps	
MEMDOS dosing pumps	
MEMDOS SMART dosing pumps	

Tab. 35: Actors and configuration servomotor 20 mA

7.8.6 Testing the outputs

You can use manual mode to test the correct connection of an actor.

Take the alarm chain into account before conducting the test and inform any connection points or interrupt the alarm chain for the period of the test.

Test the connected actors

Pre-conditions for actions:

- ✓ The actors have been connected in accordance with section 7.8 „Connecting the actors“ on page 24.
- ✓ The device housing cover is closed.
- ✓ The voltage supply has been established and the device has been switched on.

Perform the following work steps:

1. Working in the main menu, navigate to “Manual mode” (see section 9.4 „Manual mode“ on page 37).
 - ▶ You will now see all the outputs.
2. Select the output to which you have connected the actor and which you wish to test.
3. Enter a value between 0 and 100 % and check whether the actor reacts as desired.

✓ **Actor has been tested.**

Testing the analogue outputs

You can also test the connection of terminals 13 to 20.

Pre-conditions for actions:

- ✓ The device housing cover is closed.
- ✓ The voltage supply has been established and the device has been switched on.

Perform the following work steps:

1. Working in the main menu, navigate to System > Outputs > Analogue.
 - ▶ You will now see all analogue outputs (terminals 13 – 20).
2. Press "Test signal".
3. Set the mA value.
4. Press "Start".

- ✓ **Analogue outputs tested.**

7.9 Digital inputs

You can use up to 8 digital inputs to evaluate switching statuses and to detect them as alarm message which are to be documented in the log-book.

Further information about the settings of the digital inputs can be found in section 8.3.1.6 „Digital inputs“ on page 32.

7.10 RC protection for relay

When connecting to the relays, note that inductive loads must be suppressed. If this is not possible, the relay contact on the device terminal must be protected by an RC protective circuit / interference suppression element.

Thus, the device will operate in an uncontrolled manner. To prevent bonding if the load circuit suffers a short-circuit, the relays must be protected separately on the maximum relay switching current.

Pre-conditions for actions:

- ✓ You would like to connect an inductive load to the relay.

Perform the following work steps:

1. Switch off the device.
2. Clamp the interference suppression element parallel to the inductive load.
3. Should it prove impossible to perform point 2, clamp the interference suppression element parallel to the relay output.

- ✓ **RC protection for relay connected.**

7.11 Connecting Ethernet

You can use the Ethernet connection for the following actions:

- Reading/writing via Modbus TCP/IP protocol (PLC or Computer)
- Access via web browser

■ Access via TFTP server

The device is fitted with a network input in the form of a 4-pole and D-coded M12x1 socket. Lutz-Jesco GmbH offers different lengths of special twisted-pair network cables to make the typical Ethernet RJ-45 plug connection. If you use third-party cables, choose a Category 5 cable with an impedance of 100 Ω or above.

Pin	Assignments	Wire colours
1	TX-	yellow
2	TX+	orange
3	RX-	white
4	RX+	blue
-	Screen	-

Tab. 36: Ethernet connection socket

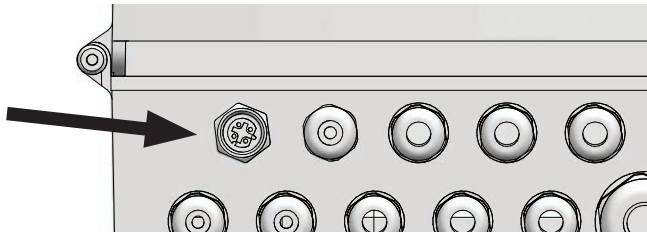


Fig. 25: Ethernet connection

Installing a wired network

During installation, comply with the following points:

- The Ethernet is cabled in a star topology. The maximum cable length is 100 m
- Only use screened cables and connectors
- Only use CAT5 cables or better

7.12 RS485 interface

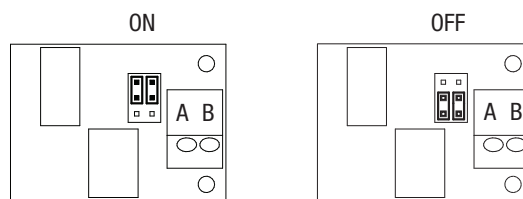


Fig. 26: Jumper position on RS485



When using multiple devices on a data line you, must activate a 120 Ω resistance on the last device.

You can activate the resistance by setting the jumper to "ON" as shown in Fig. 26 „Jumper position on RS485“ on page 26.

Your device can have an optional RS485 interface. Using a second data cable you can connect up to 14 devices with a PC or a PLC. Modbus RTU protocol serves as a protocol for data transfer. You can use the addresses 1 to 14. The addresses 0 and 15 are reserved for internal purposes and are not supported.

RS485 Modbus settings:

- Baud rate: 9600
- Word length: 8 Bit
- Stop bit: 1 Bit
- Parity: None
- You can read out a maximum of 40 addresses at once.

The list of Modbus commands can be found in section 13 „Modbus addresses“ on page 51.

Perform the following work steps:

1. Open the device housing.
 2. Connect a two-wire cable to terminals A and B of the RS485 module.
 3. Connect the device with your network.
- ✓ **Device connected with network.**

7.13 Installing the sensors

7.13.1 Disinfection measuring cell

The DMZ3.1 measuring cell for measuring the degree of disinfection (free chlorine) must be connected directly in the housing of the **TOPAX® MC** controller. The counter electrode is already installed in the fitting and connected with the controller.

Pre-conditions for actions:

- ✓ The installation of the water sampling station, the electrics and the hydraulics has been performed successfully.
- ✓ The measuring cells documentation is within easy reach.

Perform the following work steps:

1. Unscrew the protective caps from the top of the valves and store these away carefully for future use.
 2. Screw the measuring cells (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 7) into the fittings. Observe the measuring cell documentation during installation.
 3. Connect the measuring cells with the connecting cables.
- ✓ **The disinfection measuring cell has been installed successfully.**

7.13.2 Measuring cells Redox value, pH value and conductivity

The connecting cables are already installed on the **TOPAX® MC** controller and need only be connected to the measuring cells.

Pre-conditions for actions:

- ✓ The installation of the water sampling station, the electrics and the hydraulics has been performed successfully.
- ✓ The measuring cells documentation is within easy reach.

Perform the following work steps:

1. Unscrew the protective caps from the top of the valves and store these away carefully for future use.

2. Screw the measuring cells (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, Pos. 7 – 10) into the fittings. Observe the measuring cell documentation during installation.
 3. Connect the measuring cells with the connecting cables.
- ✓ **The measuring cells of the water sampling station have been successfully installed.**

7.13.3 Temperature sensor

The flow controller DFR 45 is fitted with a temperature sensor (Pt100) which is already installed in the **TOPAX® MC** controller. This section describes how to replace the sensor.

Pre-conditions for actions:

- ✓ The installation of the water sampling station, the electrics and the hydraulics has been performed successfully.

Perform the following work steps:

1. Unscrew the sensor or the sealing plugs from the flow controller temperature measuring station.
 2. Screw the new temperature sensor into the opening.
 3. Open the housing of the **TOPAX® MC** controller.
 4. Connect the connecting cable of the temperature sensor with the clamps 57 and 58.
 5. Lead the connecting cable through one of the cable screw connections on the underside of the controller and screw it tight to guarantee the protection class of the housing.
 6. Close the housing of the **TOPAX® MC** controller.
- ✓ **The temperature sensor of the water sampling station has been installed successfully.**

8 Commissioning of the water sampling station

Outputs				Controller functions	Behaviour
Relays	Optocoupler	Servomotor relay	Servomotor 20 mA		
x				On/Off	<ul style="list-style-type: none"> The output switches if a value is exceeded. Hysteresis can be set from 0,1 – 50 %
x	x			Pulse frequency 2-sides pulse frequency	<ul style="list-style-type: none"> Relay: 10 – 100 pulses per minute Optocoupler: 10 – 350 pulses per minute The pulse frequency is dependant on the control deviation and the set control parameters. With a control output power of $Y = 25\%$ and a maximum pulse frequency of 100 pulses/min., the controller would output 25 pulses/min.
x				Pulse length 2-sides pulse length	<ul style="list-style-type: none"> 0 – 3600 seconds cycle duration Relay output (e. g. for solenoid valve) Depending on the control deviation and the defined control parameters, the relay pulls in or drops out for the set cycle duration. If the cycle lasts 30 seconds and the controller output power is 40 % the relay applies for example for 12 seconds, followed by 18 seconds of non-application.
		x		Servomotor with a feedback potentiometer	<ul style="list-style-type: none"> A feedback potentiometer can be connected (1 – 10 kΩ) for servomotors with position feedback. Compensate the feedback potentiometer. During compensation, the servomotor is first started and then stopped automatically.
		x		Servomotor without a feedback potentiometer	<ul style="list-style-type: none"> For servomotors without feedback. Measure and set the runtime of the servomotor.
			x	Continuous output	<ul style="list-style-type: none"> Continuous control output from 0/4 – 20 mA for the actuation of constant actors.
			x	Servomotor with 20 mA feedback	<ul style="list-style-type: none"> Servomotors which are controlled via 0/4 – 20 mA and have a 0/4 – 20 mA position feedback.

Tab. 37: Functions of the individual controllers



PLEASE NOTE

Distorting the measurement results

The measurement results of high-impedance sensor inputs may be distorted in the first 24 hours due to the heat development inside the housing of the **TOPAX® MC** controller.

⇒ Activate the **TOPAX® MC** controller 24 hours before start-up.

⇒ Factor in the distortion caused by the heat development and only perform the calibration for the measurement results 24 hours after activating the **TOPAX® MC** controller.

8.1 First steps

8.1.1 Adjustment of the flow controller

The first step during start-up is the setting of the flow volume on the flow controller. Proceed as follows.

Pre-conditions for actions:

- ✓ The installations of the water sampling station, the electrics, the hydraulics and the measuring cells have been performed successfully.

Perform the following work steps:

1. Open the inflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 5) and the outflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 12) on the water sampling station.
2. Adjust the flow volume using the setting screw of the flow controller.

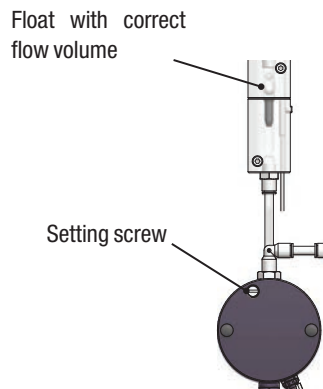


Fig. 27: Setting the flow controller

3. Read off the flow volume on the flow control (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 2). It has been set correctly if the upper level of the float lies against the notched marking.

- ✓ **Flow controller set.**

8.2 Configuration assistant

With initial commissioning, a configuration wizard will lead you through the basic settings: Your preferred language, the measured values, controller assignments and switch outputs. With the exception of the language, the values configured here can only be set in the configuration assistant. The finer settings are made in the sub-menus.

Working in the configuration assistant, determine the tasks of the installed modules, the controller and the output modules.

The finer settings such as the behaviour of these modules are made later, e. g. in the “Outputs” menu item.

Perform the following work steps:

1. Set the preferred language and press on the arrow.
2. **Measured values:** Determine the desired measured value for the installed input modules. Press the right-hand arrow.

3. **Controller:** You can assign inputs for up to four controllers in this tab. Select a sensor, a virtual input or a timer. Set the centre row of the control function (Tab. 18 „Multi-channel controller TOPAX® MC measuring inputs“ on page 16) and press the right-hand arrow. Controllers 1 to 4 must be assigned to the output modules 1 to 4 in a fixed fashion.

4. **Digital outputs:** You can assign a function to output modules in this tab. Only the output modules which are still free are displayed. Press the right-hand arrow.

5. Confirm the security query with “Yes” to save the configuration.

- ✓ **The configuration assistant has been ended.**



Start the configuration assistant manually in System > Settings > Configuration > “Configuration assistant”.

8.3 Configuration

The device is set up variably and can be individually adapted to meet your requirements. As such, it is necessary to adjust the configuration of the inputs and outputs to the sensors and actors used.

The following section leads you through the device configuration.

8.3.1 Inputs

You can connect up to four sensors (depending on model) for various water parameters and the temperature to the device. You can also use up to eight digital inputs (depending on the version).

8.3.1.1 Sensor inputs

The sensors in the device must be configured individually to enable precise and error-free measurement of the water parameters. You can perform various settings.

Perform the following work steps:

1. In the main menu, navigate from System > Inputs to the “Sensors” tab.
2. In the “Sensors” tab, configure every connected sensor and state the following information.
3. **Input:** Select the input module of the sensor which you wish to configure.
4. **Signal:** Enter the type of the sensor signal. Depending on the input module, the signal type has been specified or you can select a signal type.
5. **Measurement:** Here, you can check which water parameters are measured. This setting can only be changed in the configuration assistant.
6. **Unit:** Select the appropriate unit.
7. **Measuring range:** If an input field is available, enter the measuring range of the sensor.
8. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
9. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.

10. Delay: Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the sensors completed.**

8.3.1.2 Temperature inputs

You can connect up to four temperature sensors (depending on the version) to the device. This enables you to measure the temperatures at various positions.

Perform the following work steps:

1. In the main menu under System > Inputs, navigate to the "Temperature" tab.
2. In the "Temperature" tab, configure every connected temperature sensor and state the following information.
3. **Measurement:** Chose between "On" and "Off".
4. **Min-alarm:** Activate or deactivate the minimum alarm and state a temperature under which the alarm will be triggered.
5. **Max-alarm:** Activate or deactivate the maximum alarm and state a temperature over which the alarm will be triggered.

✓ **Configuration of the temperature sensors completed.**

8.3.1.3 Compensation of cross sensitivities

The water parameters which you measure with the device can be falsified by interference (e. g. with temperature or pH value).

The device can compensate these interferences automatically.

Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the "Compensation" tab.
2. Working in the "Compensation" tab, configure every sensor connected for which the measured value is to be compensated and state the following information
3. **Temperature:** If it is possible to compensate for the influence of the temperature, you can select a fixed reference value or one of the four temperature inputs.
4. **pH value:** If it is possible to compensate for the pH value error, you can select a fixed reference value or a sensor input.

✓ **Configuration of the compensation completed.**

8.3.1.4 Disturbance variable

You can connect the measurement of a disturbance variable (e.g. a flow volume) to an analogue 4 – 20 mA input. The disturbance variable can then be taken into account with a factor (0.1 to 10) during the calculation of the control variable Y. The control variable Y will be multiplied with the disturbance variable during the calculation.

Example: If the factor = 2 and the disturbance variable amounts to 42 %, the controller can be set to a maximum of the control variable Y = 84 %. If the factor = 0.5 and the disturbance variable amounts to 42 %, the controller can be set to a maximum of the control variable Y = 21 %.

Perform the following work steps:

1. Working in the main menu under System > Controller, navigate to the "Disturbance variable" tab and state the following information.
2. **Disturbance variable:** Set the disturbance variable to an input signal of 4 – 20 mA or 0 – 20 mA. You can also deactivate the disturbance variable.
3. **Unit:** As a rule, the disturbance variable is the measurement of a flow. Select the desired unit.

✓ **Configuration of the disturbance variable input completed.**

8.3.1.5 Virtual inputs

You can calculate a new value from multiple measurements or reference values using a virtual input. You can assign the new virtual value to a controller in the configuration assistant.

In this way, you can calculate the difference between the bound chlorine and the effective chlorine and use it as the basis for controlling your actors.

Difference

You can calculate the difference between two measured values or the difference between a measured value and a fixed reference value.

Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the "Virtual" tab.
2. State the following information.
3. **Calculation:** Select "difference".
4. Select a sensor.
5. Select a second sensor or a reference value. The second sensor must output the same measured value as the first. You will need to enter the reference value manually.
6. **Min-alarm:** Activate or deactivate the minimum alarm and state a difference value under which the alarm will be triggered.
7. **Max-alarm:** Activate or deactivate the maximum alarm and state a difference value over which the alarm will be triggered.
8. **Delay:** Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the difference completed.**

Combined chlorine

Bound chlorine is calculated from the difference between the total chlorine and the free chlorine:

Bound chlorine = total chlorine – free chlorine

At least one total chlorine measurement is required to calculate bound chlorine. The chlorine value can be entered manually as a single reference value or a corresponding sensor input is selected.

Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the "Virtual" tab.
2. Working in the "Virtual" tab, configure the desired calculation of the bound chlorine and state the following information.
3. **Calculation:** Select "bound chlorine" to calculate the bound chlorine.
4. **Total chlorine:** Select the sensor which measures the total chlorine.
5. **Free chlorine:** Select the sensor which measures the free chlorine. If no sensor is present, you can enter a reference value measured once which can be used for the calculation.
6. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
7. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.
8. **Delay:** Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the bound chlorine completed.**

Effective chlorine

The disinfectant effect of the free chlorine is highly dependant on the pH value of the process water. The pH value influences the reactivity of the Chlorine ions. This relationship is underscored by the dissociation curve (Fig. 28 „Dissociation curve of the effective chlorine“ on page 31) of the chlorine.

The actual disinfectant effect of the chlorine is generated by the hypochlorous acid (HClO). The figure shows that the proportion of the HClO is largest between pH 2 and pH 7.5. The disinfectant effect is very low outside this pH value.

For photometric measurements the pH value of the sample is buffered to approx. pH 6.5. As a result the measurement has a higher effective chlorine content than is actually in the process water. For high pH-values significant differences will therefore occur between the expected and actual disinfection if assessed by photometric analysis. The calculation of the effective chlorine can be used to display the proportion of the hypochlorous acid (HClO), i.e. the proportion which contributes to the disinfectant effect.

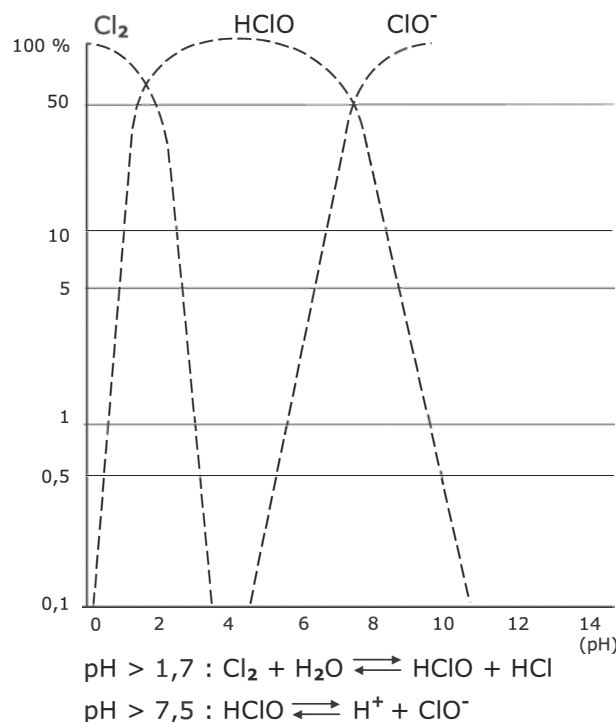


Fig. 28: Dissociation curve of the effective chlorine

Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the "Virtual" tab.
2. Working in the "Virtual" tab, configure the desired calculation of the effective chlorine and state the following information.
3. **Calculation:** Select "effective chlorine" to calculate the effective chlorine.
4. **Free chlorine:** Select the sensor which measures the free chlorine.
5. **pH value:** Select the sensor which measures the pH value. If no sensor is present, you can enter a reference value measured once which can be used for the calculation.
6. **Temperature:** A temperature value is required to calculate the effective chlorine. Select the temperature input which can be used for the calculation. If no temperature sensor is present, you can set a reference value measured once which can be used for the calculation.
7. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
8. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.
9. **Delay:** Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the calculation of the effective chlorine completed.**

8.3.1.6 Digital inputs

You can use up to 8 digital inputs to evaluate switching statuses and to detect them as alarm message which are to be documented in the log-files.

Perform the following work steps:

1. In the main menu under System > Inputs, navigate to the "Digital" tab.
2. In the "Digital" tab, configure the inputs and state the following information.
3. **Action:** Choose between "OK = open" (N.O., working contact) or "OK = contact" (N.C., break contact).
4. **Function:** Select a function from Tab. 38 „Functions digital inputs“ on page 32 depending on the desired reaction of your device to the input.

✓ **Configuration of the digital inputs completed.**

Function	Reaction
Off	The switching of the contact has no influence on the measurement or control.
Setpoint changeover	You can use the contact to switch between reference sets.
Measuring water shortage	All controller outputs will be switched off.
External stop	All controller outputs will be switched off.
Pre-alarm 1 – 4	Only display as an alarm message. Nothing is switched off.
Main alarm 1 – 4	The appendant controller output is switched off. The other outputs remain unaffected.
Others	You can assign an individual name to this digital input. The name is displayed in the alarm messages during switching the contacts.

Tab. 38: Functions digital inputs

8.3.2 Outputs

Depending on the equipment, you can connect a range of actors to the device and actuate them. Make sure that you actuate the actor with the correct signal type and select an appropriate output module with the configuration.

An alarm relay, up to four analogue outputs and the possibility of connecting external LEDs (e.g. for water sampling stations) are always available.

8.3.2.1 Controller outputs

You can configure and use up to four controllers.

Pre-conditions for actions:

- ✓ You have used the configuration assistant to assign an input and a control function to a controller (see section 8.2 „Configuration assistant“ on page 29).

Perform the following steps:

1. Working in the main menu under System > Outputs, navigate to the "Controller" tab.
2. Working in the "Controller" tab, configure the controller output and state the following information.
3. **Y-alarm:** Activate the Y alarm. The Y alarm is a safety cut-out. If the controller output power amounts to more than 95 % (e.g. through a malfunction) over the set time, the Y alarm will be triggered and the corresponding controller output will be set to 0 %. You can set a time between 0 and 200 minutes.
4. **Basic load:** Depending on the controller function, you can set a base load which is always active independently of the control variable. With a base load of 10 %, the actor is always actuated with a minimum of 10 %.
5. **Limit:** Depending on the controller function, you can set a limit of between 5 and 100 %. State the value at which the actor should be actuated as maximum.
6. Further settings are dependant on the function of the controller. Further information is available in Tab. 20 „Functions of the individual controllers“ on page 17.

✓ **Configuration of the controller outputs completed.**

8.3.2.2 Actuation via a timer

The output can be used for direct actuation via a timer. This is required e.g. to run the flocculant pump or the peristaltic pumps over a certain time.

Pre-conditions for actions:

- ✓ You have assigned the "Timer switch" input to a controller using the configuration wizard as described in the chapter 8.1 „First steps“ on page 29.

Perform the following work steps:

1. Working in the System menu, navigate to > Outputs and configure the output (see section 8.3.2 „Outputs“ on page 32).
2. Navigate to the menu > setpoints. Here, you can set the desired set control output directly from 0 to 100 %.
3. **Reference set:** Here, you can set various control outputs and via the timers in the "Switching" tab, you can determine when the control output should be changed. The checkmark must be set against "Switch setpoints automatically". Further information pertaining to switching is found in section 9.6 „Setpoints and reference sets“ on page 41.

✓ **Actuation configured via a timer.**

8.3.2.3 Controller parameters

You can configure the behaviour of the individual controller channels. Explanations of the various functions can be found in Tab. 20 „Functions of the individual controllers“ on page 17 and in section 18 „Glossary“ on page 61.

Perform the following work steps:

1. Working in the main menu under System > Controller, navigate to the "parameter" tab.

2. Working in the "Parameter" tab, configure every control channel and state the following information.
3. **Control direction:** Configure the direction of control. If a switch is to be made between a 1- and a 2-side control, this must be set in the configuration assistant.
4. **Function:** Set the desired controller function. Possible: P-, PI-, PD- and PID-controller.
5. **Xp, Tn, and Tv:** You can configure these parameters depending on the control function that has been set.
6. **Disturbance variable and factor disturbance variable:** If you have activated a disturbance variable (see chapter 8.3.1.4 „Disturbance variable“ on page 30), you can configure the influence of this disturbance variable on the selected controller channel. You can switch the influence on or off and set a factor between 0.1 and 10.

✓ **Configuration of the controller parameters completed.**

8.3.2.4 Digital output signals

You can use digital output signals via the outputs of the alarm relay, an optocoupler circuit board or a relay circuit board. The following sections describe the configurations that you can perform.

Alarm relay as an alarm output.

You can use the alarm relay (terminals 41 – 43) on the main board as an output for alarm messages.

Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the "Digital" tab.
2. Working under "Digital output", select the "alarm relay" output.
3. Configure the alarm relay by entering the following data.
4. **Action:** Choose between "normal opened" (N.O., make contact) or "normal closed" (N.C., break contact).
5. **Latching:** "On" = the alarm relay is active until all alarms have been manually confirmed. "Off" = the relay is automatically deactivated if the active alarms are no longer pending.
6. **Output triggers upon:** Select which alarms should trigger the alarm relay. The relay switches as soon as one of the selected alarms is active.
7. **Alarm delay:** Determine the earliest point (in seconds) at which the relay should switch after activation of the alarm.

✓ **Configuration of the alarm relay completed.**

Further alarm outputs

In addition to the alarm relay, you can use the unused outputs of the optocoupler circuit board or relay circuit boards for further alarm messages.

Pre-conditions for actions:

- ✓ You have used the configuration assistant to assign the "alarm output" function to a free output (see section 8.2 „Configuration assistant“ on page 29).

Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the "Digital" tab.

2. Working under "Digital output" select the desired output.
 - ▶ The free outputs will be displayed which you have configured as an "alarm output" in the configuration assistant. Example: "Relay 1.2". The first digit stands for the number of the output circuit board (1.X) and the second digit stands for the number of the output on the circuit board (X.2).
3. Working under the "Function" display, check whether the function with "alarm output" is displayed.
4. Configure the alarm output by entering the following data.
5. **Action:** Choose between "normal opened" (N.O., make contact) or "normal closed" (N.C., break contact).
6. **Latching:** "On" = the alarm output is active until all alarms have been manually confirmed. "Off" = the output will be deactivated automatically if the alarms are no longer active.
7. **Output triggers upon:** Select from the list of all possible alarms those which should trigger the output. The output switches as soon as one of the selected alarms is active.
8. **Alarm delay:** Determine the earliest point (in seconds) at which the output should switch after activation of the alarm.

✓ **Configuration of the alarm output completed.**

Limit value control

You can use unused outputs from optocoupler circuit boards or relay circuit boards as a limit value control (including "DIN contact").

An output for limit value control switches if all measured values are located within the defined limits.

Pre-conditions for actions:

- ✓ You have used the configuration assistant to assign the "limit value control" function to a free output (chapter 8.2 „Configuration assistant“ on page 29).

Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the "Digital" tab.
2. Working under "Digital output" select the desired output.
 - ▶ The free outputs will be displayed which you have configured as "limit value control" in the configuration assistant. Example: "Relay 1.2". The first digit stands for the number of the output circuit board (X.1) and the second digit stands for the number of the output on the circuit board (X.2).
3. Working in the "Function" display, check whether the function with a "limit value control" is displayed.
4. Configure the limit value control by entering the following data.
5. **Action:** Choose between "normal opened" (N.O., make contact) or "normal closed" (N.C., break contact).
6. **Delay:** The contact switches only if all water parameters are continually over the set lag time within the limits set. The lag time can be set between 0 and 10.
7. **Parameter:** Set the measured values in which the water parameters must be located so that the output switches. Press the minimum or maximum value that you wish to change.

✓ **Configuration of the limit value control completed.**

8.3.2.5 Analogue output signals

The basic configuration of the device includes up to four analogue 4 – 20 mA outputs. You can use the outputs to transmit the measured values to a control room or a PLC (programmable logic controller).

Some actuators such as dosing pumps can be controlled directly via this output.

Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the “Analogue” tab.
2. Working under “Analogue”, select the desired output.
3. Configure the analogue output by entering the following data.
4. **20 mA type:** You can choose between the following signal types: 4 – 20 mA, 0 – 20 mA, 20 – 4 mA or 20 – 0 mA.
5. **Testsignal:** You can test the configuration of the analogue outputs. Check the actuation on the external device.
6. **Output:** Determine what should be outputted on the selected output. You can choose between the measurement and temperature values or outputs (controller outputs).
7. **Minimum:** Determine a minimum value. The minimum value indicates for which measured value the signal is the weakest.
8. **Maximum:** Determine a maximum value. The maximum value indicates for which measured value the signal is the weakest.



The values for “minimum” and “maximum” serve the scaling of the analogue output signal. Example: Sensor 1 has a measuring range of 0 – 10 mg/l. 4 – 20 mA was selected as the 20 mA type. If the complete sensor measuring range is to be covered by the analogue signal, 0 mg/l should be selected for “Minimum” and 10 mg/l for “Maximum”. At 0 mg/l, a 4 mA signal will be issued; at 10 mg/l a 20 mA signal will be issued.

✓ Configuration of the analogue outputs completed.

8.3.2.6 Actuation of the LEDs for the water sampling stations

Some water sampling stations have multiple LEDs which display whether a water parameter is in the desired range. You can configure the actuation of the LEDs.

Perform the following work steps:

1. Working in the main menu under System > Outputs, navigate to the “External LEDs” tab.
2. Working under “LED”, select the desired LED.
3. Configure the LED by entering the following data.
4. **Function:** Select the reaction criteria for the LED. Selection of “Sample water shortage” standardly results in a green LED. If the digital contact “Sample water shortage” is active, it will illuminate red. Further options are the measured values of the sensor inputs 1 – 4.
5. **Minimum and maximum:** If you have decided to use a measured value, you must establish a minimum and a maximum value. The LED will illuminate red if the minimum value is undercut or the maximum value exceeded. It illuminates green between the values.
6. **Testsignal:** You can test the configuration of the LEDs.

✓ Configuration of the external LED outputs completed.

8.3.3 Second overview

In the main view, the device shows the measured values of the installed input modules. This display is pre-determined and cannot be changed.

However, you can activate a “second overview” and adapt your needs individually (see Fig. 29 „Individual second overview“ on page 34).

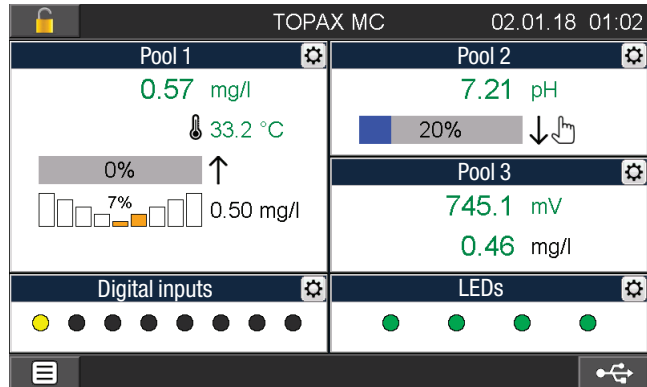


Fig. 29: Individual second overview

The second overview of the **EASYPRO** double versions **MBB**, **MEE**, **2/2** and **1/1** is preconfigured to provide a complete overview of all values.

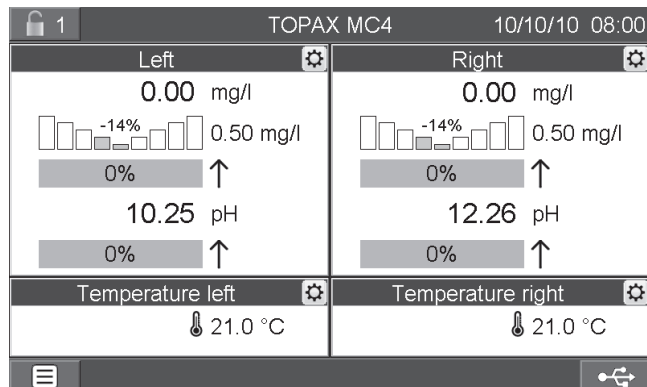


Fig. 30: Second overview of an **EASYPRO** double version

8.3.3.1 Activating the second overview

Perform the following work steps:

1. In the main menu under System > Settings, navigate to the “Display” tab.
2. **Overview:** Activate the second overview with “On”.
3. **Number windows:** Select how many individual and freely-configurable windows should be displayed.

✓ Second overview activated.

8.3.3.2 Configuring the second overview

Perform the following work steps:

1. Press the “Main menu” button (bottom left on the display) until the second overview with the individually-settable windows appears.
2. A gear wheel icon is displayed in the top right-hand corner of every window. Press on the icon to configure the selected window and state the following information.
3. **Name:** Give each window an individual name.

4. **Display 1 – 5:** Up to five displays can be configured depending on the size of the window. You can choose between the measured values, the virtual values, the outputs, the setpoints, the disturbance variables, the digital inputs and the external LED outputs.

✓ **Configuration of the second overview completed.**

8.3.4 Colours of the alarm messages

You can edit the colours of the different messages.

Perform the following work steps:

1. In the main menu under System > Settings, navigate to the “Alarm colour” tab.
2. Look in the “Alarm colour” tab for the message for which you wish to edit the alarm colour.
3. Press on the row of the alarm and then on “Edit”.
 - ▶ You can choose between four colour fields.

✓ **Alarm colour edited.**

8.3.5 Save the configuration

You can save your individual configuration and load it later to rectify problems quickly.

Recommendation: Leave the factory-set configuration file unchanged and save your personal configuration in a new file. Given problems with the configuration, this enables you to return to a functioning configuration quickly.

Perform the following work steps:

1. In the main menu under System > Settings, navigate to the “Configuration” tab.
2. Press “save” and enter an existing file name to overwrite the file or a new name to generate a new configuration file.
3. Press on the green checkmark to confirm the entry.

✓ **Configuration saved.**

8.4 Password protection

The password protection of your device has been deactivated at the factory. You can provide your device with password protection against access to specific functions in three levels.

- **1. Level:** Only simple settings are accessible here. This level is suitable for daily operation.
- **2. Level:** The configuration of the inputs and outputs and the adjustment of the sensors are accessible here. This level is required for device configuration and should only be operated by experienced users.
- **3. Level:** The service menu is accessible here. This level is mainly required for maintenance work such as changing the sensor, performing software updates or network settings.

i The following passwords are factory-set:

1. Level: 0001
2. Level: 0002
3. Level: 0003

Configuring the password protection

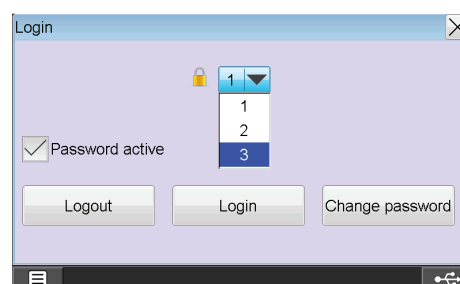


Fig. 31: Configuring the password protection

Perform the following work steps:

1. Press the lock icon in the left-hand upper corner to configure the password protection.
2. **Password active:** Select whether password protection should be activated or deactivated. Password protection can only be deactivated if you are logged in to level 3.
 - ▶ Password protection must be activated to unlock the following steps.
3. Select one of the three password levels into which you wish to log on.
4. **Login:** Login with the password for the password level previously selected.
5. **Change password:** You can edit the password of the level in which you are logged in.

✓ **Password protection configured.**

8.5 Network settings

You may need to perform settings in order to be able to use the device in a network.

Further information about using the device in a network can be found in section 9.7 „Access via network“ on page 43.

Perform the following work steps:

1. In the main menu under System > Service, navigate to the “Network” tab.
2. Working in the “Network” tab, configure the interface and state the following information.
3. **IP address:** Give the device a unique IP address through which it can be reached in the network. If this IP address is already being used by another device, errors can result.
4. **Subnetmask** Enter the subnetmask.
5. **TFTP server:** “On” = Access via TFTP protocol activated on the device memory. “OFF” = Access via TFTP protocol deactivated on the device memory.
6. **Modbus RTU address:** Enter a number between 1 and 14 in the device if your device is fitted with a RS485 network connection.

✓ **Network settings performed.**

9 Operation

When in operation, the device will display the main view with the current values and the status row with status messages.

9.1 Confirming a message

You can view device alarm, error and service messages in the status row. The status row flashes in the colour set for the message type. Inactive messages are displayed white.

You must confirm a message on the device to end the display of inactive messages in the status row. Active messages will still be displayed, even if they have been cleared.

Perform the following work steps:

1. When a message is displayed, press on the status row or go to the "Messages" menu.
2. Select one or more messages and press either "Confirm" or "Confirm all".
 - ▶ The confirmed message is marked with a green tick.

✓ **Message confirmed.**

History

You can follow the course of the messages in a history.

In the main menu, press "messages" and the tab "History".

9.2 Logbook

The messages and service entries are saved in the device on a USB flash drive. You can display the files on the device or connect the USB flash drive to an external device.

The USB flash drive in the device contains the following logbook files:

Log	Format	Description
REPORTS	CSV	Messages
TREND	DAT	Trend data
SERVICE	CSV	Service entries
CHANGES	CSV	Changes to the configuration
SETUP	SET	Configuration
ADJUSTMENT	CSV	Calibration

Tab. 39: Logbook



You can open and analyse CSV files with a suitable programme (e. g. MS Excel). You can also view all CSV files on the device.

9.2.1 View and open files

You can display the logbook files on the device.

Perform the following work steps:

1. Press the USB icon in the status row (below right).
 - ▶ The files saved on the USB flash drive will be displayed in a file browser.
2. Open one of the file folders.
3. Select the desired file and press "Open file".

✓ **File opened.**

9.2.2 Opening files externally.

You can open the logbook files on an external device once you have removed the USB flash drive.



DANGER!

Mortal danger from electric shock!

When the device housing is open, you can touch live parts. There is the danger that you could suffer an electric shock.

- ⇒ Ensure that the machine has been disconnected from the voltage supply and is not live when conducting work with an open housing.
- ⇒ Secure the voltage supply against reactivation.

Pre-conditions for actions:

- ✓ The voltage supply is deactivated before the start and secured against reactivation.

Perform the following work steps:

1. Open the housing.
2. Remove the USB flash drive.
3. Connect the USB flash drive with an external device and open it.
 - ▶ You can now access the logbook files.

✓ **Files opened externally.**

9.3 Configure trend display

You can view the trend progression of up to four measured values in the last 24 hours.

Perform the following work steps:

1. In the main menu, press "Trend".
 - ▶ The device will show the trend.
2. You can configure the display in accordance with your wishes. Press the "Display" tab and activate up to four values which are to be displayed in the trend.

3. You can set the scaling of the individual trend display for every value individually. Press on the "Scaling" tab, select a sensor and define "minimum" and "maximum".

✓ **Trend display configured.**

9.4 Manual mode

You can manually control a controller output in the menu item "Manual mode" and set an output capacity between 0 and 100 %.

If a controller is in manual mode, this is indicated by a blue Y display in the main view and by a hand icon.

Working in the menu item "Manual mode", you can also switch the automatic switching of the setpoints on or off (see section 9.6 „Setpoints and reference sets" on page 41).

9.5 Calibration



New electrodes or initial start-up requires the renewed calibration of all measuring cells after 1 - 2 days initial running time.

You must first calibrate the sensors before you can detect the correct measured values. All calibration processes in the device are monitored for plausibility (zero point and slope) and the measured values documented. Measured values resulting from an uncalibrated sensor are marked in the main overview. In this case, the measured values are displayed in red. If the measurement input is displayed individually in the main view, the information "Calibration not OK" will be displayed.

The current calibration and slope can be found in the "Calibration" menu in the "Overview" tab.

9.5.1 Calibrating a double version water sampling station

The functions of the water sampling stations **EASYPRO 1/1, 2/2, MBB-C** and **MEE-C** correspond to those of the water sampling stations **EASYPRO 1, 2, MB-C** and **ME-C**, but enable users to control an additional process.



PLEASE NOTE

Avoid incorrect calibration!

Comply with the numbering sequence when calibrating and replacing the measuring cells.

- ⇒ Select measuring cells 1 and 3 for the left-hand area.
- ⇒ Select measuring cells 2 and 4 for the right-hand area.

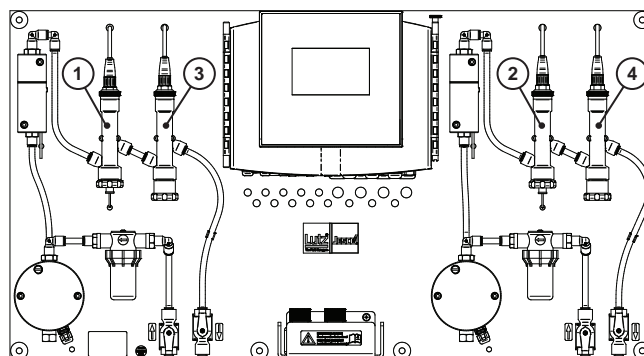


Fig. 32: View of the **EASYPRO** water sampling station as a double version

9.5.2 pH single-rod measuring cell

Calibration of the pH single-rod measuring cell can be performed as a 2-point calibration with 2 buffer solutions or a single point calibration with subsequent input of the slope of the sensor.

The actual voltage of the single-rod measuring cell and the ideal value of the set buffer solution is displayed during calibration.

The response time for a new single-rod measuring chain is a few seconds and is set when the physical reading becomes stable. Older single-rod measuring cells can have a longer reaction time.



To perform the calibration performed here, you will require a buffer solution with a known pH value. Buffer solutions have a restricted storage life and their pH value changes depending on their duration of storage and the storage conditions.

Comply with the manufacturer's instructions pertaining to the correct storage; use buffer solutions only within the scope of their life period and never submerge a sensor in a buffer solution immediately after removing it from a different buffer solution.

9.5.2.1 2-point adjustment of the pH value

Pre-conditions for actions:

- ✓ Two different buffer solutions are ready.
- ✓ The sensor is clean.

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
3. Press the "2 points" button.
 - ▶ 2-point calibration begins.
4. Shut off the sample water of the sensor block.
5. Unscrew the pH single-rod measuring cell from the sensor block.
6. Rinse the pH single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
7. Hold the dry pH single-rod measuring cell in the first buffer solution. It is not important, which of the two buffer solutions you start with.

8. Enter the pH value of the first buffer solution. This pH value serves as a reference value for the device. The ideal voltage value and the current voltage value is displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the pH single-rod measuring cell needs to be replaced.
9. Wait until the value has stabilised.
10. Confirm the entry with the green checkmark.
11. Repeat points 6 to 10 for the second buffer solution.
12. A window with the actual slope of the sensor will open.

✓ **2-point adjustment of the pH value completed.**

9.5.2.2 1-point adjustment of the pH value

Pre-conditions for actions:

- ✓ A buffer solution is on hand for calibration.
- ✓ The slope of the pH single-rod measuring cell was measured in a laboratory beforehand.

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
3. Press the "1 points" button.
 - ▶ 1-point calibration begins.
4. Shut off the sample water of the sensor block.
5. Unscrew the pH single-rod measuring cell from the sensor block.
6. Rinse the pH single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
7. Hold the pH single-rod measuring cell in the buffer solution and move back and forth for a short time.
8. Enter the pH value of the buffer solution. This pH value serves as a reference value for the device. The ideal voltage value and the current voltage value is displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the pH single-rod measuring cell needs to be replaced.
9. Wait until the value has stabilised.
10. Confirm the entry with the green checkmark.
11. You will be requested to set the slope. Enter the slope.
12. Confirm the entry with the green checkmark.

✓ **1-point adjustment of the pH value completed.**

9.5.2.3 Offset compensation

External influences can cause the pH value measured with the photometer to deviate from the electrometric measurement of the pH value by a constant value. The offset compensation enables you to compensate for this constant difference (zero-point deviation).

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
3. Press the "Offset" button.
4. You can enter a pH offset from pH -0.30 to max pH +0.30.
5. Confirm the entry with the green checkmark.

✓ **Offset compensation completed.**

9.5.3 Redox value

The Redox value is measured using the Redox single-rod measuring cell. The Redox single-rod measuring cell measures the voltage present in the water due to oxidizing and reducing ions. You must calibrate the Redox single-rod measuring cell during commissioning.

9.5.3.1 1-point adjustment of the Redox value

Pre-conditions for actions:

- ✓ A buffer solution is on hand for calibration.

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "sensor", select the sensor that measures the Redox value and which you wish to calibrate.
3. Press the "1 points" button.
 - ▶ 1-point calibration begins.
4. Shut off the sample water of the sensor block.
5. Unscrew the Redox single-rod measuring cell from the sensor block.
6. Rinse the Redox single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
7. Hold the Redox single-rod measuring cell in the buffer solution and move back and forth for a short time.
8. Enter the voltage value in mV which is recorded on the buffer solution. The voltage value entered and the current measured voltage value are displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the Redox single-rod measuring cell needs to be replaced.
9. Wait until the value has stabilised.
10. Confirm the entry with the green checkmark.

✓ **1-point adjustment of the Redox value completed.**



With older sensors, the reaction time can increase or the measured value can differ considerably from the buffer solution value. This indicates that the Redox single-rod measuring cell must be checked and replaced if necessary.

9.5.4 3-Electrode potentiostat and excess chlorine measuring cell CS120

You should calibrate a 3-electrode potentiostat or the potentiostatic measuring cells (chlorine sensors) as single-point calibration as a matter of course. You will require a photometrically measured value in accordance with the DPD method as a reference value.



With operation in a hot water system, electrochemical processes on the measuring electrode can result in a displacement of the zero point. In this case, 2-point calibration is necessary in which you calibrate the zero point using chlorine-free hot water. The second point is determined using the DPD method with chlorinated water as usual.

9.5.4.1 1-point adjustment of a 3-electrode potentiostat

To calibrate chlorine sensors, you will require a photometer with which to measure the reference value using the DPD method.

Pre-conditions for actions:

- ✓ A measurement device for determining the DPD value is already present.
- ✓ The sensor is operated with sample water.

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "Sensor", select the sensor that you wish to calibrate.
3. Press the "1 points" button.
 - ▶ 1-point calibration begins.
4. Take sample water in immediate proximity to the measuring cell and confirm with "OK".
5. Determine the concentration in the sample water using the DPD method.
6. Enter the measured concentration. This serves the device as a reference value with which to permit correct measurement.
7. Confirm the entry with the green checkmark.

✓ **1-point adjustment of a 3-electrode potentiostat completed.**

9.5.4.2 2-point adjustment of a 3-electrode potentiostat

Pre-conditions for actions:

- ✓ A measurement device for determining the DPD value is already present.
- ✓ The sensor is operated with sample water.

Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "Sensor", select the sensor that you wish to calibrate.
3. Press the "2 points" button.
 - ▶ 2-point calibration begins.
4. You will be asked to set the first reference value; this is the zero point. If the zero point was mal-set by accident, set it by pinching off the measuring electrode and entering a value of zero. Should real 2-point calibration be performed, e.g. due to hot water, you must first perform calibration with chlorine-free and then with chlorinated water. Enter a value for the zero point.
5. Confirm the entry with the green checkmark.
6. Take sample water in immediate proximity to the measuring cell and confirm with "OK". This means that the current signal at the time of the sample water extraction is saved to rule out signal fluctuation as a measurement error during the DPD ascertainment.
7. Determine the concentration in the sample water using the DPD method.
8. First enter the determined DPD value.
9. Confirm the entry with the green checkmark.

✓ **2-point adjustment of a 3-electrode potentiostat completed.**

9.5.5 Conductivity conductive

When calibrating the conductivity measurement, the slope of the conductive measuring electrode is ascertained in combination with the input amplifier of the **TOPAX® MC**. The value (mA) measured with the conductive conductivity measuring cell is assigned to the conductivity (mS/cm or µS/cm), which is then displayed in the main menu. This is performed over two points; the first point corresponds with 0 mA; 0 mS/cm is electrically stipulated and no action is required. The usual approach uses 1-point calibration, but a calibration in the setpoint is also conceivable.



The unit is always mS/cm or µS/cm. Due to grounds of space, the **TOPAX® MC** partially displays only mS or µS; % salt content is a further possibility.



Given correct calibration, measurements in the medium and upper measuring range have a deviation of $\pm 1\%$ of the measuring range final value. The electronic design means that measurements against the zero point have a greater tolerance. This means that the conductivity measurement is suitable for tap water applications but not for ultra pure water applications (e.g. reverse osmosis units).

9.5.5.1 1-point adjustment for the conductivity measurement

For calibration purposes, use only KCL buffer solutions (potassium chloride) for the various measuring ranges in accordance with the following scheme:

Measuring range	buffer solution
0 – 2000 µS/cm	1000 µS/cm = 1 mS/cm
0 – 20 mS/cm	12,88 mS/cm
0 – 100 mS/cm	80 mS/cm

Tab. 40: 1-point adjustment for the conductivity measurement

Pre-conditions for actions:

- ✖ A buffer solution corresponding to the measuring range is on hand and has the printed temperature.
- ✖ A clean cloth is available.

Perform the following work steps:

1. Working in the main menu under “Calibration”, navigate to the “Sensors” tab.
 2. Working under “Sensor”, select the sensor that measures the conductivity and which you wish to calibrate.
 3. Press the “1 points” button.
 - ▶ 1-point calibration begins.
 4. Shut off the sample water.
 5. Unscrew the conductivity measuring cell from the corresponding measuring cell housing.
 6. Dry the electrode with the cloth to prevent dilution of the buffer solution.
 7. Hold the conductivity measuring cell in the buffer solution and move back and forth for a short time.
 8. Enter the value which is recorded on the buffer solution. The measured current value and the entered value are both displayed.
 9. Wait until the value has stabilised.
 10. Confirm the entry with the green checkmark.
- ✓ **1-point adjustment of the conductivity measurement completed.**

9.5.5.2 Adjusting the conductivity in the setpoint

When controlling the conductivity with your **TOPAX® MC**, you can calibrate the conductivity close to the setpoint ($\pm 10\%$) using a reference measurement.

Pre-conditions for actions:

- ✖ The salt content of the sample water is close to the setpoint; the sampling station is in operation.
- ✖ A hand-held measuring device is available.

Perform the following work steps:

1. Working in the main menu under “Calibration”, navigate to the “Sensors” tab.
2. Working under “Sensor”, select the sensor that measures the conductivity and which you wish to calibrate.
3. Press the “1 points” button.
 - ▶ The calibration starts.

4. Remove the sample water from the measuring point.
5. Determine the conductivity with the portable meter.
6. Enter the value ascertained using the measuring device.
7. Confirm the entry with the green checkmark.

✓ **The calibration of the conductivity in the setpoint has been completed.**

9.5.6 Temperature

You can connect a temperature sensor to every input module. You can adjust the temperature sensor by setting a reference value.

When setting the reference value, the device will automatically correct the measurement of the temperature sensor by the difference.

9.5.6.1 Adjustment of a temperature sensor

Pre-conditions for actions:

- ✓ A thermometer is available.
- ✓ You have activated the measurement of the temperature (see section 8.3.1.2 „Temperature inputs“ on page 30).

Perform the following work steps:

1. Working in the Main menu under “Calibration”, navigate to the “Temperature” tab.
2. Working under “input”, select the input module for which you wish to set a reference value.
3. Press the “Reference value” button.
4. Enter the reference temperature measured beforehand.
5. Confirm with the green checkmark.

✓ **Adjustment of a temperature sensor completed.**

9.5.7 Servomotor relay

9.5.7.1 Servomotor with position feedback

You can connect servomotors with a position feedback to your device and control them via an output. Before you can control the servomotor exactly, you must first compensate the control via your device and the position of the servomotor.

During compensation, the servomotor is first driven to the end position and then back.

This section only applies to servomotors with a feedback potentiometer.

9.5.7.2 Calibration of an servomotor with position feedback

Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 20 „Functions of the individual controllers“ on page 17).

Perform the following work steps:

1. Working in the Main menu under "Calibration", navigate to the "Outputs" tab.
 2. Working under "Output", select the output which is to be adjusted.
 3. Press the "Compensate potentiometer" button.
 4. A further window with a progress bar opens; this indicates the position feedback.
 5. Compensation is started using the "Start" button.
 - ▶ The motor starts and runs to top speed, then stops. This can take a number of minutes.
 6. Completion of the compensation is signalled with "Compensation OK".
- ✓ **Calibration of an servomotor with position feedback completed.**

9.5.7.3 Servomotor without position feedback

You can actuate servomotors without a position feedback. To this end, you need to measure how quickly the motor starts and then set the controller accordingly.

Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 20 „Functions of the individual controllers“ on page 17).

Resources required:

- ✂ Timer.

Perform the following work steps:

1. Working in the main menu, navigate to the "Manual mode" menu item.
 2. Activate the manual mode of the output with "On" and set the control output as 0 %.
 - ▶ The servomotor now stops completely.
 3. Observe the drive and wait until it has stopped completely.
 4. Set the output to 100 % and at the same time, start to measure the time for the complete opening of the drive.
 - ▶ The servomotor now starts and runs to top speed.
 5. Observe the drive and wait until it has stopped completely.
 6. Deactivate manual mode with "Off".
 7. Working in the main menu under System > Outputs, navigate to the "Controller" tab.
 8. Working under "Output", select the output of the runtime which you have just measured.
 9. Working under "Runtime", enter the time which you have just measured.
- ✓ **Runtime set!**

9.5.7.4 Calibration of an servomotor 20 mA

Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 20 „Functions of the individual controllers“ on page 17).

Perform the following work steps:

1. Working in the Main menu under "Calibration", navigate to the "Outputs" tab.
 2. Working under "Output", select the output which is to be adjusted.
 3. Press the "Compensation" button.
 - ▶ A further window with a progress bar opens; this indicates the position feedback.
 4. Compensation is started using the "Start" button.
 5. The motor starts and runs to top speed, then stops. This can take a number of minutes.
 6. Completion of the compensation is signalled with "Compensation OK".
- ✓ **Calibration of an servomotor 20 mA completed.**

9.5.7.5 Calibrating the 20 mA output

If, whilst performing the previous compensation, you have determined that the output signal does not completely conform with the motor position, you can adjust the output signal. You can adjust both the lower signal range (0/4 mA) and the upper signal range (20 mA) to the motor position.

Perform the following work steps:

1. Working in the Main menu under "Calibration", navigate to the "Outputs" tab.
 2. Working under "Outputs, select the output that you wish to adjust.
 3. Press the "1 point" button to calibrate just the upper area or the "2 points" button for the upper and lower areas.
 4. A further window will open in which you can set a tolerance. You can change this by maximum -50 to +50 depending on whether you wish to calibrate the upper or lower area. The maximum change corresponds c. to a current of 1 mA.
 5. Check the output signal using a multimeter or a servomotor and make sure that the motor is now under exact control.
 6. Save the current offset by pressing the "Save" button.
- ✓ **Calibrating the 20 mA output completed.**

9.6 Setpoints and reference sets

You can determine various setpoints which should actuate the device. You have four different sets of setpoints; the controller can switch between them automatically. The reference sets can be used to vary the control at different times of the day or in different operating conditions.

The following section describes the possibilities of controlling using setpoints and their configuration.

9.6.1 Setting the setpoints

You can configure and save the setpoints via the menu item "Setpoints".

Perform the following work steps:

1. Working in the main menu under "Setpoints" navigate to the "Active" tab.
2. **Active:** You can view the reference set currently active in the "Active" tab.
 - ▶ The individual setpoints are displayed. If you change one of the values, it will immediately be activated as a new setpoint.
3. **Save:** You can save the active setpoints as a reference set. Select a reference set for this and press "Save".
4. **Setpoints 1 – 4:** The possible setpoints for the controller follow in sequence. The following information is displayed from left to right:
 - S1 – S4/V1 – V4 indicates the sensor input or virtual input.
 - O1 – O4 indicates the output. The "timer" indicates that the output is actuated directly.
 - The measured value of this input follows, e. g. free chlorine, pH or the text "No control function" if this controller is inactive.

An upwards or downwards arrow indicates the control direction. Raise or lower.

 - This is followed by the setpoint. Pressing on the setpoint enables you to change it immediately. If it is a 2-side control, two setpoints must be entered. Both for the control direction "Raise" or "Lower". Changing these setpoints does not have an impact on the savable reference sets. To do so, you must perform step 3.
5. **Capacity:** You can activate or deactivate the flow. This enables you to reduce the flow by between 0 % and 100 %. The value of the flow is multiplied with the output Y. If the output is e.g. 80 % but the flow is only 50 %, this produces an output capacity of: Control variable $Y \cdot Y = 80 \% \cdot 50 \% = 40 \%$.

✓ **Setpoints set.**

9.6.2 Loading reference sets

You can load a reference set.

Perform the following work steps:

1. Working in the main menu under "Setpoints", navigate to the "Reference set" tab.
2. Select the desired reference set.
3. Press "Load".
 - ▶ The desired reference set is active immediately.

✓ **Reference set loaded.**

9.6.3 Switching between setpoints

The reference sets set in the previous section can be switched manually or automatically. You have two possibilities to activate automatic switching.

1. Working in the "Setpoints" menu item, navigate to the "Switching" tab. Set a checkmark against "Switch setpoints automatically".

2. Working in the "Manual mode" menu, set a checkmark against "Switch setpoints automatically".

You can use a digital input (see section 9.6.3.1 „Switching via digital inputs“ on page 42) and multiple internal timers (see section 9.6.3.2 „Switching via timer“ on page 43) for automatic switching. The switching has priority over a digital input. Switching via a timer only occurs if no switching is active via a digital input.

9.6.3.1 Switching via digital inputs

Before you can use a digital input for switching to a particular reference set, you must configure the digital input in accordance with section 8.3.1.6 „Digital inputs“ on page 32.

Switching can be performed in three different forms: externally-controlled switching; switching via an internal timer and the "ECO control" function, which includes the limit value control.

Configure external switchover

In the case of external actuation, switching to the desired reference set is performed as long as the digital input has been activated.

If the digital input is deactivated, the device switches back to the previous reference set.

To configure, working in the "Setpoints" menu item, select the "Switching" tab.

Perform the following work steps:

1. Configure the switching and state the following information.
2. **Automatically switching the reference sets:** Set a checkmark here.
3. **Switch-over:** Select "Digital input".
4. **Function:** Select the point "External switching".
5. **Reference set:** Select the reference set to which is to be switched.
6. **Digital input:** The digital input in use is indicated here.

✓ **Configuration of the external switching completed.**

Switching via a timer

During switching via a timer, the desired reference set is active until the set period has been completed. The previous reference set is re-activated after the time has elapsed.

You can also start the timer manually, thereby e.g. triggering shock chlorination.

To configure, working in the "Setpoints" menu item, select the "Switching" tab.

Perform the following work steps:

1. Configure the switching and state the following information.
2. **Automatically switching the reference sets:** Set a checkmark here.
3. **Switch-over:** Select "Digital input".
4. **Function:** Go to "Timer".
5. **Reference set:** Select the reference set to which is to be switched.
6. **Digital input:** The digital input in use is indicated here.

7. **Time:** Configure the timer to the desired duration.
 8. **“Off” or “Active”:** It will be displayed here whether the timer is currently active. If this is the case, the display will show how long it is still active.
 9. **“Start” and “Stop” button:** The timer can be started or stopped manually, e. g. for a shock chlorination.
- ✓ **Configuration completed.**

Configure switching via ECO control

A limit value control is defined for the “Economy mode”. The limit value control is generally used to reduce the circulation capacity.

If the measured values are located within the setpoints, the output is closed. If the digital input is also switched for switching to another reference set, “Economy mode” is active and the switch will be made to the desired reference set.

Pre-conditions for actions:

- ✓ The limit value control is configured as described in section „Limit value control“ on page 33.

To configure, working in the “Setpoints” menu item, select the “Switching” tab.

Perform the following work steps:

1. **Automatically switching the reference sets:** Set a checkmark here.
 2. **Switch-over:** Select “Switching input”.
 3. **Function:** Select “ECO control”.
 4. **Reference set:** Select the reference set to which is to be switched.
 5. **Digital input:** The digital input in use is indicated here.
- ✓ **Configuration “Switchover via ECO control” completed.**

9.6.3.2 Switching via timer

Up to ten timers can be configured parallel to the switching via a digital switching input (see section 9.6.3.1 „Switching via digital inputs“ on page 42). Times are defined for the point at which the timers should switch to a certain reference set.

To configure, working in the “Setpoints” menu item, select the “Switching” tab.

Perform the following work steps:

1. **Automatically switching the reference sets:** Set a checkmark here.
 2. **Switch-over:** Configure up to ten timer switches and state the following information.
 3. **Off/Active:** Switch on the timer.
 4. **Time:** Configure a time at which the switch-over is to be made. State the hour and minutes.
 5. **Monday – Sunday:** Set a checkmark against every weekday on which the timer should be active.
 6. **Reference set:** Select the reference set to which is to be switched.
- ✓ **Configuration “Switchover via timer” completed.**

9.7 Access via network

Accessing the device via a network requires that it is connected to an existing Ethernet or RS485 network.

Further information about connection to an existing network is specified in sections 7.11 „Connecting Ethernet“ on page 26, 7.12 „RS485 interface“ on page 26 and 8.5 „Network settings“ on page 35.



If connection problems are experienced during access via network, check the configuration of your security software.

Modbus

You can access certain data on the device via the Modbus protocol using both Ethernet and the RS485. You need the Modbus protocol e.g. For the connection with a control panel or a PLC. Modbus TCP/IP is supported for Ethernet and Modbus RTU is supported for the RS485 interface.

The Modbus addresses of your device are stated in section 13 „Modbus addresses“ on page 51.

Web browser (only Ethernet)

You can access the device data using all network devices which are fitted with a web browser. You will require the IP address, subnetmask and possibly the MAC address of the device.

The network settings of your device are listed under Main menu > System > Service > Network.

Open the web browser of your end device and enter the IP address of the device in the address row. The page of the device will open and provide a range of information.

TFTP protocol (only Ethernet)

You can access the device memory via a TFTP client software as long as TFTP is activated in the network settings. You need the device IP address for access.



The network settings of your device are listed under Main menu > System > Service > Network.

10 Shutdown

10.1 Short-term shutdown

Short-term shutdown involves deactivation for the calibration of the measured values or for maintenance work, for example. For long-term shutdown, see section 10.2 „Long-term shutdown“ on page 44.

Perform the following work steps:

1. Close the inflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 5) of the water sampling station or switch off the sample water supply externally. This interrupts the measurement and the control of the **TOPAX® MC** controller, and the sample water circuit can be opened.
 2. Disconnect the **TOPAX® MC** controller's external power supply.
 3. Perform the planned work on the water sampling station.
 4. Reconnect the **TOPAX® MC** controller's external power supply.
 5. Open the inflow tap of the water sampling station or switch the sample water supply back on externally. It starts the measurement and regulation.
- ✓ **The water sampling station was deactivated and re-activated (short term).**

10.2 Long-term shutdown

This section describes the required actions in the event of long-term shutdown in order to ensure the functionality of the water sampling station.

Perform the following work steps:

1. Close the inflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 5) of the water sampling station or switch off the sample water supply externally. This interrupts the measurement and the control of the **TOPAX® MC** controller, and the sample water circuit can be opened.
 2. Disconnect the **TOPAX® MC** controller's external power supply.
 3. Pinch off all cables in the **TOPAX® MC** controller.
 4. Uncouple the ingoing hose connection from the inflow tap and from the sample water filter (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 3), as well as the outgoing hose connection from the outflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 12) and the measuring cell valve.
 5. Unscrew the black screw caps from the underside of the valves and allow the sample water to drain out of the valves.
 6. Now immediately take the measuring cells out of the valves and store them stood upright in a 3-molar potassium chloride solution.
- ✓ **The water sampling station has been shut down over the long term.**

10.3 Storage

Pre-conditions for actions:

- ✓ The product was shut down in accordance with section 10.2 „Long-term shutdown“ on page 44.

Storing the water sampling station correctly extends its service life. You should avoid negative influences such as extreme temperatures, high humidity, dust, chemicals, etc.

Unscrew the from the wall holder and store them away.

Ensure ideal storage conditions where possible:

- The storage place must be cold, dry, dust-free and generously ventilated
- temperatures between + 0 °C and + 50 °C
- Relative air humidity must not exceed 90 %

10.4 Transportation

Pre-conditions for actions:

- ✓ The water sampling station has been shut down in accordance with chapter 10.2 „Long-term shutdown“ on page 44.
- The water sampling station may only be transported in an empty state.
 - Avoid heavy blows at all costs.

If the device is sent back to the manufacturer, please follow section 16 „Declaration of no objection“ on page 59 and section 17 „Warranty claim“ on page 60.

10.5 Disposal

- The product must be disposed of in accordance with applicable local laws and regulations. It should not be disposed of as domestic waste!
- As the disposal regulations may differ from country to country, please consult your supplier.
- In Germany, the manufacturer must provide free-of-charge disposal. Provided the product has been safely returned along with a declaration of no objection (chapter 16 „Declaration of no objection“ on page 59).

11 Maintenance

DANGER!

Mortal danger from electric shock!

Only work on electrical systems while the device is disconnected from the power supply.

- ⇒ Switch the system voltage-free.
- ⇒ Secure the system to prevent it from being switched on again.
- ⇒ Measure the absence of voltage in the system with a measuring instrument.
- ⇒ Earth the system and then short-circuit it.
- ⇒ Cover adjacent live parts.

WARNING!

Increased risk of accidents due to insufficient qualification of personnel!

The system and its accessories may only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.

- ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.

11.1 Maintenance intervals

The product require regular maintenance to prevent errors. This table gives you an overview of the maintenance work.

Interval	Maintenance
daily	<ul style="list-style-type: none"> ■ Visual inspection of all components
Weekly	<ul style="list-style-type: none"> ■ Check measured values ■ Recalibrate sensor inputs if necessary ■ Visual inspection of the sample water filter ■ If necessary, cleaning of the sample water filter
Monthly	<ul style="list-style-type: none"> ■ Touchscreen function test (TOPAX® MC) ■ Calibrating the measured values (TOPAX® MC) ■ Control of the flow controller
Annually	<ul style="list-style-type: none"> ■ Checking the button cell ■ Cleaning the valves ■ Replacing the measuring cells ■ Replacing the sample water filter ■ Cleaning of water guiding components ■ Seal replacement ■ Maintenance of the flow controller ■ Replacing the O-rings of the flow controller ■ Replacing the diaphragm of the flow controller

Tab. 41: Maintenance intervals

11.2 Finishing maintenance

Perform the following work steps:

1. Make a note of the date and scope of the maintenance performed.
2. In the "Service" menu, navigate to the "Service entry" tab. Enter your company name and notes about the maintenance. Activate the reminder function and enter a date for the next service. Confirm with the "Save" button .
 - ▶ Your service action has been saved in the logfiles.
3. To restart the system, proceed in accordance with the instructions in section 8 „Commissioning of the water sampling station“ on page 28.

✓ **Maintenance completed.**

11.3 Keeping logfiles

If you make an entry in the logfiles, the device will issue a reminder when a sensor needs to be replaced.

Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Service entry and working under "Service entry" / "Sensor", select the desired sensor.
2. Enter the serial number in the tab and the manufacturing company of the sensor.
3. Activate the reminder function and enter a date for the next sensor change.

✓ **Logfiles maintained.**

11.4 Measuring cells

PLEASE NOTE

Note the service life of the measuring cells

The service life of the measuring cells is approx. 12 to 15 months, whereby the storage time must be taken into account at 50 %. If the service life is exceeded, this may distort measurement results.

- ⇒ Note the printed date of manufacture and replace obsolete measuring cells in good time.

The service life of the single-rod measuring cells depends on the operating conditions and the water properties (e.g. corrosiveness, grease etc.). In normal conditions the service life will be 12 – 15 months, which includes 50 % storage time. The counter electrode of the disinfection measuring cell can have a service life of up to several years, depending on the corrosiveness and the abrasiveness of the water. It must only be replaced when heavy signs of wear appear.

The following features indicated used pH single-rod measuring cells:

- The pH single-rod measuring cell takes an extraordinarily long time during the pH 6.8 adjustment process to reach the value of the buffer solution.
- The deviation of the pH single-rod measuring cell is too wide; the pH 6.8 adjustment is not possible.
- The white potassium chloride salt rings in the pH single-rod measuring cell are exhausted or discoloured.

11.5 Flow controller

The flow controller is fitted with a switching function via a reed switch. To check the switch function, check the electrical conductivity of the reed switch. The reed switch and the float must be located at the level of the marking. If the switch function is not working properly, the reed switch can be displaced in the compression fitting to perform fine tuning.

11.5.1 Performing the annual maintenance

The flow controller must be subject to annual maintenance in order to guarantee its functionality.

Pre-conditions for actions:

- ✓ Throughflow was deactivated.

Resources required:

- ✂ A maintenance set is available.
- ✂ Suitable tools (e.g. a Ø 3 mm face spanner and a socket wrench AD19) are available.
- ✂ Silicone grease for the O-rings is provided

Perform the following work steps:

1. Deinstall the inflow and outflow pipes from the flow controller.
2. Dismantle the flow controller using the four fixing screws (Tab. 5 „Position numbers water sampling station EASYPRO 4“ on page 10, pos. 4).
3. Loosen the four housing screws on the rear-side of the flow controller and open carefully.
4. Replace all the O-rings in the flow controller. Lightly grease all the new O-rings with silicone grease before insertion.
5. Replace the diaphragm.
6. Check all further components for visible wear and replace if necessary.
7. Clean the components and the housing interior carefully using clear warm water.
8. Close the flow controller using the four housing screws.
 - ▶ You have completed the annual maintenance.
9. Install the flow controller (see chapter 8.1.1 „Adjustment of the flow controller“ on page 29).
10. Adjust the throughflow volume again (see chapter 8.1.1 „Adjustment of the flow controller“ on page 29).

- ✓ You have successfully maintained, installed and re-commissioned the flow controller.

11.5.2 Flow controller cross section

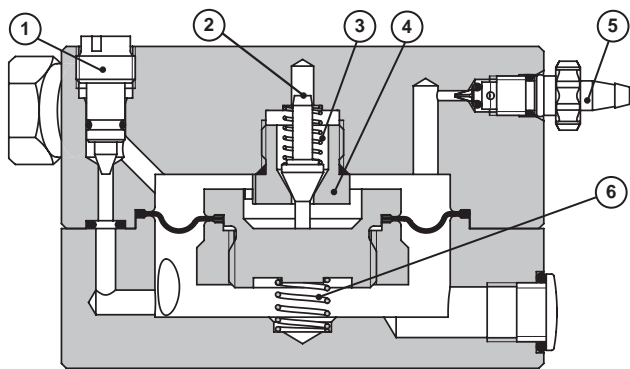


Fig. 33: Flow controller cross section

No.	Position
1	Setting screw
2	Control cone
3	Compression spring
4	Control nozzle
5	Valve at the extraction point
6	Compression spring

Tab. 42: Position numbers flow controller cross section


11.6 Cleaning the sample water filter

Perform the following work steps:

1. Close the shut-off taps of the water sampling station.
 - ▶ Now no more water is conveyed. The float of the flow switch sinks to the bottom.
2. Unscrew the transparent cover of the sample water filter.
3. Clean the filter sieve thoroughly. Then rinse it with clear water.
4. Re-insert the filter sieve.
5. Screw the filter cup back on.

- ✓ The sample water filter has been cleaned successfully.

11.7 Updating software

The most up-to-date firmware version can be downloaded from www.Lutz-Jesco.com. Copy this *.BIN file onto the device USB flash drive. The file must be saved in the root directory of the USB flashdrive and may not be stored in a sub-folder.

You can update the device software to a newer version.

Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Device.
2. Press Software update.
3. Select the *.BIN file with the newer version and press "Load".
 - ▶ The software is installed. The device will restart automatically during this procedure.

✓ **Update performed**

11.8 Battery

The device is fitted with a button cell. Check the button cell within the scope of the annual maintenance. The lifetime of the button cell is determined by the device usage and can vary considerably.

You will need to replace the battery more often with devices which are switched off often or over a long period (e.g. over winter).

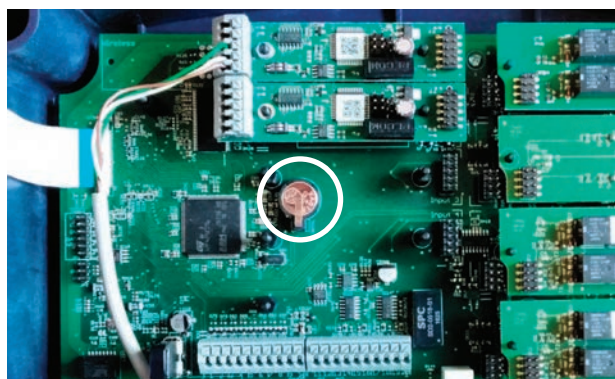


Fig. 34: CR1220 button cell

11.8.1 Checking the charge

You can check the battery charge easily using the device. Replace the battery if the charge amounts to less than 2.9 V.

- ➔ Working in the main menu, navigate to System > Information > System values and read the current charge state of the battery.

11.8.2 Replace the battery

You must remove the two input circuit boards to be able to replace the battery (Fig. 34 „CR1220 button cell“ on page 47).

Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.

Resources required:

- ✂ Socket wrench 5.5 mm (M3)
- ✂ New battery: CR1220, Ø12,5 mm, 3 V, 35 mAh

Perform the following work steps:

1. Pull all cable connections from the input circuit boards which you need to dismantle.

2. Using the socket wrench, unscrew the retaining nuts from the white protective plate and remove the plate.
 3. Using the socket wrench, unscrew the two nuts from the input circuit boards which you need to remove.
 4. Working carefully, slide the input circuit boards from their brackets.
 - ▶ The battery is now easily accessible.
 5. Lever the battery out of its holder without damaging the contact bow.
 6. Slide a new battery in the holder.
- ✓ **The battery has been changed.**

11.9 Replacing the fuse

Your device is fitted with an electrical fuse to protect against short circuits or over-voltage. You can change the fuse if it is defective.

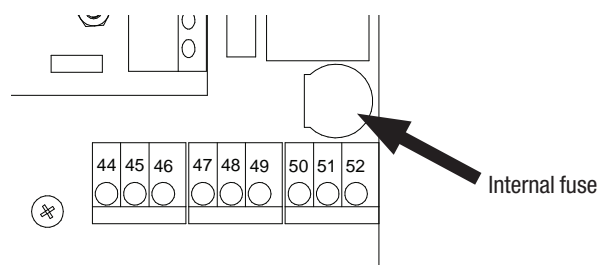


Fig. 35: Position of the fuse

Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.

Resources required:

- ✂ Slotted screwdriver
- ✂ New fuse: 5 x 20 mm, 3.15 A, 250 V (delay)

Perform the following work steps:

1. The fuse holder in the form of a bayonet catch is located at the bottom right-hand side, above the clamps for PE, N and L with the marking "Fuse". Use the slotted screwdriver to press the catch downwards and then turn it leftwards.
 2. Remove the fuse.
 3. Replace the fuse and fix it in place by turning the catch clockwise.
- ✓ **Fuse has been replaced.**

11.10 Resetting the settings



The instructions differentiate between the internal factory settings and the device configuration.

The factory settings contain the basic configuration of the device hardware and cannot be changed.

The configuration file (*.SET) contains the individual device configuration. You can change, save and load the individual settings.

Reset to the factory settings

You can now reset the device to its factory settings. This deletes the configuration. You must then either load a configuration file or perform the configuration manually.

Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Device.
2. Press "factory settings".
3. Confirm with "Yes".
 - ▶ The configuration will be deleted. You must proceed with the following section.

✓ **All factory default settings will be reset.**

Reset the configuration

The device configuration will be saved in *.SET files. A factory-set configuration file with standard settings is already present. You can change these or save your personal configuration in new files.

Recommendation: Leave the factory-set configuration file unchanged and save your personal configuration in a new file. Given problems with the configuration, this enables you to return to a functioning configuration quickly.

Perform the following work steps:

1. Working in the main menu, navigate to System > Settings > Configuration.
2. Select an existing configuration file.
3. Click "Load" to confirm.
 - ▶ The device configuration returns to the saved state.

✓ **Load the old configuration.**

11.11 Finishing maintenance

Perform the following work steps:

1. Make a note of the date and scope of the maintenance performed.
2. In the "Service" menu, navigate to the "Service entry" tab. Enter your company name and notes about the maintenance. Activate the reminder function and enter a date for the next service. Confirm with the "Save" button.
 - ▶ Your service action has been saved in the logfiles.
3. To restart the system, proceed in accordance with the instructions in section 8 „Commissioning of the water sampling station“ on page 28.

✓ **Maintenance completed.**

12 Fault resolution

See below for information about how to rectify faults on the control product or the system. If you cannot eliminate the fault, please consult with the manufacturer on further measures or return the product for repair.

Fault	Possible causes	Measures for resolution
Balls in the disinfection measuring cell rotate too weakly or float does not float	Water inflow pressure too low	<ul style="list-style-type: none"> ■ Lay sample water line with larger cross-section. ■ Installation of a sample water pump.
	Sample water filter soiled	Clean or replace the filter sieve.
The float floats but the reed switch does not switch upon connection.	Harmonisation between the float and reed switch is incorrect.	Calibrate reed switch
	Reed contact defective	Replace reed contact
Display fluctuates during the excess chlorine measurement of the connected measurement amplifier	Fluctuating pH value influences the chlorine measurement	Stabilise the pH value in the water (e.g. optimise control path, controller parameters)
“Sample water shortage” display on the measurement device.	Reed switch in the flow control defective	Replace reed switch
	Inflow tap closed	Open the inflow tap (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 5).
	The sample water inflow is soiled.	Check the visible parts and filter (Fig. 2 „Water sampling station EASYPRO 4“ on page 10, pos. 3) for soiling and clean if necessary.
The LEDs are continually red.	The controller does not control the LEDs correctly.	Comply with the instructions in section 8.3.2.6 „Actuation of the LEDs for the water sampling stations“ on page 34.
Measured value fluctuates constantly	Loose measurement cable connections	Check measurement cable; re-attach if necessary
The measurement is very slow.	Diaphragm blocked	Clean electrode
	Electrode becoming obsolete	Replace electrode
	Buffer solution becoming obsolete	Check the expiration date and replace if necessary.
The measurement deviates or is unstable	Measuring cell defective	Replace measuring cell
	Diaphragm is dry and/or soiled	Clean measuring cell
The display deviates by a constant value	Measuring cell not correctly installed	Check correct installation; check correct calibration
	External potential in the system	Remove the external potential or set the offset (see chapter 9.5.2.3 „Offset compensation“ on page 38).
TOPAX® MC controller constantly displays pH value "7.00".	Short circuit	Check measuring cell for damage and replace if necessary
No reaction to pH buffer solution	Measuring cell not correctly installed	Check correct installation; check correct calibration
	Measuring cell defective	Check measuring cell for damage and replace if necessary
Value for "free chlorine" fluctuates heavily	pH-value instability	Check pH value measurement

Tab. 43: Troubleshooting **EASYPRO**

Fault	Possible causes	Measures for resolution
The chlorine measuring cell displays too much with respect to the DPD-1 measurement	May occur when using "water fining agents". Chlorine-oxygen bonds are contained in some of these agents which react with chlorine to make chlorine dioxide, thus distorting the measuring signal by greater values	Refrain from dosing this agent. A change of water might be required.
The DPD-1 method displays excessive chlorine content to which the measuring cell cannot be adjusted	Use of "organic chlorine". When using organic chlorine products, cyanuric acid accumulates in the swimming pool water.	Replace the water completely and use other chemicals for disinfection
The TOPAX® MC controller loses all settings after he has been disconnected from the network and then reconnected.	The battery is empty.	<ul style="list-style-type: none"> ■ Check that the battery is really empty. To do so, navigate to the menu System > Information > System values. You can view the battery voltage under "Battery". If the voltage is under 2.9 V, change the battery. ■ Replace the battery. See section 11.8 „Battery“ on page 47.
The TOPAX® MC controller is switched off.	The power supply has been interrupted.	Reconnect the current supply
	The fuse of the TOPAX® MC controller is damaged.	Replace the fuse. See section 11.9 „Replacing the fuse“ on page 47.
The sensor error is displayed as an alarm.	The sensor has not been installed correctly.	Make sure that the sensor has been connected correctly. See section 7.7 „Connecting sensors“ on page 23.
	The signal cable to the sensor has a break.	Replace the signal cable.

Tab. 43: Troubleshooting **EASYPRO**

13 Modbus addresses

With a DOUBLE-WORD, the HIGH-WORD is transferred first! Hexadecimal display is shown by a leading "0x".

Address	Read	Write	Description	Meaning
Data that are not channel-related.				
4	x		Product type + version	0x0500 + (number of channels - 1) A single-channel controller accordingly has the identification: 0x0500.
6 – 8	x		Software Version:	Transfer: ASCII sign e.g. 102 is the software version V1.02
10 – 11	x		Operating hours	
13	x		Hardware version	
2000 – 2002	x		Serial number	The information consists of a ASCII sign in HIGH-BYTE and one in LOW-BYTE. Serial number: 123456 will thus be transferred as Address 2000: 0x3132 Address 2001: 0x3334 Address 2002: 0x3536 transferred
2003	x		Status of digital inputs	Displays the terminal logic (not the configured software function). The individual bits are assigned directly to the input clamps. Example: 0x01 means that the first digital inputs (clamps 21 + 22) are actuated.
2004	x		Status of digital outputs	The individual bits of the output modules. Example: 0x03 means that the upper relay or the upper optocoupler of the second output module (from the top) is active.
2008 – 2017	x	x	Product name	Max. of 20 characters Caution! The evaluation must stop at the first zero (string end). The individual letters are located in the HIGH-BYTE and LOW-BYTE of every address. "GW" thus produces: Address 2008 = 0x4757 Address 2009 = 0x00 The question marks are undefined. In this case, all other addresses send undefined values.
Input-related data. 20 addresses will be held available for each of the 1 to 4 inputs. The address space for the inputs begins at 2020, 2040, 2060 and 2080.				

Tab. 44: Modbus addresses

Address	Read	Write	Description	Meaning		
2020	x		Medium	<ul style="list-style-type: none"> ■ 1 = pH ■ 2 = Redox ■ 3 = Free chlorine ■ 4 = Total chlorine ■ 5 = Chlorine dioxide ■ 6 = Bromine ■ 7 = Chlorite ■ 8 = Hydrogen peroxide ■ 9 = Ozone ■ 10 = Bromite ■ 11 = Fluoride ■ 12 = Salt content ■ 13 = Conductivity ■ 14 = Current ■ 15 = Temperature ■ 16 = Neutral (0 – 100%) ■ 254 = Free entry ■ 255 = No type 		
2021 – 2022	x		Measurement	Number of positions after the decimal point, see unit (4 bytes signed int.).		
2023	x		Unit	Number	Unit	decimal places
				0	mA	2
				1	µA	1
				2	ppm	2
				3	mg/l	2
				4	µS/cm	2
				5	mS/cm	2
				6	%	2
				7	mV	1
				8	pH	2
				9	min	0
				10	s	0
				11	mV/pH	1
				12	Pulses/min.	0
				13	Travelling unit	1
				14	Celsius	1
2024	x		The assigned input of the controller	<ul style="list-style-type: none"> ■ 0 = Sensor 1 ■ 1 = Sensor 2 ■ 2 = Sensor 3 ■ 3 = Sensor 4 ■ 4 = Virtual input 1 ■ 5 = Virtual input 2 ■ 6 = Virtual input 3 ■ 7 = Virtual input 4 ■ 8 = Timer switch 		
2025	x		Control output Y (active control)	500 = 50,0 % (2 Byte signed int)		
	x	x	Control output Y (only manual mode)			

Tab. 44: Modbus addresses

Address	Read	Write	Description	Meaning		
2026	x		Control output 2 Y2 (active control)	500 = 50,0 % (2 Byte signed int)		
	x	x	Control output 2 Y2 (only manual mode)	Second side if 2-side control is active.		
2027 – 2028	x	x	Setpoint 1	Number of positions after the decimal point, see unit (4 bytes signed int.).		
2029 – 2030	x	x	Setpoint 2	If 2-side control is active (4 byte signed int).		
2031	x	x	Xp	Number of positions after the decimal point, see unit (2 bytes unsigned int.).		
2032	x	x	D	Derivative time in s (2 byte unsigned int).		
2033	x	x	I	Reset time in s (2 byte unsigned int).		
2034	x	x	Minimum and maximum alarm	Write: 0 = clear alarm	Read: Bit 0 = minimum alarm is active Bit 1 = maximum alarm is active	
2035	x	x	Y alarm	Write: 0 = clear alarm	Read: Bit 0 = Y alarm is inactive Bit 1 = Y alarm is active	
2036	x	x	Manual mode	Bit 0: Manual mode on Bit 1: Lower (with 2-side control)		
Input-related data of the virtual inputs. 20 addresses will be held available for each of the 1 to 4 inputs. The address space for the virtual inputs begins at 2100, 2120, 2140 and 2160.						
2100	x		Calculation	0 = off, no calculation 1 = difference value measurement 2 = bound chlorine 3 = effective chlorine		
2101 – 2102	x		Measurement	Number of positions after the decimal point, see unit (4 bytes signed int.).		
2103	x		Unit	Number	Unit	decimal places
				0	mA	2
				1	µA	1
				2	ppm	2
				3	mg/l	2
				4	µS/cm	2
				5	mS/cm	2
				6	%	2
				7	mV	1
				8	pH	2
				9	min	0
				10	s	0
				11	mV/pH	1
				12	Pulses/min.	0
				13	Travelling unit	1
				14	Celsius	1

Tab. 44: Modbus addresses

Address	Read	Write	Description	Meaning
2104	x		The assigned input of the controller	<ul style="list-style-type: none"> ■ 0 = Sensor 1 ■ 1 = Sensor 2 ■ 2 = Sensor 3 ■ 3 = Sensor 4 ■ 4 = Virtual input 1 ■ 5 = Virtual input 2 ■ 6 = Virtual input 3 ■ 7 = Virtual input 4 ■ 8 = Timer switch
2105	x		Control output Y (active control)	500 = 50,0 % (2 Byte signed int)
	x	x	Control output Y (only manual mode)	
2106	x		Control output 2 Y2 (active control)	500 = 50,0 % (2 Byte signed int)
	x	x	Control output 2 Y2 (only manual mode)	Second side if 2-side control is active.
2107 – 2108	x	x	Setpoint 1	Number of positions after the decimal point, see unit (4 bytes signed int.).
2109 – 2110	x	x	Setpoint 2	If 2-side control is active (4 byte signed int).
2111	x	x	Xp	Number of positions after the decimal point, see unit (2 bytes unsigned int.).
2112	x	x	D	Derivative time in s (2 byte unsigned int).
2113	x	x	I	Reset time in s (2 byte unsigned int).
2114	x	x	Minimum and maximum alarm	<div>Write:</div> <div>0 = clear alarm</div> <div>Read:</div> <div>Bit 0 = minimum alarm is active</div> <div>Bit 1 = maximum alarm is active</div>
2115	x	x	Y alarm	<div>Write:</div> <div>0 = clear alarm</div> <div>Read:</div> <div>Bit 0 = Y alarm is inactive</div> <div>Bit 1 = Y alarm is active</div>
2116	x	x	Manual mode	<div>Bit 0: Manual mode on</div> <div>Bit 1: Lower (with 2-side control)</div>
Further non channel-related data.				
2220 – 2223	x		Analogue outputs 1 – 4	421 = 4.21 mA (2 byte signed int)

Tab. 44: Modbus addresses

Address	Read	Write	Description	Meaning	
				Message or alarm	Bit
2225	x		Alarm status 1 If the bit is set, the associated alarm or message is active.	Sensor error 1	0
				Sensor error 2	1
				Sensor error 3	2
				Sensor error 4	3
				Sensor 1 maximum alarm	4
				Sensor 2 maximum alarm	5
				Sensor 3 maximum alarm	6
				Sensor 4 maximum alarm	7
				Virtual 1 maximum alarm	8
				Virtual 2 maximum alarm	9
				Virtual 3 maximum alarm	10
				Virtual 4 maximum alarm	11
				Sensor 1 minimum alarm	12
				Sensor 2 minimum alarm	13
				Sensor 3 minimum alarm	14
				Sensor 4 minimum alarm	15
2226	x		Alarm status 2 If the bit is set, the associated alarm or message is active.	Virtual 1 minimum alarm	0
				Virtual 2 minimum alarm	1
				Virtual 3 minimum alarm	2
				Virtual 4 minimum alarm	3
				Controller 1 Y alarm	4
				Controller 2 Y alarm	5
				Controller 3 Y alarm	6
				Controller 4 Y alarm	7
				Temperature 1 maximum alarm	8
				Temperature 2 maximum alarm	9
				Temperature 3 maximum alarm	10
				Temperature 4 maximum alarm	11
				Temperature 1 minimum alarm	12
				Temperature 2 minimum alarm	13
				Temperature 3 minimum alarm	14
				Temperature 4 minimum alarm	15

Tab. 44: Modbus addresses

Address	Read	Write	Description	Meaning	
2227	x		Alarm status 3 If the bit is set, the associated alarm or message is active.	Message or alarm	Bit
				Setpoint changeover	0
				Measuring water shortage	1
				External stop	2
				Low level alert 1	3
				Low level alert 2	4
				Low level alert 3	5
				Low level alert 4	6
				Main alarm 1	7
				Main alarm 2	8
				Main alarm 3	9
				Main alarm 4	10
				Digital input 1	11
				Digital input 2	12
				Digital input 3	13
				Digital input 4	14
				Digital input 5	15
2228	x		Alarm status 4 If the bit is set, the associated alarm or message is active.	Message or alarm	Bit
				Digital input 6	0
				Digital input 7	1
				Digital input 8	2
				Sensor 1 calibration not OK	3
				Sensor 2 calibration not OK	4
				Sensor 3 calibration not OK	5
				Sensor 4 calibration not OK	6
				Temperature 1 calibration not OK	7
				Temperature 2 calibration not OK	8
				Temperature 3 calibration not OK	9
				Temperature 4 calibration not OK	10
				Output 1 calibration not OK	11
				Output 2 calibration not OK	12
				Output 3 calibration not OK	13
				Output 4 calibration not OK	14
				Next service due	15
2229	x		Alarm status 5 If the bit is set, the associated alarm or message is active.	Message or alarm	Bit
				Sensor change sensor 1 due	0
				Sensor change sensor 2 due	1
				Sensor change sensor 3 due	2
				Sensor change sensor 4 due	3
2235	x		Temperature input 1	235 = 23.5 °C With an inactive temperature, the return is -10000 (2 byte signed int)	
2236	x		Temperature input 2		
2237	x		Temperature input 3		
2238	x		Temperature input 4		

Tab. 44: Modbus addresses

14 Notes to EU conformity EASYPRO

The **EASYPRO** water sampling station does not fall under the purview of the Machinery directive 2006/42/EG.

The **EASYPRO** water sampling station falls under the purview of the pressure equipment directive 2014/68/EU.

The values stated below do not exceed the limit values according to article 4, paragraph 1. As such, the **EASYPRO** water sampling station is designed and manufactured in accordance with valid good engineering practice. In accordance with article 4 section 3, as a pressure device, the **EASYPRO** does not carry CE marking and cannot be issued with a EU declaration of conformity.

Product description: Water sampling station

Type:	EASYPRO
Pressure stage:	PN6
Nominal diameter:	<DN20
Max. temperature:	65 °C
Medium:	Water (H ₂ O)

The **EASYPRO** water sampling station corresponds to the requirements of the Pressure equipment directive 2014/68/EU.

The electronic controller installed on the **EASYPRO** water sampling station is fitted with a CE mark and holds a EU declaration of conformity.

The manufacturer and distributor of the **EASYPRO** water sampling station is:

Lutz-Jesco GmbH / Am Bostelberge 19 / 30900 Wedemark / Germany

15 EU declaration of conformity TOPAX® MC



(DE) EU-Konformitätserklärung

Hiermit erklären wir, dass das nachfolgend bezeichnete Gerät aufgrund seiner Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der aufgeführten EU-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung am Gerät verliert diese Erklärung ihre Gültigkeit.

(EN) EU Declaration of Conformity

We hereby certify that the device described in the following complies with the relevant fundamental safety and sanitary requirements and the listed EU regulations due to the concept and design of the version sold by us.

If the device is modified without our consent, this declaration loses its validity.

(FR) Déclaration de conformité UE

Nous déclarons sous notre propre responsabilité que le produit ci-dessous mentionné répond aux exigences essentielles de sécurité et de santé des directives UE énumérées aussi bien sur le plan de sa conception et de son type de construction que du modèle que nous avons mis en circulation.

Cette déclaration perdra sa validité en cas d'une modification effectuée sur le produit sans notre accord explicite.

(ES) Declaración de conformidad UE

Por la presente declaramos que, dados la concepción y los aspectos constructivos del modelo puesto por nosotros en circulación, el aparato mencionado a continuación cumple con los requisitos sanitarios y de seguridad vigentes de las directivas de la U.E. citadas a continuación.

Esta declaración será invalida por cambios en el aparato realizados sin nuestro consentimiento.

(PT) Declaração de conformidade UE

Declaramos pelo presente documento que o equipamento a seguir descrito, devido à sua concepção e ao tipo de construção daí resultante, bem como a versão por nós lançada no mercado, cumpre as exigências básicas aplicáveis de segurança e de saúde das directivas CE indicadas.

A presente declaração perde a sua validade em caso de alteração ao equipamento não autorizada por nós.

Bezeichnung des Gerätes:

Mehrkanalregler

Description of the unit:

Multi-Channel Controller

Désignation du matériel:

Régulateur multi-canaux

Descripción de la mercancía:

Controlador multi canal

Designação do aparelho:

Controlador multi-canal

Typ:

TOPAX MC

Type:

EU-Richtlinien:

2014/30/EU

EU directives:

2014/35/EU

2011/65/EU

Die Schutzziele der Niederspannungsrichtlinie 2014/35/EU wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten.

The protective aims of the Low Voltage Directive 2014/35/EU were adhered to in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

Harmonisierte Normen:

Harmonized standards:

DIN EN ISO 12100:2011-03
DIN EN 61000-4-2:2009-12
DIN EN 61000-4-3:2006 + A1:2008 + A2:2010
DIN EN 61000-4-4:2012
DIN EN 61000-4-5:2014
DIN EN 61000-4-6:2014-08
DIN EN 61000-4-11:2005-02
DIN EN 61000-6-2:2016-05
DIN EN 61000-6-3:2011-09
DIN EN 55016-2-3:2010 + A1:2010

Dokumentationsbevollmächtigter:

Lutz-Jesco GmbH

Authorized person for documentation:

Heinz Lutz
Geschäftsführer / Chief Executive Officer
Lutz-Jesco GmbH
Wedemark, 01.03.2019

Lutz-Jesco GmbH
Am Bostelberge 19
30900 Wedemark
Germany

16 Declaration of no objection

Declaration of no objection

Please fill out a separate form for each appliance!

We forward the following device for repairs:

Device and device type: Part-no.:

Order No.: Date of delivery:

Reason for repair:

.....

.....

Dosing medium

Description: Irritating: ☐ Yes ☐ No

Properties: Corrosive: ☐ Yes ☐ No

We hereby certify, that the product has been cleaned thoroughly inside and outside before returning, that it is free from hazardous material (i.e. chemical, biological, toxic, flammable, and radioactive material) and that the lubricant has been drained.

If the manufacturer finds it necessary to carry out further cleaning work, we accept the charge will be made to us.

We assure that the aforementioned information is correct and complete and that the unit is dispatched according to the legal requirements.

Company / address: Phone:

..... Fax:

..... Email:

Customer No.: Contact person:

Date, Signature:

17 Warranty claim

Warranty claim

Please copy and send it back with the unit!

If the device breaks down within the period of warranty, please return it in a cleaned condition with the complete warranty claim.

Sender

Company: Phone: Date:

Address:

Contact person:

Manufacturer order no.: Date of delivery:.....

Device type: Serial number:

Nominal capacity / nominal pressure:

Description of fault:.....

.....

.....

.....

.....

.....

.....

.....

Service conditions of the device

Point of use / system designation:.....

.....

.....

Accessories used (suction line etc.):.....

.....

.....

.....

Commissioning (date):

Duty period (approx. operating hours):

Please describe the specific installation and enclose a simple drawing or picture of the chemical feed system, showing materials of construction, diameters, lengths and heights of suction and discharge lines.

18 Glossary

Limit value control/DIN contact

The **limit value control** is an output which switches when determined **limit values are exceeded or undercut**. This function is used to control an ECO or Night mode in a swimming pool with reduced circulation. If there are no swimmers in the swimming pool, energy and dosing media can be saved. The limit value control monitors the maintenance of the parameters.

In Germany, the limit values of the national standard DIN 19643 apply. As such, "DIN contact" is a widespread name for this function.

Hysteresis

Hysteresis is the **delayed response time of a two position controller**, when it reaches the "setpoint Y" and the control switches quickly between raising and lowering. As quick switching or control can have undesired effects, you can define hysteresis and achieve a more equal control.

Actual value X

The actual value 'X' is the continually **measured value of a sensor**.

Reset time Tn

The reset time 'Tn' is the **integral proportion (I proportion)** with PI and PID controllers. 'Tn' is the time **required by the controller to alter the control variable 'Y'**, which is generated by the proportional range 'Xp' immediately after the step change of the control deviation 'X-W'.

You can set a reset time 'Tn' of up to 200 minutes.

P controller

A P controller is **defined by the proportional range 'Xp'**. The use of a pure P controller means that a control deviation 'X-W' always remains. The setpoint 'W' will thus never be reached.

PI controller

The PI controller is **defined by the proportional range 'Xp' and the reset time 'Tn'**. The use of the PI controller means that the actual value 'X' can reach the setpoint 'W'.

The PI controller is suitable for the majority of applications.

PD-controller

The PD controller is **defined by the proportional range 'Xp' and the derivative time 'Tv'**. The use of a PD controller means that a control deviation 'X-W' always remains. The setpoint 'W' will thus never be reached.

PID controller

The PID controller is **defined by the proportional range 'Xp', the reset time 'Tn' and the derivative time 'Tv'**. The integral gain means that the actual value 'X' can reach the setpoint 'W'.

Proportional range Xp

The proportional range 'Xp' (p proportion) of a P, PI or PID controller indicates **the amount by which the actual value 'X' must deviate from the setpoint 'W' so that the variable Y = 100 %**. If the control deviation 'X-W' is lower, the control variable is also lower.

The control variable 'Y' of a P controller is only affected by the control deviation 'X-W'. The Xp value is stated in the unit of the variable to be controlled. If for example, during the control of the pH value, an Xp = 2 pH is selected and the actual value is X = 9 pH and setpoint W = 7 pH, the control deviation is X-W = 9 pH - 7 pH = 2 pH.

In this case, the deviation X-W is as large as the Xp value. In this case, the variable Y would be 100 %. With a decreasing deviation X-W, the control variable decreases in a linear fashion to 0 % with an actual value X = setpoint W.

Control deviation X-W

The control deviation X-W is **the difference between the actual value 'X' and the setpoint 'W'**. The control variable 'Y' results from the control deviation.

Setpoint W

The setpoint 'W' of a control is the **desired value**.

Control variable Y

The control variable 'Y' is the value **with which the controller actuates the actor** in accordance with its set parameters and the control deviation 'X-W'. The value lies between 0 % and 100 %.

Derivative time Tv

With PD or PID controllers, the differential proportion (D proportion) is defined with the derivative time 'Tv'. **The D proportion ensures that the control path already contains a correction factor at the point at which the actual value "X" begins to differ from setpoint "W"**. The control variable 'Y' depends on the speed with which the control deviation 'X-W' takes place. The duration of the correction is determined by the derivative time 'Tv'. If the actual value 'X' does not change, i.e. the speed of change is "0", the correction factor effected by the D proportion with the derivative time 'Tv' drops as far as "0" (even if the actual value 'X' does not match the setpoint 'W', but consistently deviates from it). The fact that the control system causes the actual value 'X' to match the setpoint 'W' is due mainly to the I proportion of the controller. The D proportion often improves the controller behaviour because it acts against the trend to deviate.

The derivative time Tv can be set from 0 seconds to a maximum of 1200 seconds.

Y alarm

You can activate an alarm **which deactivates the controller if the control variable 'Y' amounts to over 95 % over a defined period**.

19 Index

B

Basic load	32
Battery	48

C

Calibration	38
Control	29

D

Declaration of no objection	60
DIN contact	33
Disposal of old equipment	45

E

Ethernet	26
EU conformity	58
EU Declaration of Conformity	59

F

Firmware	47
Flow meter	47
Foreseeable misuse	7
Functional diagram	8

G

General warnings	5
------------------------	---

H

Handling instructions	
Marking	4
Hazards due to non-compliance with the safety instructions	5

I

Installation	
Connecting the actors	25
Connecting the sensor	23
hydraulic	20
Installation example	8
Installation location	20
Intended purpose	7
Intended use	7
Internal fuse	48

L

Limit value control	33
Logbook	37
Long-term shut-down	45

M

Maintenance	46
Measuring cells	14
Open 3-electrode measuring cell	14

N

Notes for the Reader	4
----------------------------	---

O

Operation	37
-----------------	----

P

Personnel qualification	5
Personnel tasks	6
Product description	8
Product warranty	7

R

Rating plate	10
--------------------	----

S

Safety	5
Scope of delivery	8
Sensor technology	
Disinfection measuring cell	28
Measuring cells, Redox, pH value and total chlorine	28
Temperature sensor	28
Setpoints	42
Short-term shut-down	45
Shut-down	45
Signal words	
Explanation	4
Specialist staff	5
Storage	45
Structure of the device	8

T


Technical data	10
Temperature sensor	28
Terminal connection	22
Trained electricians	6
Trained persons	6
Transportation	45
Troubleshooting	50

W

Wall mounting	20
Warnings	
General warnings	5
Marking	4
Warning sign	
Explanation	4
Warranty claim	61
Working in a safety-conscious manner	5

Y

Y alarm	32
---------------	----

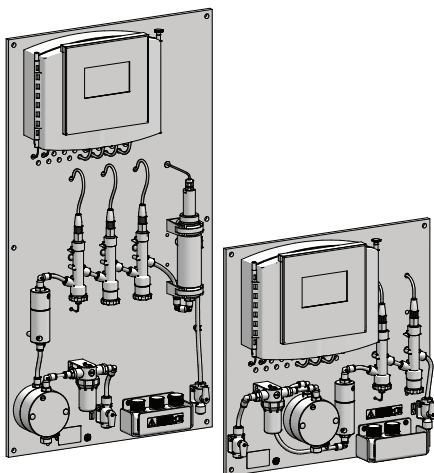

Lutz-Jesco GmbH

Am Bostelberge 19
D-30900 Wedemark

Phone: +49 5130 5802-0
info@lutz-jesco.com
www.lutz-jesco.com

Operating instructions
Water sampling station **EASYPRO**