


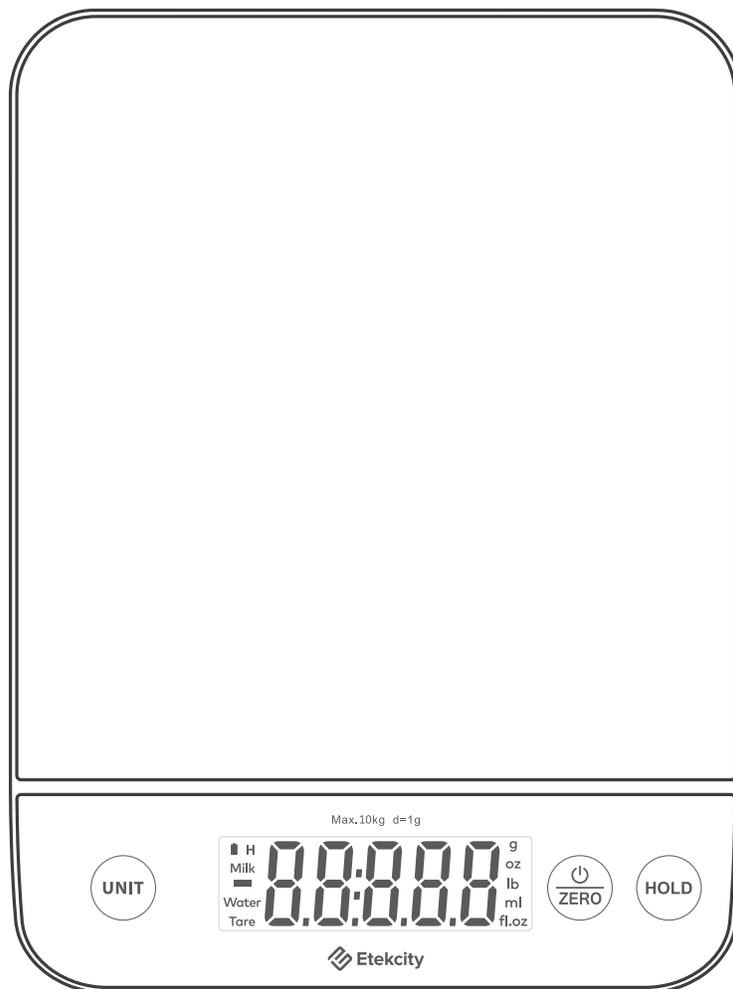

# Luminary™ Kitchen Scale

**Model:** EKS-L221-SEU

## User Manual



**Questions or Concerns?**  
[support.eu@etekcity.com](mailto:support.eu@etekcity.com)

# Thank you for purchasing the Luminary™ Kitchen Scale by Etekcitey.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **[support.eu@etekcity.com](mailto:support.eu@etekcity.com)**. We hope you enjoy your new kitchen scale!

# Table of Contents

Package Contents	<b>3</b>
Specifications	<b>4</b>
Important Safety Information	<b>5</b>
Function Diagram	<b>7</b>
Display Diagram	<b>8</b>
Using Your Scale	<b>9</b>
Troubleshooting	<b>12</b>
Warranty Information	<b>14</b>
Customer Support	<b>15</b>

## Package Contents

- 1 x Luminary™ Kitchen Scale
- 1 x USB Charging Cable
- 1 x Quick Start Guide

# Specifications

<b>Weight Capacity</b>	10 kg / 10000 mL / 353 oz / 22 lb
<b>Units</b>	g / mL (water/milk) / fl'oz (water/milk) / oz / lb:oz
<b>Increments</b>	1 g / 0.05 oz
<b>Auto-Off</b>	180 seconds
<b>Battery</b>	300mAh Li-ion Battery
<b>Input</b>	5.0V $\equiv$ 500mA (USB Type-C Charging)
<b>Dimensions</b>	230 x 170 x 27 mm / 9.1 x 6.7 x 1.1 in



# READ AND SAVE THESE INSTRUCTIONS

## Important Safety Information

**To avoid damage to this scale, please read and follow all instructions and safety guidelines in this manual.**

### Scale

- **Do not** exceed the 10 kg / 22 lb weight capacity, as it will damage the scale. An error indicator will appear on the LED display if the limit is exceeded.
- The scale is IPX6 water resistant, which means it can withstand most liquid spills without permanent damage. However, we still recommend wiping the scale dry with a soft cloth after any spills to keep it in optimal condition.
- Handle with care. This scale is not intended for commercial or heavy-duty use.
- Keep the scale in a cool, dry place. Avoid exposure to damp environments or extreme temperatures.
- Household use **only**.




## Batteries

- The display will show “LO” when the battery needs to be charged.
- Insert the USB charging cable into the USB charging socket.
- Plug the USB charging cable into a DC 5V adapter and plug into an outlet. You can also plug the cable into a powered USB outlet.
- When charging, the  on the display will light up.



# Function Diagram

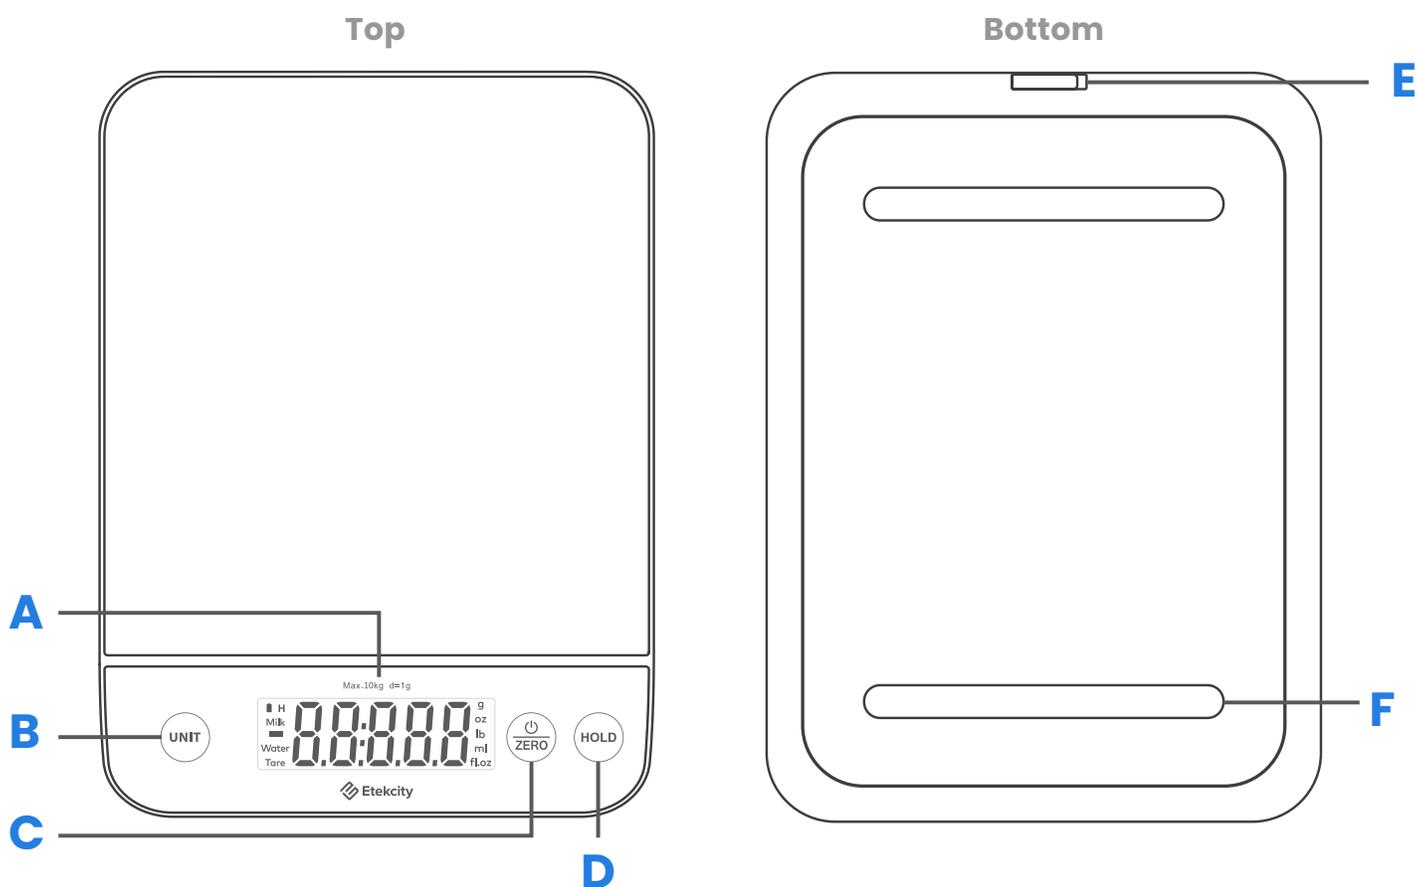

- A.** LED Display
- B.** Unit Selection Button
- C.** Power/Zero Button

- D.** Locking Key (Hold Button)
- E.** USB Charging Port
- F.** Anti-Skid Pads



# Display Diagram



- A.** Battery Charging Indicator
- B.** Milk
- C.** Water (Liquid)
- D.** Tare Indicator

- E.** Weight Value
- F.** Measurement Unit
- G.** Hold Indicator



# Using Your Scale

## Note:

- For accurate results, **always** place the scale on a hard, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the tare function, wait for the display to read “**0.00**” before measuring.

## General Operation

1. Place the scale on a hard, flat surface.
2. Tap  **ZERO** to turn on the scale. Make sure the display reads “**0.00**”.
3. Tap **UNIT** to select your desired measuring unit, which will show on the right of the display.
4. Place your item on the scale.
5. Wait for the reading on the display to stabilise.
6. When you're done, reset the scale by removing all items from the scale. If the display doesn't read “**0.00**”, press  **ZERO** to reset the weight to zero.



# Zero / Tare Function

Whenever you measure items inside a container, you can use the tare function to remove the container's weight from the final measurement.

1. Tap  **ZERO** to turn on the scale. Make sure the display reads **"0.00"**. If the screen does not display **"0.00"** automatically, tap  **ZERO** to adjust to zero.
2. Place the container on the centre of the scale.
3. Wait for the reading on the display to stabilise. The display will show the container's weight.
4. Tap  **ZERO** to tare the weight of the container. The screen will now display **"0.00"**.
5. Place the liquid or items into the container. The scale will measure the contents without including the weight of the container.
6. When you're done, reset the scale by removing all weight and tapping  **ZERO** again.



## Unit Conversion

To change the unit of measurement, tap **UNIT** until the display shows your desired unit of measurement.

## Hold Function

Tap **HOLD** to lock the measurement data on the display. Tap **HOLD** again to unlock the display.

**Note:** In hold mode,  **ZERO** will not work. You can still use **UNIT** to switch between units.

## Automatic Power Off

To save battery power, the scale will automatically power off after 180 seconds of inactivity.

## Manual Power Off

Tap and hold  **ZERO** for 2 seconds to turn off the scale.



# Troubleshooting

Problem	Possible Solution
Scale does not turn on.	The scale may need to be charged. Plug in the USB power cord and charge for 2 hours.
Reading is inaccurate.	Place scale on a level surface.
	Keep scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
	Make sure the screen displays "0.00" before measuring (see <b>Zero / Tare Function</b> , page 10).
Display shows "Err"	Item is too heavy. Remove item from scale to protect its weight sensor. Use a different scale with a higher weight range.
Display shows "Lo"	Battery power is low. Plug in the USB power cord to charge the scale.

**If your problem is not listed, please contact Customer Support** (see page 15).



This product is RoHS compliant. This product is in compliance with Directive 2011/65/EU, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.



# Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

**WARNING:** Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below:



According to EU Batteries Directive 2013/56/EU, any batteries, accumulators and button cells containing more than 0.0005 % mercury, more than 0.002 % cadmium or more than 0.004 % lead, shall be marked with the chemical symbol for the metal concerned: Hg, Cd or Pb respectively. Please Refer to the symbol below:



Hg



Cd



Pb



# Warranty Information

<b>Product</b>	Luminary Kitchen Scale
<b>Model</b>	EKS-L221-SEU
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Order ID</b>	
<b>Date of Purchase</b>	

## TERMS & POLICY

Etekcity Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the 2-year warranty period.

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.



# Customer Support

## **Etekcitey Corporation**

1202 N. Miller St., Suite A

Anaheim, CA 92806

USA

**Email:** [support.eu@etekcity.com](mailto:support.eu@etekcity.com)

*\* Please include your order ID when contacting customer support.*





Connect with us @EtekcivityUK

Verbinden Sie sich mit uns @EtekcivityGermany

Rejoignez-nous sur @EtekcivityFrance

Síganos en @EtekcivitySpain

Seguici su @EtekcivityItaly

