

Dryer Arm

Model No.

AY-DRASFF

Installation/ Operation Manual

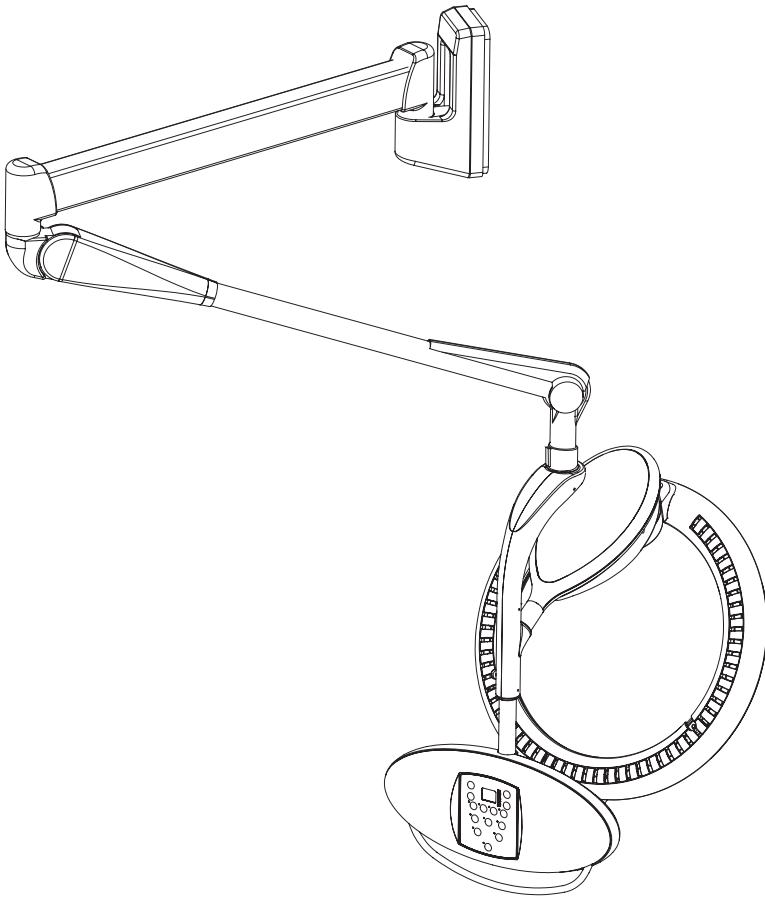


Table of Contents

Safety Precautions (To be strictly observed)	1
Name of Each Part	4
Accessories	5
Installation Procedures	5
Adjustment of the Balance Arm	13
Operating Procedures	14
Care and Maintenance	15
Daily Inspection Procedure	16
Dimensions and Specifications	17
Wall Mount Plate	19

The product is a dryer arm designed for use in combination with specified product. Do not install any other products on the arm. Failure to heed this warning may cause falling of product resulting in physical injuries.

To the customers:

Customers must not install the product by themselves. Customer must store these instructions in a safe place so as not to lose them.

To the installer:

The instructions should be thoroughly read and understood before installation to ensure the product is installed correctly. After installation, give this instructions to the customer.

Safety Precautions (To be strictly observed)

Before Use

Carefully read through the Safety Precautions and use the product correctly. Furthermore, to use the product safely, be sure to perform the daily inspection described in the “Daily Inspection Procedure” (page 16). In case the product is continually used without performing the daily inspections, product failures or accidents may occur.

Precautions stated here are for the purpose of the following:

These precautions are provided for the safe use of this product and to prevent personal injury and harm to users and third parties. Please follow all of the precautions shown here, as they contain important information related to safety. TAKARA BELMONT bears no responsibility for personal injury or harm caused to the user or third parties in the event that the “Safety Precautions” have not been observed and an accident has occurred. If this is the case, the persons who use the product without observing the safety precautions will bear responsible for the injuries and damages.

Detailed information on cautionary marks is as explained below.

Be sure to read and understand their descriptions carefully before reading the main text.



DANGER

This mark warns the user that “ignorance of this display and improper use may result in critical risks of death or serious personal injury”.



WARNING

This mark warns the user that “ignorance of this display and improper use may cause death or serious personal injury”.



CAUTION

This mark warns the user that “ignorance of this display and improper use may cause slight to moderate personal injury or property damage”.



Indicates the general prohibited behaviors.



Indicates the prohibition of water splashing and use in a water location.



Indicates the prohibition of disassembly, repair, or modification.



Indicates the need for paying attention to electrical shock.



Indicates enforcement or instructions for general user behavior.



Indicates the instruction to disconnect the power plug from the outlet.



Indicates the instruction to ground the product appropriately.



WARNING

Never touch the inside of the main unit.















Never touch the inside of the product. Neglecting this warning may cause an electrical shock. For maintenance and service of the product, be sure to contact the nearest dealer or Takara Belmont directly.

Safety Precautions (To be strictly observed)







WARNING

<p>Be sure to execute the daily check.</p> <p> Execute the daily check according to the “Daily Inspection Procedure” described in this manual (page 16). Improper use or operation of the product may result in injuries or accidents including burns.</p>	<p>Do not apply water to the product.</p> <p> Do not apply water to the main unit directly nor wipe them with a wet cloth. Neglecting this warning may result in an electrical shock or ignition.</p>
<p>Warning concerning Power Supply.</p> <p> Be sure to disconnect the power plug from the outlet after closing the work for the day or when the product is not used for a long period of time, such as on holidays, etc. Neglecting this caution may result in an electrical fire due to deteriorated insulation.</p> <p> Be sure to turn off the power of the main unit each time the work is completed. Be sure to disconnect the power plug before moving the product.</p> <p> If the pins or the area near the pins of the power plug are contaminated with waste hair or chemical agent, wipe the area thoroughly with a dry cloth.</p>	<p>Never disassemble or repair the product by yourself.</p> <p> Persons other than the repair engineer must not disassemble, repair, or modify the product. Neglecting this warning may cause ignition or abnormal operation resulting in physical injuries.</p> <p>Disconnect the power plug before fixing the product.</p> <p> Be sure to disconnect the power plug when fixing the product. Do not connect or disconnect the power plug with wet hands. Neglecting this warning may result in an electrical shock or injuries.</p> <p>Firmly tighten all nuts and screws.</p> <p> If the screws are loose, the wall bracket may come loose allowing the arm to fall.</p>
<p>Be sure to ground the product</p> <p> Be sure to ground the product to use it safely. If not grounded or inappropriately grounded, there may be a risk of electric shock when electric failure or electric leakage occurs. Contact a qualified installer for grounding. Customers must not ground the product by themselves.</p> <p> Do not ground to:</p> <ul style="list-style-type: none"> ● Water pipe Hard plastic is used for many pipes, and it is not possible to ground to them completely. ● Gas pipe There are risks of explosion or/and fire. ● Lightning rod and telephone cable 	<p>Do not apply excessive loads.</p> <p> Resting your arm or leaning on the end of bracket may cause the balance arm to break or fall resulting in physical injuries.</p> <p>Do not install the wall bracket without sufficient wall support.</p> <p> Since a strong force will develop on the wall bracket, the mounting base of the bracket must be sturdy enough to support the product and dryer arm. Do not mount the bracket on a common rafter, the bar beneath a faced wall, or on gypsum board alone. Neglecting this caution may cause the screws to fall off allowing the bracket to fall due to loose screws from a deformed wall.</p> <p>(Example: 10 x 10 cm column)</p>

Safety Precautions (To be strictly observed)







WARNING


<p>Do not detach the stopper on the dryer arm until all work is complete.</p>	<p>Be sure to use the wall mount plate for mounting the arm on the wall.</p>
<p> Never detach the stopper mounted on the balance arm until installation of the dryer arm is complete. Detaching the stopper without installing the dryer will allow the dryer arm to flip up resulting in accidents and breakage of the lighting devices. (ref. page 8)</p>	<p> Be sure to use the wall mount plate of dryer arm before mounting the arm on the wall.</p>
<p>Never detach the devices mounted on the dryer arm by yourself.</p>	<p>Do not install or mount the dryer arm or change the devices on the dryer arm by yourself.</p>
<p> Never allow persons other than repair engineers to detach the devices mounted on the dryer arm. Failure to heed this warning may result in breakage or malfunction of surrounding facilities or physical injuries due to electric shock hazard or fire.</p>	<p> Only qualified personnel should install and mount the dryer arm or change the device on the dryer arm.</p>



CAUTION

<p>Handling of power cord.</p>	<p>Do not operate the devices in haste.</p>
<p> When disconnecting the power plug, do not hold it at the cord, but pull it off while holding the plug.</p>	<p> Operate the devices slowly without applying excessive force. Failure to heed this warning may result in malfunction, breakage, or falling of the product.</p>
<p> If the power cord or the power plug is damaged or when engagement with the wall outlet is loose, do not use the cord or the plug.</p>	<p>Pay attention to the surrounding areas when operating the product.</p> <p> Be sure to verify that no personnel or objects are within the operating area of the product. Failure to heed this warning may result in physical injuries or breakage of surrounding facilities.</p>


Name of Each Part

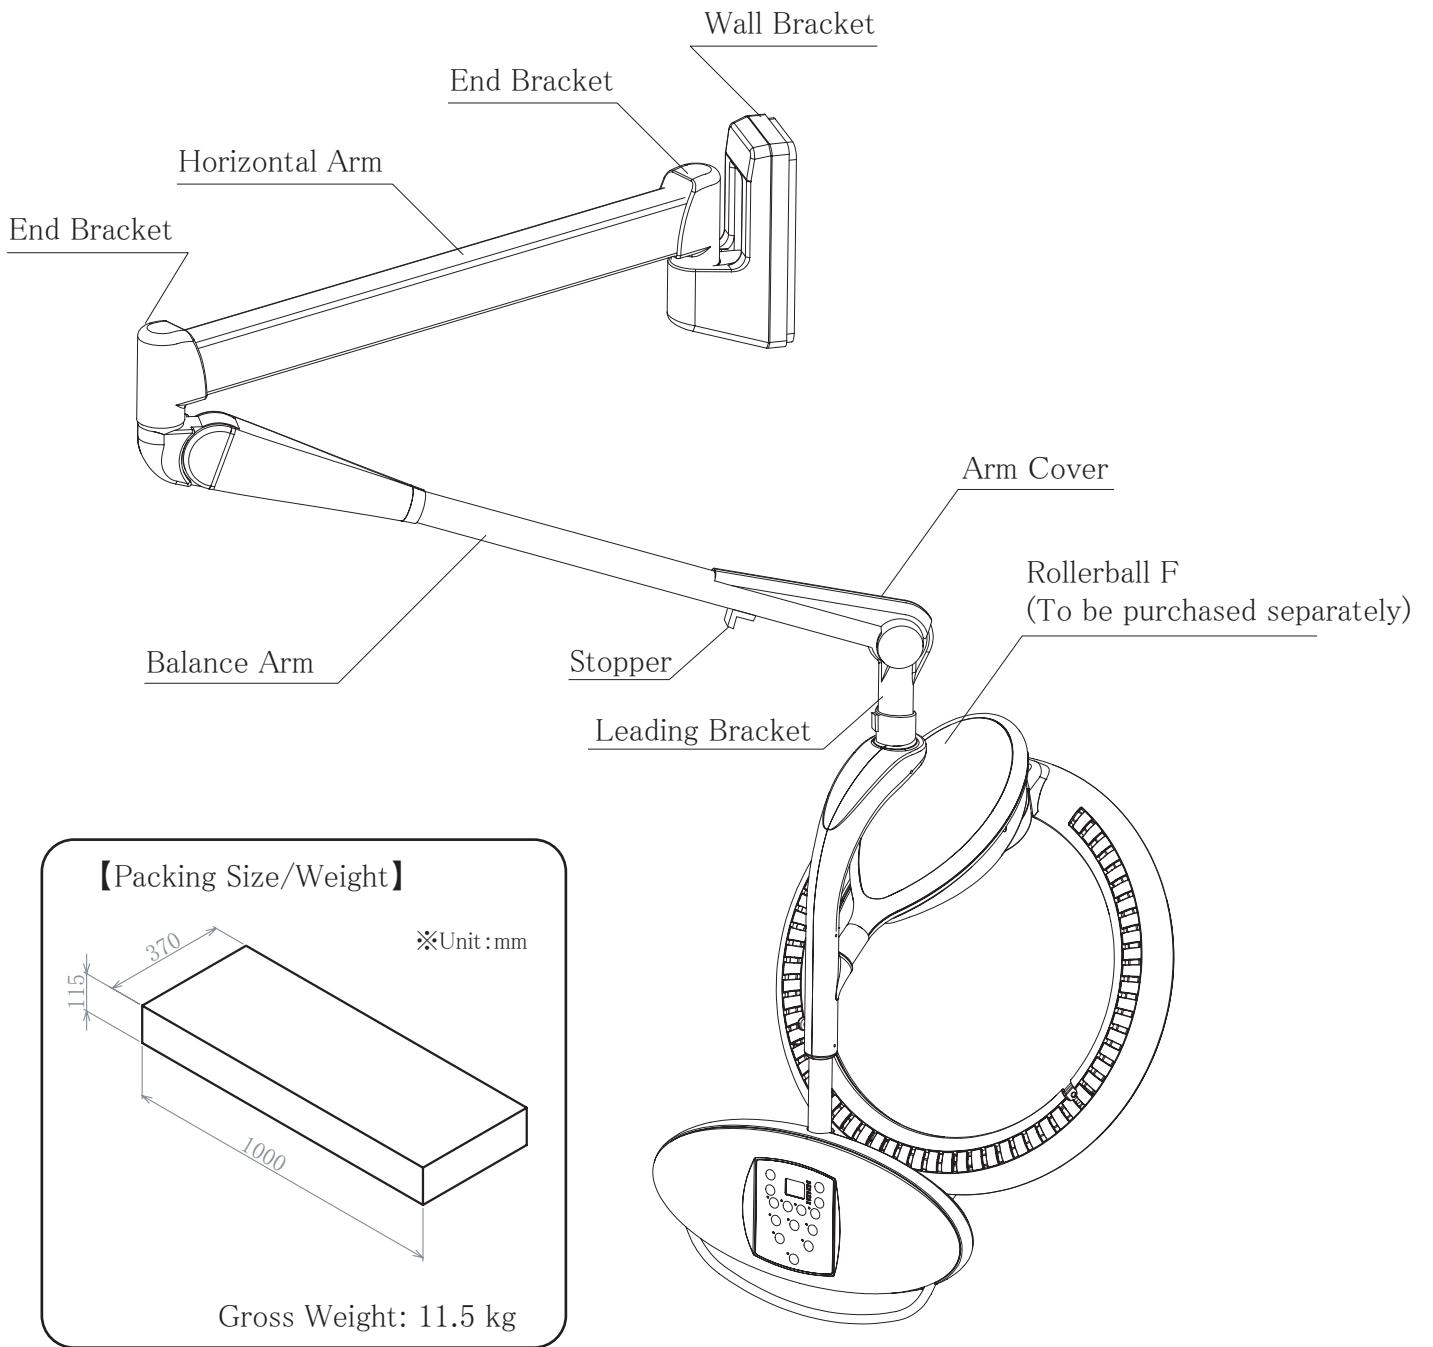




Accessories

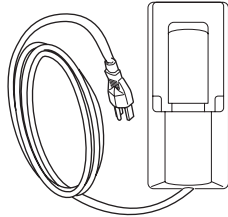

Installation / Operation Manual
1 copy



 
Wall Bracket
1 piece

-  Washer...2 pieces
-  Nut (type 3)...2 pieces
-  Nut (lock nut)...2 pieces

Screw Set for Wall Bracket
1 set

- Wood screw... 8 pieces
- Coach bolt... 4 pieces
- Anchor bolt... 4 pieces

Screw Set for wall mount plate
1 set



Wall mount plate
1 piece

Installation Procedures

<Procedures>

1. Installing the wall mount plate P 6 ~ 8



 
- A. Checking the wall base P 6
- B. Confirming the position of installation P 6
- C. Performing installation according to the wall material P 7

2. Installing the wall bracket P 9 ~ 10



- A. Detaching the cover from the wall bracket P 9
- B. Securing the wall bracket on the wall mount plate P 9
- C. Attaching the cover of the wall bracket P 10

3. Installing the dryer arm P 11



4. Installing the processor on the dryer arm P 11 ~ 12


- A. Detaching the cap of the leading bracket P 11
- B. Installing the processor on the dryer arm P 12
- C. Detaching the stopper of the balance arm P 12
- D. Checking the operation P 12

Installation Procedures

1

Installing the wall mount plate

Installation procedures differ depending on the material of the mounting wall surface.

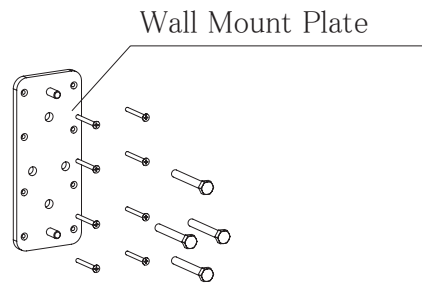

A. Checking the wall base

■ Wood

The wall must be reinforced with a high quality wooden column of 120mm~150mm thickness as a base. The column should be attached vertically.

■ Reinforced concrete

Concrete compressive strength should be 200kgf/cm² or higher for installing the dryer arm.


■ Other materials

In case of using other materials, contact the nearest dealer or Takara Belmont directly.

WARNING In the case that the wall is made of low-strength material such as a gypsum board, cut the surface of the wall mounting position, and attach a high quality wood such as plywood. Neglecting this may cause the screws to fall off allowing the bracket to fall due to loose screws from a deformed wall.

B. Confirming the position of installation

Pay attention to the correct direction of the wall mount plate.
Install the wall mount plate as shown below.

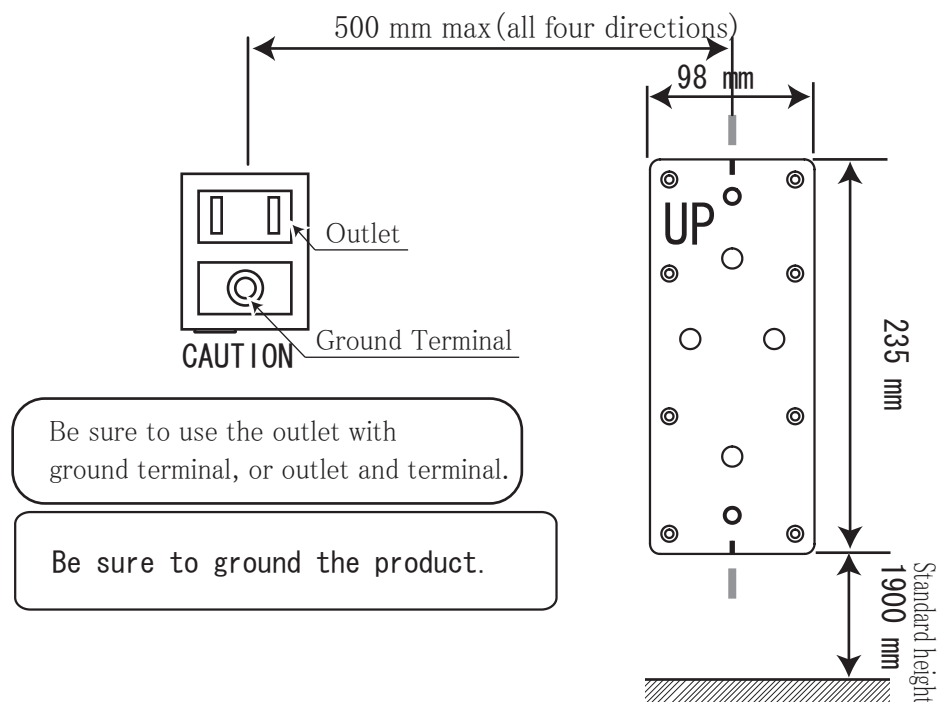

Installation Procedures

Attach the wall mount plate properly according to the following instructions.



WARNING

After checking the material of the wall, reinforce the wall properly for attaching the dryer arm. Neglecting this may cause falling accidents.

C. Performing installation according to the wall material

■ Mounting wall made of reinforced concrete



1. Draw a perpendicular line on the wall.
2. Using the wall mount plate as shown in the illustration, drill four holes (10.5mm Dia. / 60mm - 65mm Deep) on the wall. Check that the perpendicular line comes to the center of both upper and lower holes.
3. Insert and hammer the supplied anchor bolts in the holes. When fixing the wall mount plate with nuts, check that the perpendicular line on the wall aligns with the center of both upper and lower holes, and the mark-off lines on the wall mount plate also align with this line.

In the case that the perpendicular line on the wall misalign from the center of holes, attach the wall mount plate at the position where the from the line to both the upper and the lower holes to be the same.




CAUTION

In the case that wall is made of low-strength material such as gypsum board, cut the surface of the wall mounting position, and attach high quality wood such as plywood. Neglecting this caution may allow the wall plate to sink down, or bolts or screws may fall off.

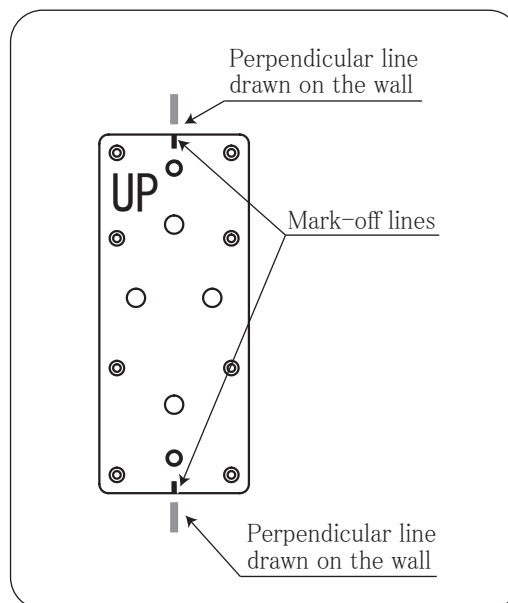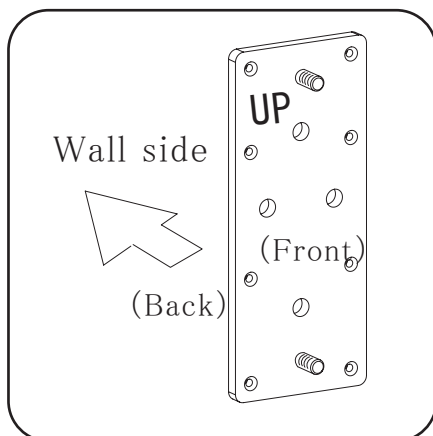


Installation Procedures

 When attaching the wall mount plate on the wall, be sure to attach it perpendicularly.
CAUTION Failure to follow this caution may cause tilting of the dryer arm resulting in improper operation.

C. Performing installation according to the wall material

Attach the wall mount plate properly according to the following illustrations.


 After checking the material of the wall, reinforce the wall properly for attaching the dryer arm. Neglecting this may cause falling accidents.
WARNING



■ Mounting wall made of wood

1. Draw a perpendicular line on the wall.
2. Using the wall mount plate as shown in the illustration, drill four holes on the wall. Then, fix the four pieces of supplied coach bolts temporarily.
3. Make sure that the mark-off lines on the wall mount plate align with the perpendicular line drawn on the wall, then fix the coach bolts tightly. (See below illustration.)

In the case that the perpendicular line on the wall misalign from the center of holes, attach the wall mount plate at the position where the distance from the line to both the upper and the lower holes to be the same.

4. Fix the supplied flat wood screws (8 pieces).

 Fix the supplied coach bolts and wooden screws firmly. Be sure to use all the supplied bolts and screws. Neglecting of this caution may cause toppling or falling accidents.
WARNING

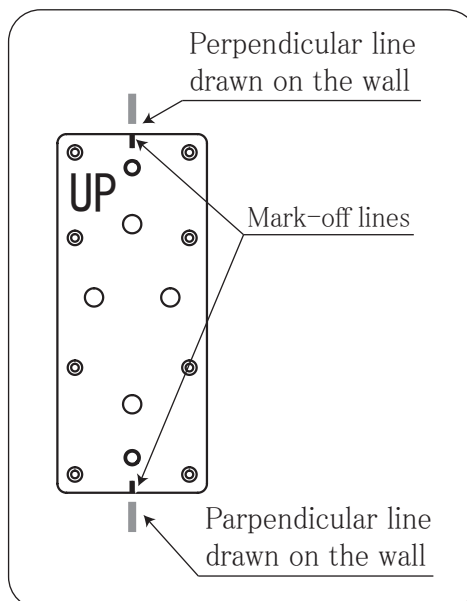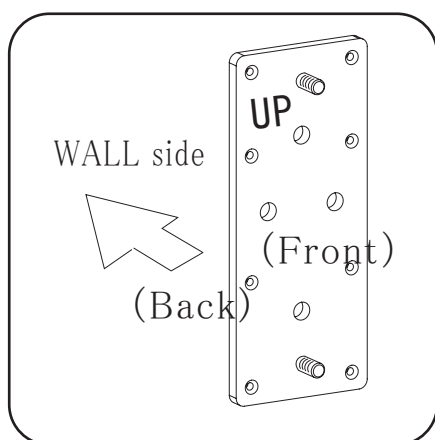


Installation Procedures

2

Installing the wall bracket


Install the wall bracket on the wall mount plate mounted on the wall surface.

* Detach any existing bracket and use the wall bracket that comes with the dryer arm.

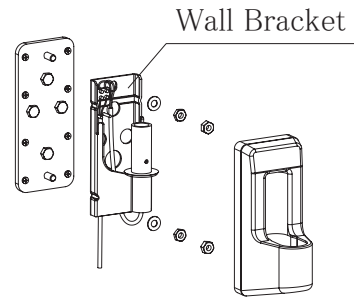


A. Detaching the cover from the wall bracket

① Remove the screws.

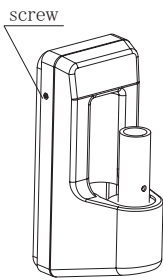


② Detach the upper cover from the wall bracket cover.

Insert the tip of a flat head screwdriver into the gap of the upper cover and detach it.

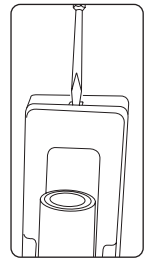




③ Detach the hole cap from the wall bracket cover.

Insert the tip of a flat head screwdriver into the gap of the hole cap and detach it.

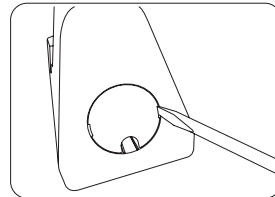

④ Detach the wall bracket cover from the wall bracket.

Depress the stopper of the cover as illustrated below and detach the wall bracket cover.

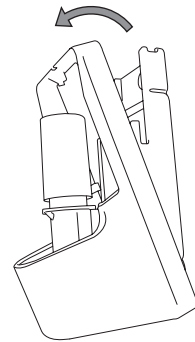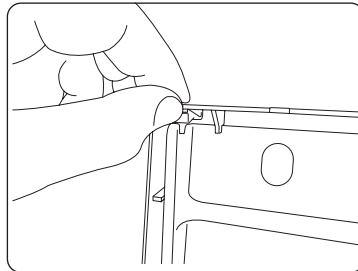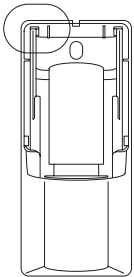


B. Securing the wall bracket on the wall mount plate

① Install the wall bracket on the wall mount plate.


WARNING

Firmly tighten the screws of the wall bracket. If the screws become loose, the arm may drop resulting in burns or physical injuries to the customers.

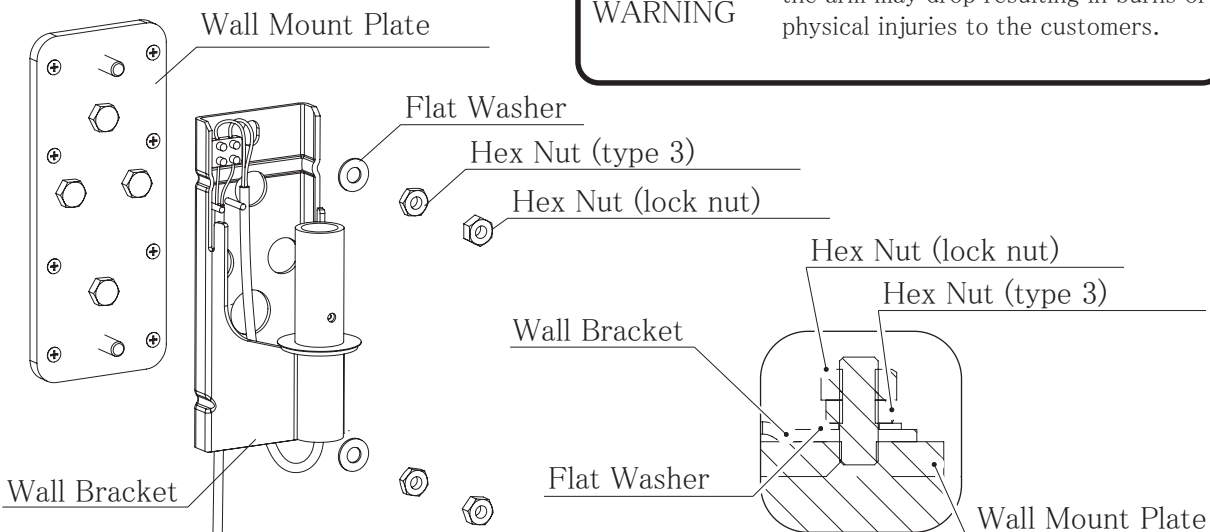


Installation Procedures


C. Attaching the cover of the wall bracket

- ① Attach the wall bracket cover to the wall bracket.


Hook the stoppers on the lower part of the wall bracket cover to the pitted area of the wall bracket. Next, hook the stoppers on the upper part of the wall bracket cover onto the upper pitted area of the wall bracket.

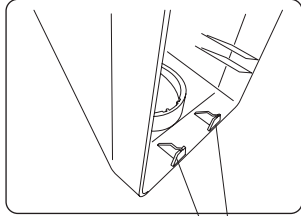

Stoppers at lower side

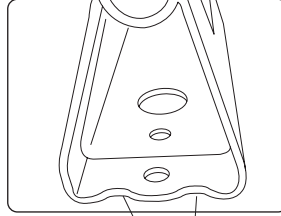


Pitted area at lower side

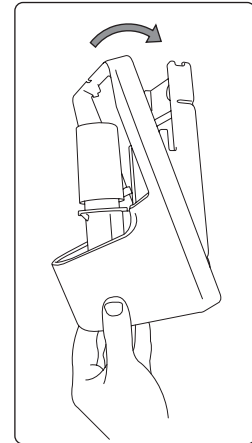


- ② Attach the upper cover of the wall bracket cover.


Insert the stopper on the lower side into the wall bracket cover and then hook the stoppers on both sides of the upper cover onto the wall bracket cover.

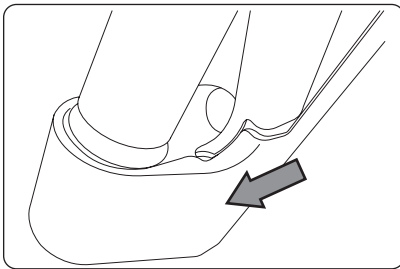


Stopper on the side

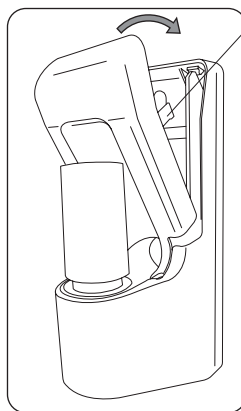


- ③ Tighten the screws.

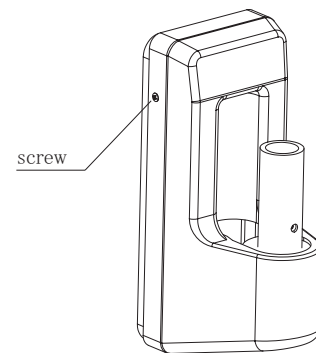

- ④ Pass the power cord of the wall bracket through the hole of the wall bracket cover.

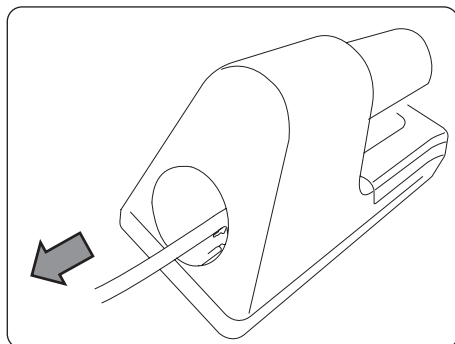

- ⑤ Attach the hole cap of the wall bracket cover.

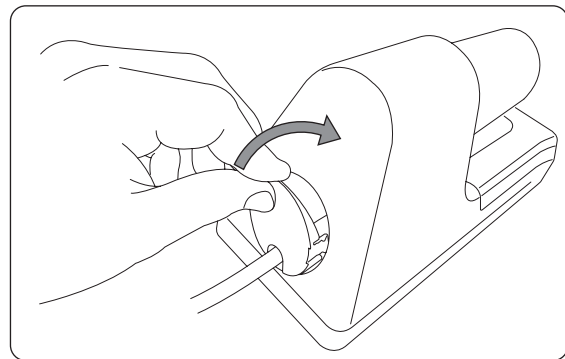

Installation Procedures


3 Installing the dryer arm

Insert the end bracket of the horizontal arm into the wall bracket shaft.



CAUTION


Installing the dryer arm in a narrow space may damage the apparatuses or equipment if it contacts surrounding equipment.

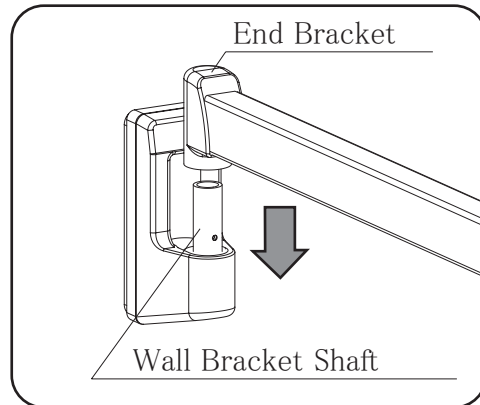



4 Installing the processor on the dryer arm

A. Detaching the cap of the leading bracket

- ① Remove the screws of the hook.
- ② Slide the hook cover metal upward.
- ③ Detach the hook.
- ④ Detach the cap of the leading bracket.

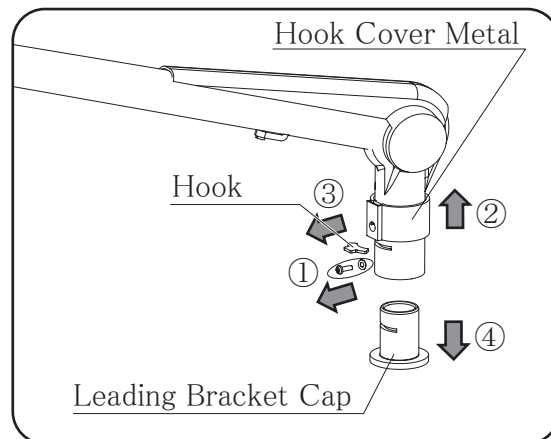

※Be sure to do this procedure with the stopper pulled by the flat head screwdriver etc., as shown in the illustration below.

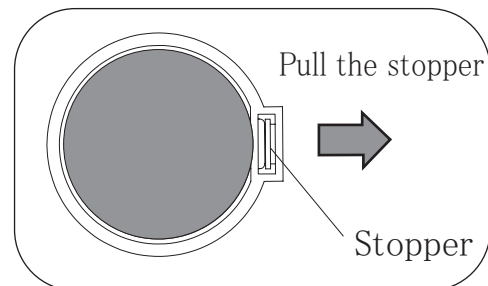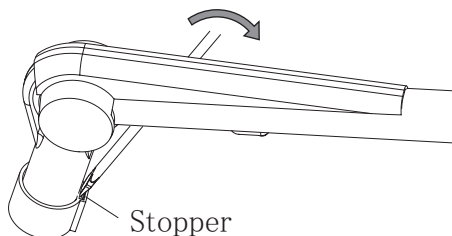





CAUTION

When a chemical adheres to the hook cover metal, immediately wipe it off with a soft, dry cloth. Damage to the cover resulting from chemicals may cause the main unit to fall.

Installation Procedures

B. Installing the processor on the dryer arm

- ① Insert the processor, such as a dryer, into the leading bracket.
* Fully insert the processor until the rotation shaft and the groove on the hook align.
- ② Insert the hook into the groove.
- ③ Slide the hook cover metal downward.
- ④ Tighten the screw.

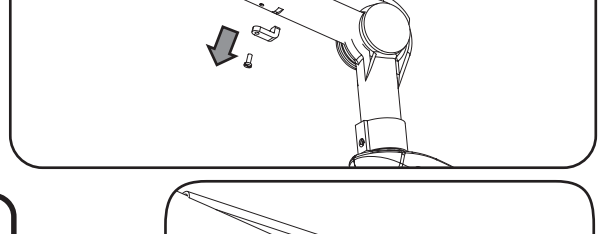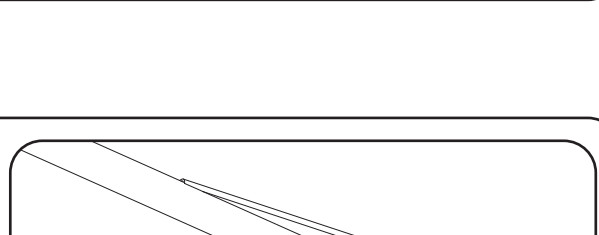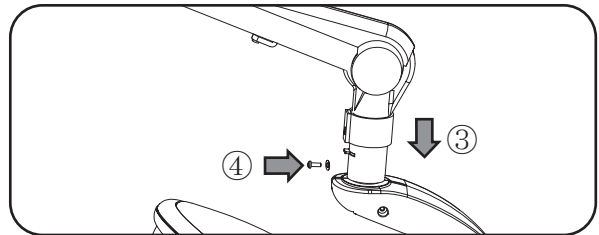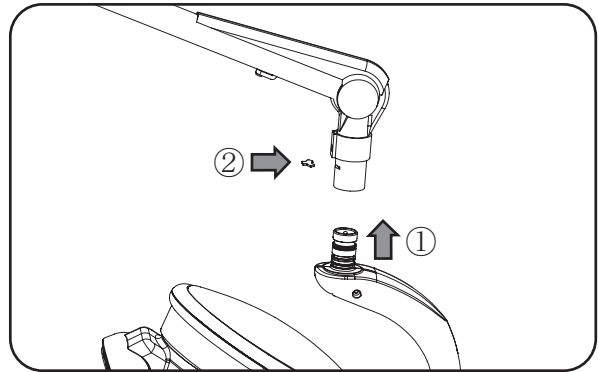


WARNING

Be sure to mount the hook cover metal after installing the hook. Imperfect insertion of the hook, failure to tighten the screw, or breakage of cover caused by excessive tightening of the screw may cause the processor to fall.

C. Detaching the stopper of the balance arm


The stopper installed on the balance arm (which is movable in the perpendicular direction) will be required for after-maintenance. Be sure to mount and secure the stopper in the reverse direction as illustrated.

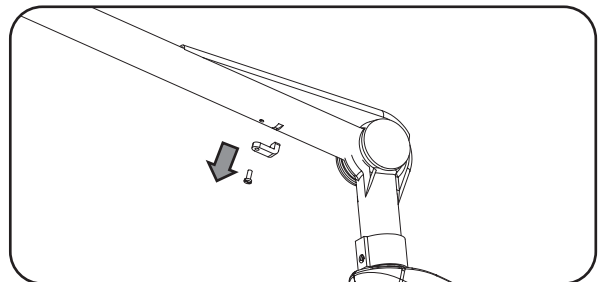

CAUTION


After detaching the stopper, always check the upper end position of the arm. If it contacts the lighting devices on the ceiling, adjust it according to the procedures described in the section "Adjustment of the Balance Arm."

Mount the stopper in the reverse direction.

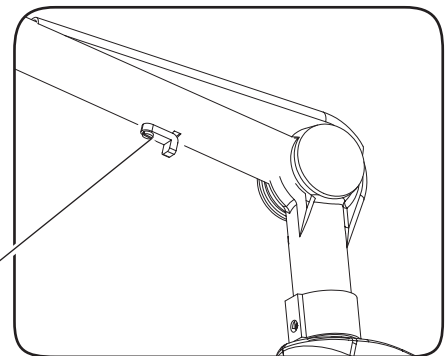

D. Checking the operation

After inserting the plug into the wall outlet and ground the product, check if the product works without problems.

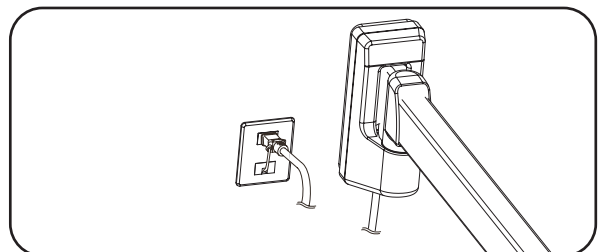


Adjustment of the Balance Arm

<Removing the adjustment bar>

Detach the arm cover.

* The arm cover can be detached by sliding the cover in the direction of the arrow, while opening it on both sides.

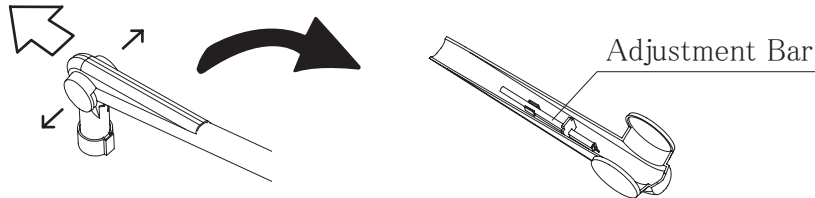

1. Adjusting the lift angle of the balance arm.


If the ceiling is low or the balance arm interferes with lighting equipment, adjust the lift angle of the balance arm.

* The lift angle is easily adjusted.

Detach the adjustment hole cover and then rotate and adjust the adjustment screw in the counterclockwise direction to stop the arm at the specified height. The adjustment differs depending on the angle.



Make sure that the balance arm does not contact any other equipment, such as lighting devices on the ceiling, when the arm is in the upper-limit position. Installation of the arm without checking the state may allow the arm to contact lighting equipment resulting in damage.

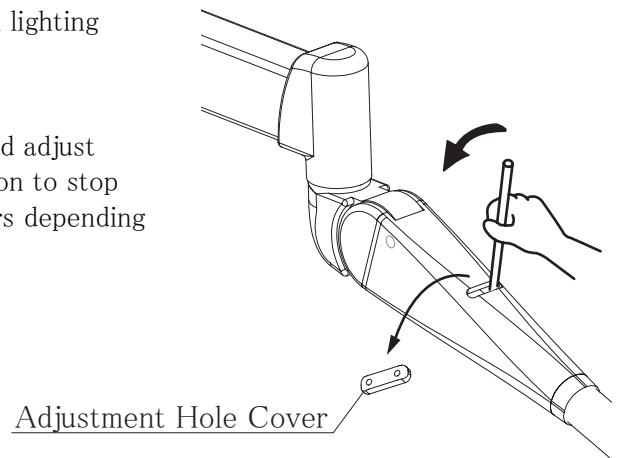


2. Adjusting the balance of the balance arm.

If the dryer or the processor mounted on the balance arm is not balanced in the specified position, then adjust the balance.

* The balance can be easily adjusted.

(A) In the case that the suspended device goes up from the lower-limit position.

- ① Detach the arm cover and remove the adjustment bar.
- ② Move the balance arm up and down and then set it in the position where the adjustment screw can be seen in either of the two punch holes (See the illustration at the right).
- ③ Insert the adjustment bar into the adjustment screw hole and rotate it in the (-) direction. Since the amount of the adjustment is not constant, check the balance each time the screw is rotated.

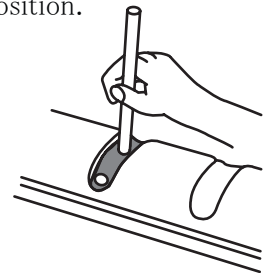

(B) The suspended device goes down from the upper-limit position.


- ① and ② : Follow the same procedures as Item (A) above.
- ③ Insert the adjustment bar into the adjustment screw hole and then rotate it in the (+) direction. Since the amount of the adjustment is not constant, check the balance each time the screw is rotated.




If the balance adjustment is imperfect, the suspended device cannot be held in the specified position, which causes the main unit to descend during practice, resulting in burns or physical injuries to personnel.

Operating Procedures

1. Hold the device (processor or dryer) mounted at the leading end of the dryer arm and move it to the customer's position.

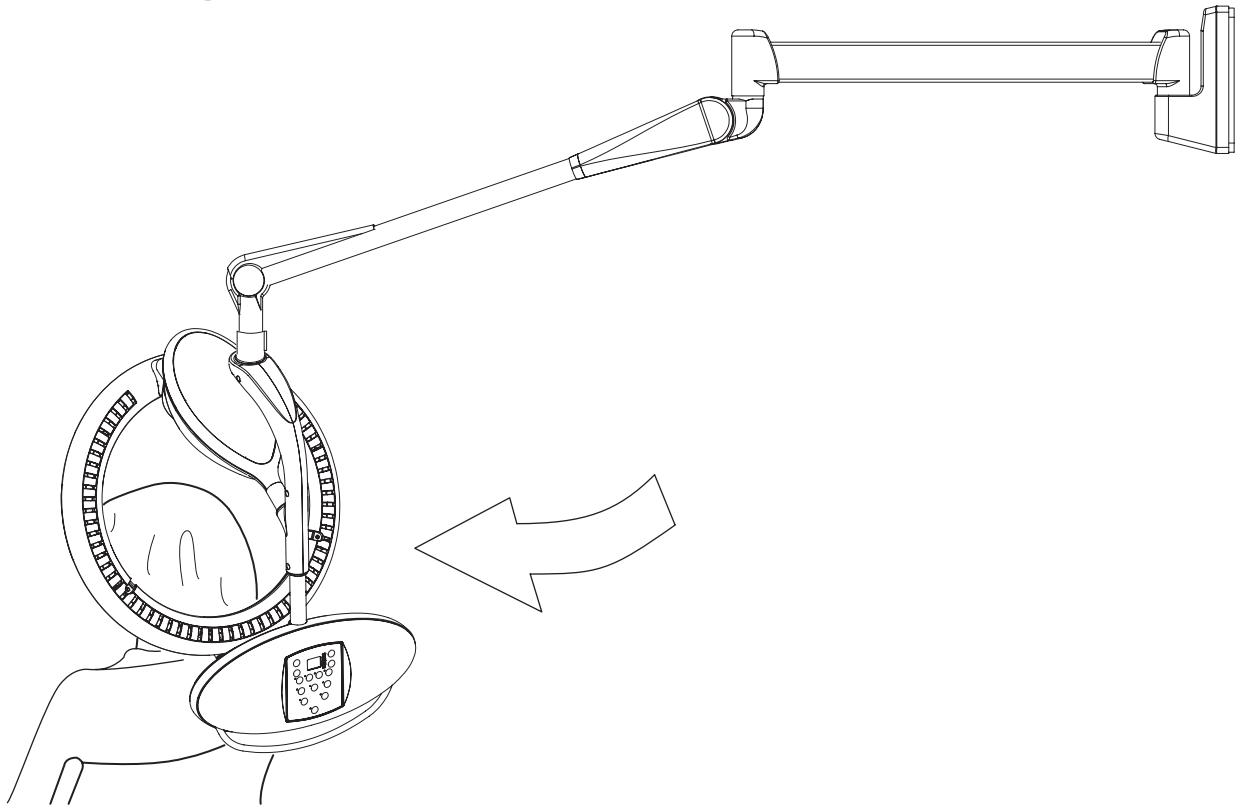

2. After using the device, fold the dryer arm.

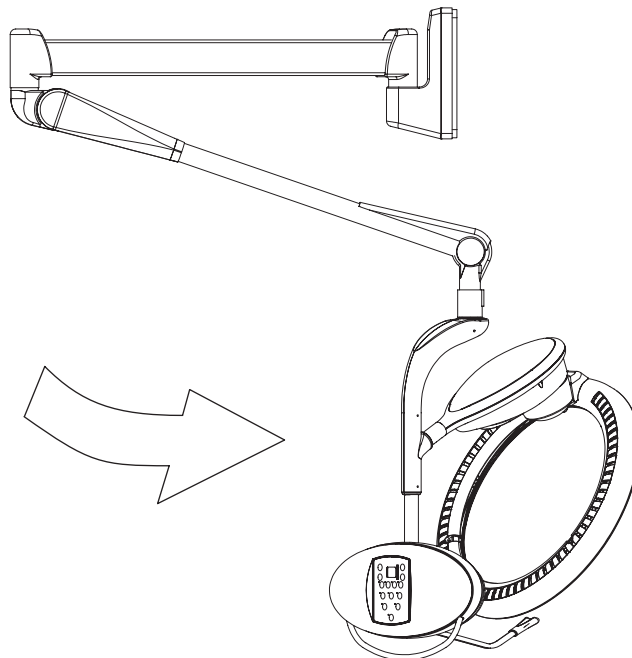


CAUTION


When setting the product, pay attention so that the dryer arm or the device will not contact surrounding facilities or personnel. Furthermore, move the product by holding the product by the grip; move slowly and safely. Failure to heed this warning may cause burns or physical injuries due to product damage.

Care and Maintenance

Be sure to disconnect the power plug from the wall outlet for maintenance and cleaning of the product.

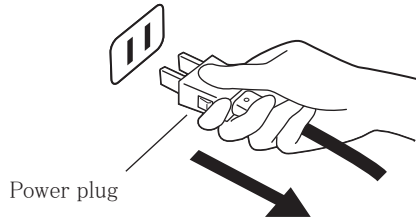

Splashing of water on the control panel or metal parts may result in product failure or rusting. Immediately dry the product with a soft cloth.

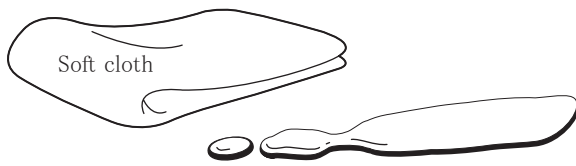


The product should not be exposed to moisture and water.


The plastic, plated, or painted parts should be wiped with a dry and soft cloth.



When fixed contamination or oil adheres to the product, wipe it off with a damp cloth with a water-diluted neutral detergent.

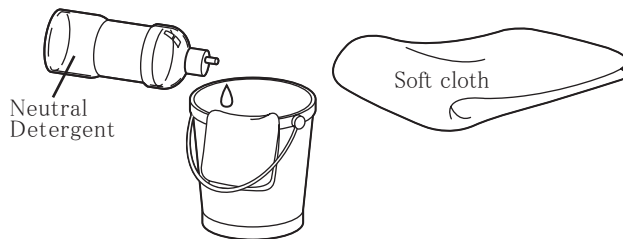

Never use volatile chemicals such as thinner, alcohol, gasoline, and kerosene; detergents containing organic materials; acidic-, alkaline- or chlorine-based detergents; and wax containing abrasive compound, sponge, scrubber, etc.

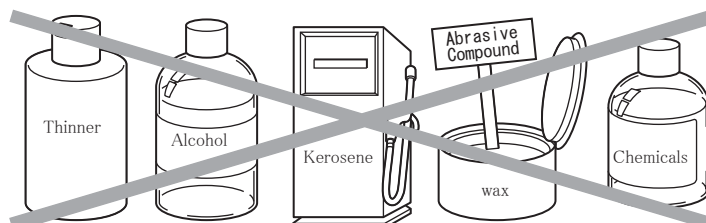

Daily Inspection Procedure

WARNING

Be sure to execute daily inspection according to the following guidelines. Continued use without executing the daily inspection may result in failure or accidents.


To use the product safely, be sure to execute the following inspections.

■ Daily Inspection Items (Pre-Operation Check)

Inspection Item	Inspection Procedures	If the inspection result is unacceptable
<input type="checkbox"/> Check if there is no deformation, breakage, or deterioration on the power plug or the power cord.	<p>Checks before operating the product:</p> <input type="checkbox"/> There is no deformation, breakage, or deterioration of the power plug or the power cord. <p>Checks while the product is in operation (this is limited to the case that there is no deformation, breakage, or deterioration of the power plug or the power cord.)</p> <input type="checkbox"/> The power plug or the power cord may be heated when it is deteriorated. While the product is in use, touch the power plug and the power cord with a hand and make sure that they are not hot.	<p>There is a possibility of electrical shock or burn injuries due to fire or electrical leakage. Since some parts must be replaced, immediately stop using the product, turn off the power plug, and immediately contact the nearest dealer or Takara Belmont directly.</p>
<input type="checkbox"/> Make sure the wall bracket is not loose.	<p>Move the device mounted on the dryer arm and check the action.</p>	<p>If you suspect something is wrong, such as the bracket swings at the base part on the wall, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.</p>
<input type="checkbox"/> Make sure the device mounted on the dryer arm is not loose.	<p>Move the device mounted on the dryer arm and check the action.</p>	<p>If you suspect something is wrong, such as the arm swings at the connecting part, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.</p>
<input type="checkbox"/> Make sure the dryer arm operates safely without any problem.	<p>Move the device mounted on the dryer arm and check the action.</p>	<p>If you suspect something is wrong, disconnect the power plug and immediately contact the nearest dealer or Takara Belmont directly.</p>

Dimensions and Specifications

[Unit : mm]

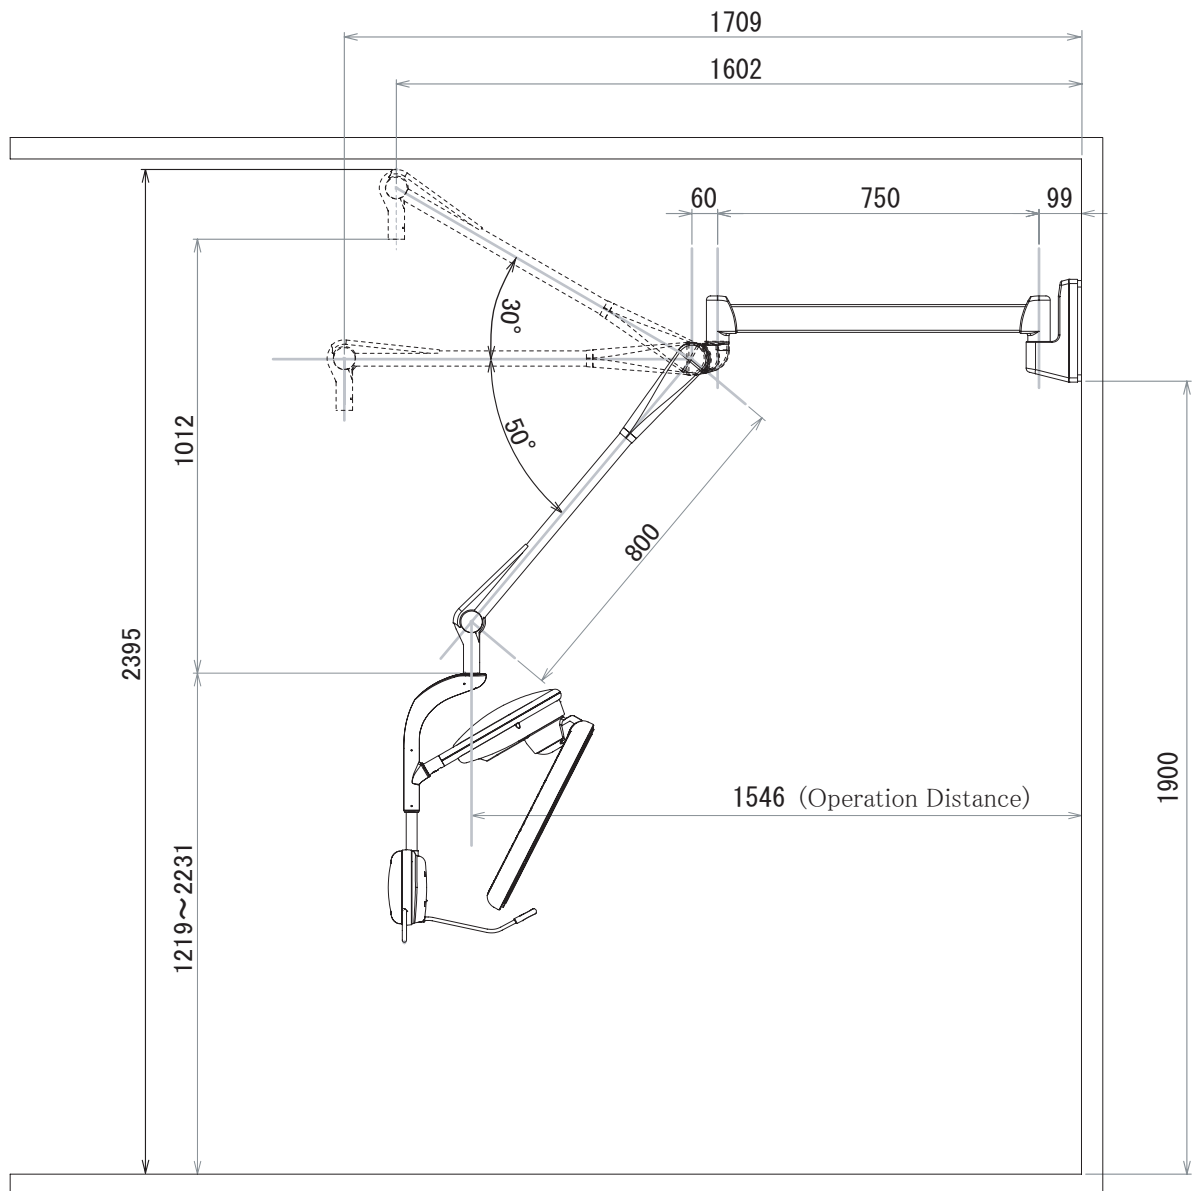


* The values are reference values when the lower end of the wall mount plate is installed at a height of 1900 mm from the floor surface.

Model No.	AY-DRASFF
Weight	10.3kg
Operating Temperature Range	10°C~40°C
Operating Humidity Range	30%~75%RH
Power Cord Length	1 m

* The respective specifications are subject to change without notice.


Dimensions and Specifications

[Unit : mm]

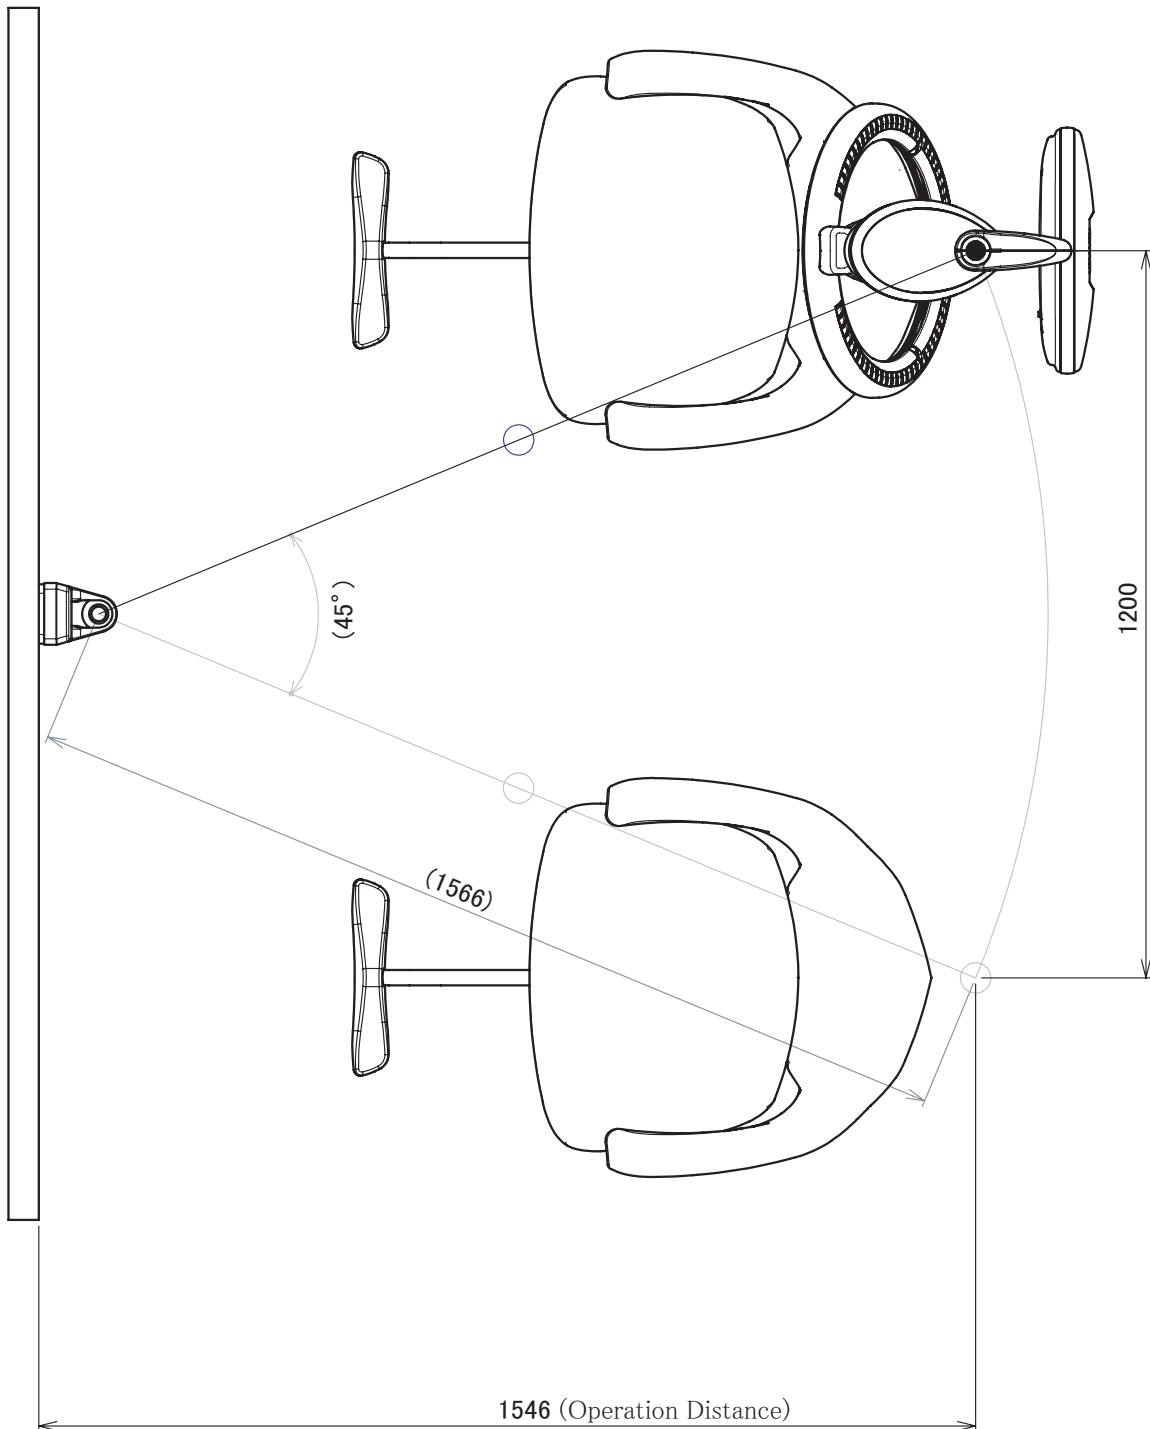

Wall Mount Plate

[Unit : mm]

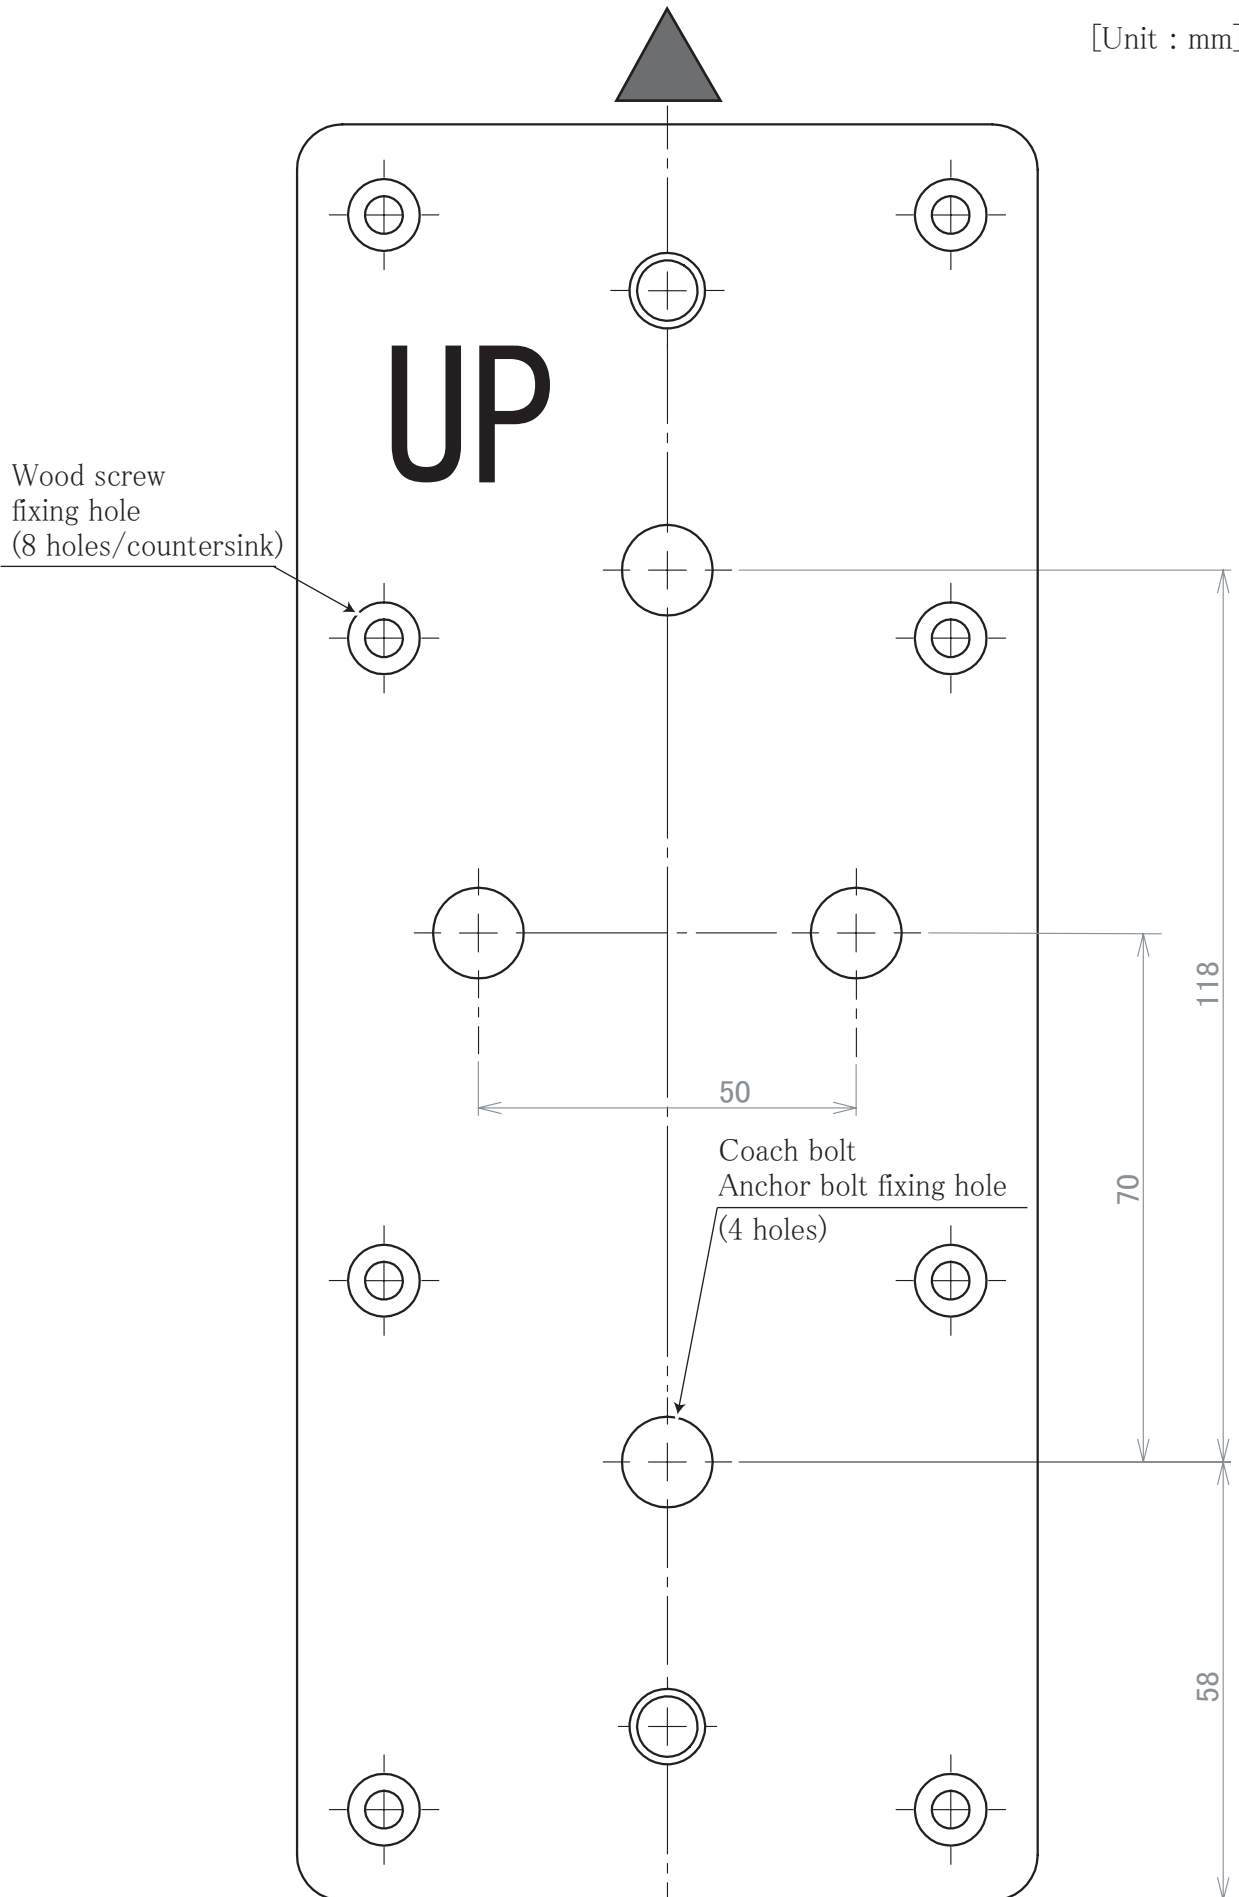

Height of the installation point to be decided referring to the above illustration. Neglecting this caution may cause an inconvenient use of the product.



Standard Height
1900 (From the floor)