

BaByliss[®] PRO



PRECISION V-BLADE TRIMMER

BAB790U

BaByliss[®] PRO

PRECISION V-BLADE TRIMMER

The BaByliss Pro Precision Stylist Tools is the new precision grooming range dedicated to outstanding quality cutting.

The BaByliss Pro V-Blade Trimmer has ultra-fine precision engineered hardened Japanese steel blades that have a unique super sharp V cutting angle for close, accurate trimming. The high power cord/cordless motor guarantees sustained performance for the ultimate in precision detailing.

FEATURES

- Cord/cordless trimmer
- 30mm stainless steel blade
- 40mm stainless steel T blade
- 6mm and 10mm comb guides
- On/off switch
- Charging and storage stand
- Charging indicator
- Oil
- Cleaning brush

SAFETY CAUTIONS

This appliance should only be used as described within this instruction booklet.

WARNING! Polythene bags over product or packaging may be dangerous. To avoid danger of suffocation, keep wrapper away from babies and children. These bags are not toys.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not take the charging adaptor into the bathroom.
- Use only on cordless mode in bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped.
- In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of lead damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Only use the attachments supplied with this appliance.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance on any surface whilst in operation.
- Before use, check that the voltage supply corresponds to the voltage indicated on the appliance.
- Maximum continuous operating time is 20 minutes; allow to cool for 10 minutes before proceeding.
- Special care is required when using the appliance close

to the ears, eyes, neck and face.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Careful adult supervision is required when this appliance is used on or near children. Do not use on very young children.
- This appliance should not be used, cleaned or maintained by children. Keep out of reach of children.
- Always switch off and unplug the appliance when cleaning or when not in use.
- Allow appliance to cool before storing away.
- After use, do not wrap the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance contains NI-MH Batteries and must be disposed of safely at the end of its life. Please take to a recycling centre for safe disposal.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

INSTRUCTIONS FOR USE

- Charging the appliance - Before using the appliance for the first time, charge the battery continuously for 16 hours. Maximum battery capacity will only be reached after 3 completed charging and discharging cycles. Always place the trimmer in the base with the ON/OFF switch in the OFF position.
- Always check to see if the charging light is on when you place the trimmer in the charging stand. The switch must face forward for them trimmer to slide properly into the base.
- Preserving the batteries - In order to maintain the optimum capacity of the rechargeable batteries, the appliance should be recharged for 16 hours approximately every 3 months.
- Use of the trimmer on mains: ensure that the trimmer is switched off. Plug into a suitable mains socket. Wait for approximately a minute, and then switch on.

IMPORTANT - Do not use the trimmer in this mode for more than 20 minutes.

CLEANING AND MAINTENANCE

To maintain correct performance, the blades must be regularly cleaned and oiled. They are removable for easy cleaning.

- Hold the trimmer with blade frame pointing upwards and push up to take the blade frame out.
- Brush away the hair from the blades and the interior of the cutting head with the cleaning brush.
- It is recommended to oil the blades every time that the trimmer is used, using the oil provided. Never use any other product: this oil was formulated for high speed trimmers, it does not evaporate or slow down the blades.
- After cleaning put the blade frame back in place.

USE OF THE COMB GUIDES

This trimmer is supplied with 2 comb guides.

N°1 6mm

N°2 10mm

To attach a comb, hold it by the sides and clip it over the teeth of the blade. To remove the comb, simply push off.



SAFE DISPOSAL

To minimise hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment (WEEE) and The Waste Battery Directive require you to dispose of these products and their batteries at a suitable collection facility where they will be sent for appropriate recycling. Please contact your local authorities for more details on recycling and safe disposal of these in your area.

UK GUARANTEE

This BaByliss PRO appliance is guaranteed for salon use for 6 months. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to ukinfo@conair.com

If you should need to return your appliance to us please send it to the following address:


Customer Care Centre,
Conair Logistics
Unit 4
Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL
BROWN = LIVE

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither core should be connected to the earth terminal of a three pin plug marked with the letter E or .

This appliance comes fitted with a British Standard 13 amp type plug and a 5 amp fuse. It is important to always use a 5 amp fuse, should its replacement be required. If any other type of plug is used, a 5 amp fuse must be fitted at the distribution board.

