

 


Smoke Receiver Operating Instructions

 
What's Included:

Smoke Receiver, Batteries (Installed), neck lanyard, and this instruction card.

How to Operate:

- To power Smoke Receiver on press the  button.
- To activate backlight or mute an alarm press the  button.
- To power Smoke Receiver off press and hold  for 3 seconds.

How to sync:

- With Smoke Receiver powered off press and hold the power button for 8 seconds until “SYNC” appears on the screen.
- Now that Smoke Receiver is in SYNC mode, make sure Smoke is powered on.
- Press and hold the  button for 6 seconds on Smoke. The display should read “SYNC”.
- After pairing, Smoke Receiver should then display “END”
- Smoke will flash SYNC for a total of 10 seconds, then flash END.
- At this time Smoke and Smoke Receiver are now paired

NOTE: To sync multiple Smoke Receivers, please follow the steps above on one device at a time. Putting Smoke into SYNC mode will not disable or interfere with previously synced receivers.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Special Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



www.thermoworks.com
741 E. Utah Valley Dr.
American Fork, UT 84003

ThermoWorks

For service or warranty:
1-800-393-6434
1-801-756-7705
techsupport@thermoworks.com
P-13-025-02-4


Go to www.thermoworks.com/smoke for additional product information and more tips for use.

Blinks when transmission is received.


Time to change batteries.

Press to turn on Smoke Receiver.
Backlight comes on for 20 seconds.
Press and hold for 3 seconds to turn
Smoke Receiver off.

The Smoke Receiver display updates every 15 seconds with live temperatures from both channels. It will also show the current Low/High temperature settings, and if the alarm is on or off.

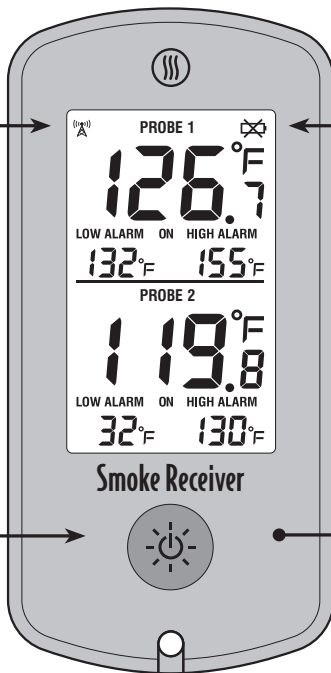

Transmission / Sync button

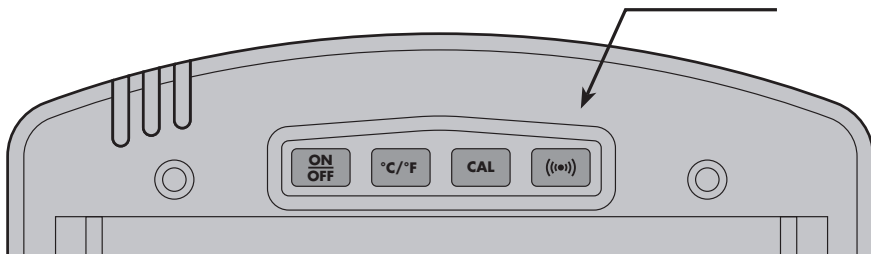

(Smoke)