

# Smoke / Smoke Receiver

## Sync Instructions

---

Smoke and Smoke Receiver come paired out of the box so you should only need to do this when replacing or adding Receivers.

### How to sync:

- With Smoke Receiver powered off press and hold the power button for 8 seconds until “SYNC” appears on the screen.
- Now that Smoke Receiver is in SYNC mode, make sure Smoke is powered on.
- Press and hold the ((••)) button for 6 seconds on Smoke. The display should read “SYNC”.
- After pairing, Smoke Receiver should then display “END”.
- Smoke will flash “SYNC” for a total of 10 seconds, then flash “END”.
- At this time Smoke and Smoke Receiver are now paired.

**NOTE:** To sync multiple Smoke Receivers to one base, please follow the steps above on one Receiver at a time. Putting Smoke into Sync mode will not disable or interfere with previously synced receivers.

Go to [www.thermoworks.com/smoke](http://www.thermoworks.com/smoke) for additional product information and more tips for use.

[www.thermoworks.com](http://www.thermoworks.com)  
741 E. Utah Valley Dr.  
American Fork, UT 84003



For service or warranty:  
1-800-393-6434  
1-801-756-7705  
[techsupport@thermoworks.com](mailto:techsupport@thermoworks.com)