



Model Number:
EKS468BT

User Manual

Package Contents:

 
- 1: Karaoke Machine x 1
- 2: Manual x1
- 3: USB Charging Cable L=3Mx1
- 4: Wired Microphone x 4
- 5: Microphone holder clips x 2

Features:

- 1: Bluetooth® version 5.0
- 2: USB
- 3: AUX-IN
- 4: AUX-OUT
- 5: Microphone
- 6: Voice



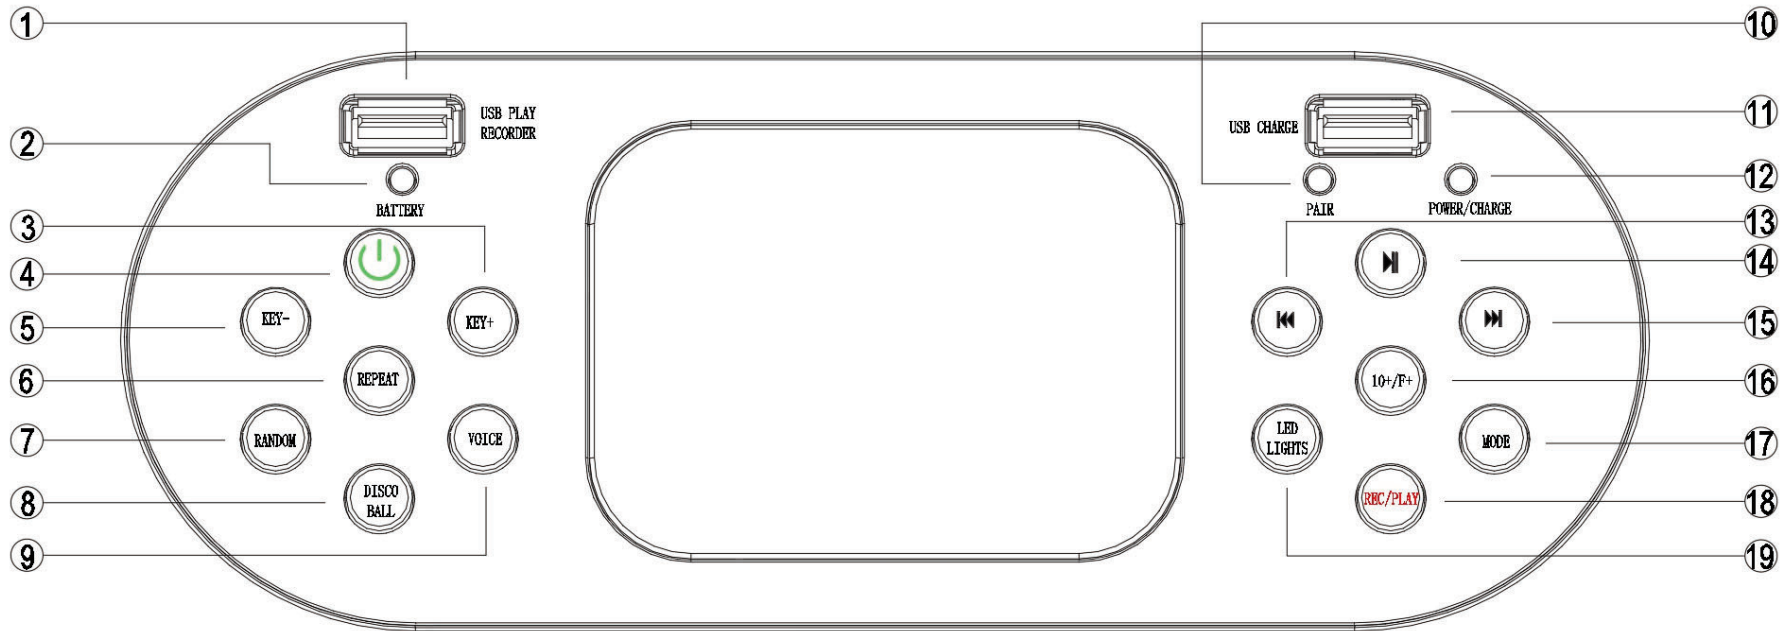

Function and Control:





1: **USB / Playback & Record** is USB PLAY and RECORD.


2: **BATTERY indicator.** The BATTERY light keeps on when the unit is turned on. The BATTERY light flash when the unit has low battery.

3:  **KEY+ Button.** Short press KEY+, each press will increase by 1 level and show P-01 on the display, total 12 levels.

















4:  **Power Button.** Press the Power Button for 2-3 seconds to turn ON/OFF the unit. The display will turn ON/OFF.

 
5:  **KEY- Button.** Short press KEY- , each press will decrease by 1 level and show P-01 on the display, total 12 levels.

6:  **REPEAT Button.** REPEAT Button has 3 modes under the USB mode, each press change into repeat once track. Repeat one track- with speech and flash "ONE". Repeat All- with speech and flash "ALL". Repeat Cancel- flash "OFF". Stop to the last song.


7:  **RANDOM Button.** Short press the RANDOM button under the USB mode and flash "RAND", the small dot on the display ON, another short press to cancel the RANDOM, the small dot on the display OFF.

8:  **DISCO BALL Button.** Press the LIGHT Button to turn ON/OFF the light and Disco Ball.


- 9:  **VOICE Button.** Each press to change one mode: Male voice to Female voice/ Female voice to Male voice/Baby voice/Electronics voice/OFF. This only for Microphone only.
- 10: **PAIR indicator.** The blue light flashing without connection, after successful connection the blue light is steady.
- 11: **USB Charge** can charge to other device, such as mobile phone, tablets etc.
- 12: **Power/Charge.** Red light for charging, green light for full charged.
- 13:  **PREVIOUS Button.** Switch to BT and USB mode, short press to PRE song, long press to fast rewind. No fast rewind function under LINE-IN mode.
- 14:  **PLAY/ PAUSE Button.** Switch to BT and USB mode, short press to PLAY, another short press to PAUSE. Switch to LINE-IN mode and play, short press to MUTE, another short press to cancel the MUTE.
- 15:  **NEXT Button.** Switch to BT and USB mode, short press to NEXT song, long press to fast forward, No fast forward function under LINE-IN mode.
- 16:  **10+/F+Button.** Short press to 10+, each press to add 10 songs, long press F+ to change the folder, each press to change the next folder's song.
- 17:  **MODE Button.** MODE Converse, plug a USB flash drive to USB socket, short press to change BT/USB/LINE-IN mode. If no USB in socket, only BT/ LINE-IN mode.
- 18:  **RECORD Button.** Except under the USB mode, all other modes can be normal recording, Use Microphone, short press  button then start recording. At the same time the display will show "REC", another short press  button then stop recording, the display will show "END"; long press  button to play the record content, another long press  button then stop to play the record content; short press  button to next one, short press  button to Previous one; short press  button to pause, another short press  button to play the record content again.
- 19:  **LED LIGHTS Button.** Press the RGB Button to turn ON/OFF the light.

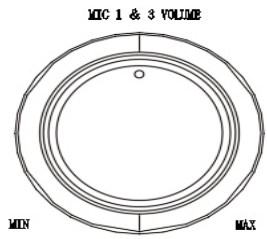


20

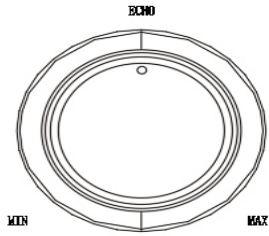 


21

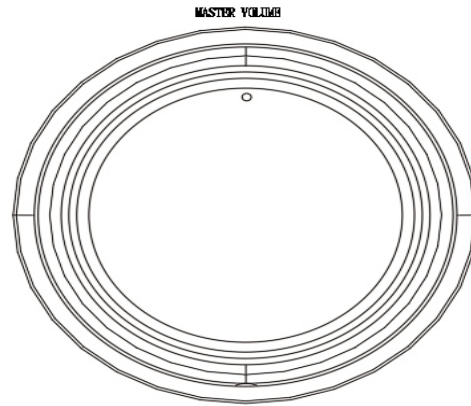 

22

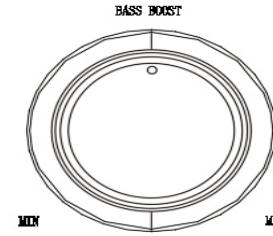 

23

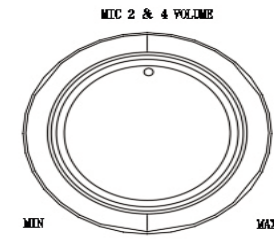 

24

 
20: The **MIC 1 & 3 VOLUME** knob is Microphone 1 & 3 volume control knob.

21: The **ECHO** knob is the echo depth control knob for all microphones.

22: The **MASTER VOLUME** knob is a music volume control knob.

23: The **BASS-BOOST** knob is a music bass control knob.

24: The **MIC 2 & 4 VOLUME** knob is Microphone 2 & 4 volume control knob.

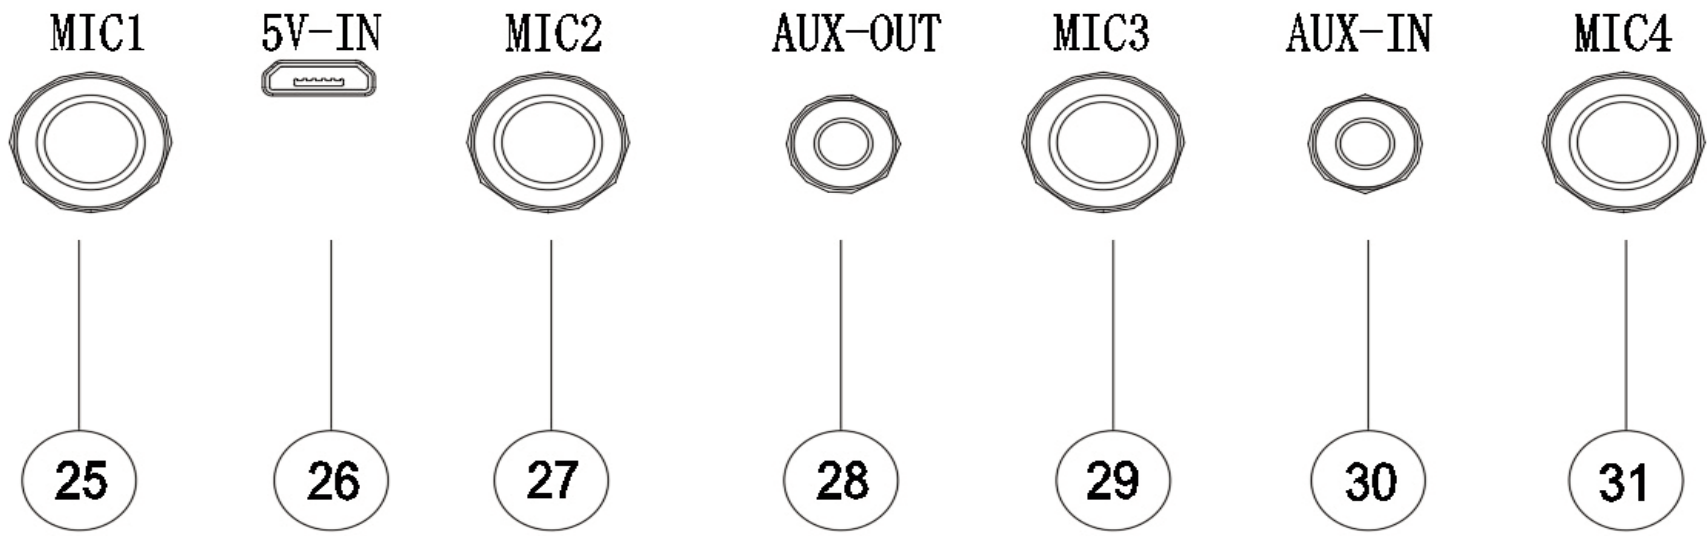

25: MIC1 is the Microphone input Jack.

26: 5V-IN is DC5V input Jack.

27: MIC2 is the Microphone input Jack.

28: AUX-OUT is audio output Jack.

29: MIC3 is the Microphone input Jack.

30: AUX-IN is audio input Jack.

31: MIC4 is the Microphone input Jack.

5. Specification:

Power Input:	DC-5V
Battery Capacity:	3.7V/10000MAH
Speaker Unit:	2 inch X2+3 inch x 2+4 inch X 2
Material:	ABS +Wooden Pedestal Base
Product Size:	317 x 245 x 1078mm
Bluetooth® Version:	5.0

6. Troubleshooting

Problems	Possible causes	Solution
Bluetooth® disconnection /No Bluetooth®	<ol style="list-style-type: none"> 1. Bluetooth® connected to other mobile devices 2. Updated the Bluetooth® version for the unit and phone 	<ol style="list-style-type: none"> 1. Check the unit connect to other device. 2. Turn off the unit after 15S then turn on it into BT mode, connect again.
No disk	<ol style="list-style-type: none"> 1. Check if the USB disk with the file inside 2. Check USB if damaged or not 	<ol style="list-style-type: none"> 1. Make sure file inside and try it again 2. Turn off and turn on it again
No sound under the LINE-IN	<ol style="list-style-type: none"> 1. Check the 3.5mm LINE-IN cable if damaged or not 2. Check the 3.5mm LINE-IN cable if connected properly 	<ol style="list-style-type: none"> 1. Change another cable to check it 2. Try connected to the right position
No power charge	<ol style="list-style-type: none"> 1. Check the power cable if damaged or not 2. Check the power cable if connected properly 	<ol style="list-style-type: none"> 1. Change another cable to check it 2. Try connected to the right position

UK DISTRIBUTOR

John Hornby Skewes & Co. Ltd.

Salem House, Parkinson Approach, Garforth,
Leeds LS25 2HR, United Kingdom.

www.jhs.co.uk

Authorised EU Representative: Pieters Musical Agencies
Sparrelaar 19, 5467 JP Veghel, Netherlands

