



Model Number: EKS668
User Manual

Features:

- Bluetooth version 5.0
- USB Playback / Record
- Built in USB Charger
- LINE IN/AUX-IN
- LINE IN/AUX-OUT
- Digital Key Change
- Digital Voice Control
- 4x Mic Inputs

Package Contents:

- Karaoke Machine x1
- Manual x1
- USB Charging Cable x1
- Wired Microphone x2
- Microphone holder clips x4
- USB Power Supply x1
- Wireless Microphone x2
(requires 2xAAA & 2xAA batteries)



QUICK START GUIDE

Thank you for purchasing this Easy Karaoke product. Please go to www.easykaraoke.com for thousands of free HD quality karaoke songs. This product will run from an internal rechargeable battery or a universal USB mains charger with a 5V power supply with a minimum of 2.4 amp output (supplied).

We recommend charging the machine for a minimum of 12 hours before use. Please remember to sing directly into the microphone for the best results.

A: To charge, plug in 5V USB Micro Cable (Page 6 Rear Panel 26) The charging light will turn green when fully charged.

B: Power Up (Button 4, press and hold for 2/3 seconds).

C: Bluetooth® searches for devices automatically.

D: Turn on your Bluetooth® device to sync with the machines bluetooth®.

E: Look for EKS668 on your device and select to connect.

F: For LINE-IN/AUX-IN press Mode Button (Button 17).

G: For LINE-IN/AUX-IN (Page 6 Rear Panel 30).

H: For USB Mode insert cable into USB Slot (1).

I: Insert wired microphone(s) into any socket(s) 25/27/29/31 on the rear panel.

J: Insert wireless microphone(s) receivers into any socket(s) 25/27/29/31 on the rear panel.


K: To Record Press REC/PLAY once (18).

L: To Playback hold REC/PLAY for 2/3 seconds (18).

M: For USB charge plug device into (11).

N: AUX/Line Out to connect audio to external device (28 on rear panel).

QUICK GUIDE

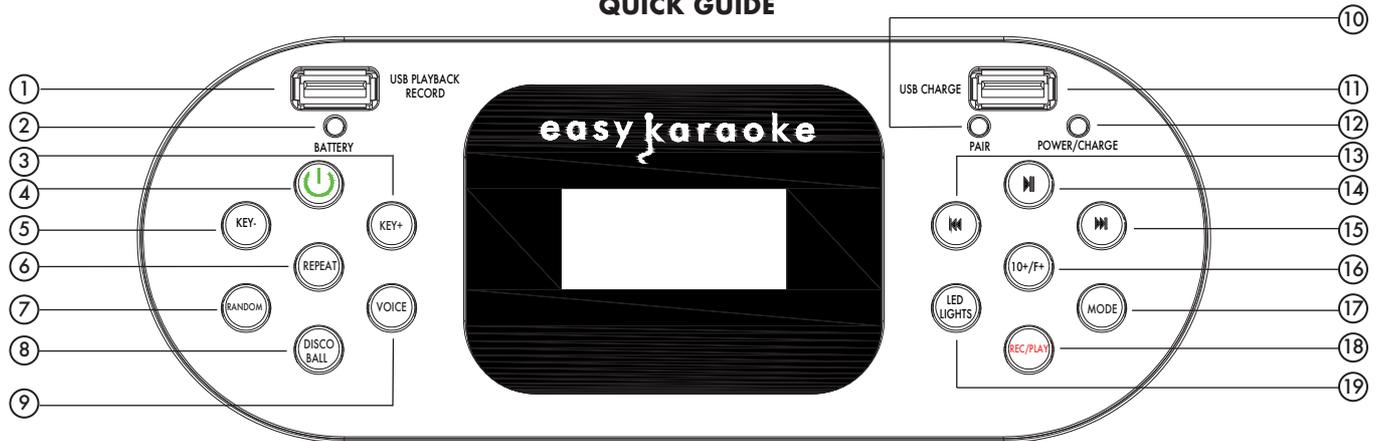

1: USB input for Playback & Record

2: BATTERY indicator.

3: KEY+ Button. To Increase semitones

4: POWER Button. Hold for 2/3 seconds to power on/off

5: KEY- Button. To Decrease semitones

6: REPEAT Button. Will play last track

7: RANDOM Button. Plays random tracks

8: DISCOBALL Button. Turns lights on/off

9: VOICE Button. Changes microphone voice

10: BLUETOOTH connection indicator

11: USB CHARGE cancharge another device

12: POWER/CHARGE indicator

13: PREVIOUS Button. Selects previous track

14: PLAY/ PAUSE Button. Plays selected track

15: NEXT Button. Selects next track

16: 10+/F+ Button. Jump 10+ songs on USB

17: MODE Button. Select between Bluetooth®/USB/LINE-IN


18: RECORD/PLAY Button

19: LED Button. Turns LED light displays ON/OFF


- 1:** USB input for Playback & Record.
- 2:** BATTERY indicator. The BATTERY is green when charged, red while charging.
- 3:** KEY+ Button. Short press KEY+, each press will increase by a semitone and show P-01/02 etc on the display to a maximum of 12 Semitones.
- 4:** POWER BUTTON. Press and hold the Power Button for 2-3 seconds to turn the unit ON/OFF.
- 5:** KEY- Button. Short press KEY- , each press will decrease by a semitone and show P-01/-02 etc on the display to a maximum of 12 Semitones.
- 6:** REPEAT Button. Hold Rec/Play button for 4-5 seconds to start recorded playback. REPEAT Button will replay last track or double click for repeat all, click again to stop playback.
- 7:** RANDOM Button. Hold Rec/Play button to start recorded playback. Short press the RANDOM button under the USB mode and random playback will begin.
- 8:** DISCOBALL Button. Press the Button to turn the discoball on and off
- 9:** VOICE Button. Press button to select either Male, Female, Baby or Electronic style voice on the microphones only.
- 10:** BLUETOOTH connection indicator. The blue light will flash until paired with a device then remain on once paired.
- 11:** USB CHARGE can charge another device. Such as mobile phone, tablets etc.
- 12:** POWER/CHARGE indicator. Red light for charging, green light for fully charged.

- 13: PREVIOUS Button.** For Bluetooth® and USB modes, short press for previous song, long press to fast rewind track.
No fast rewind function under LINE-IN mode.
- 14: PLAY/ PAUSE Button.** For Bluetooth® and USB modes, short press to PLAY, press again to pause. Switch to LINE-IN mode and play, short press to mute, another short press to cancel the mute.
- 15: NEXT Button.** For Bluetooth® and USB modes, short press for next song, long press to fast forward track.
No fast forward function under LINE-IN mode.
- 16: 10+/F+ Button.** Short press to 10+, each press to skip 10 songs, long press F+ to change the folder,
each press to change the next folder's song.
- 17: MODE Button.** Short press to change between Bluetooth®/USB/LINE-IN modes. If no USB is plugged into the socket,
only Bluetooth and LINE-IN mode will be available
- 18: Record & playback function:** Under Bluetooth® or Line-in mode, plug the Microphone into the MIC jacks, also make sure
USB flash drive is inserted into the 'USB PLAY RECORDER' socket. Then press once 'REC/PLAY' button 18 to start recording,
the display will show "REC"; Press the 'REC/PLAY' button 18 again to stop recording, the display will show "END";
Press and hold the 'REC/PLAY' button 18 for 2-3 seconds, the unit will start to play the recorded content.
During recording playback status, you can short press button 15 to next track, short press button 13 to previous track;
button 14 to pause, another short button 14 to play the recorded content again.
You can press and hold the 'REC/PLAY' button 18 for another 2-3 seconds to exit recording playback function.
- 19: LED Button.** Press the LED Button to turn ON/OFF the LED light display.


FRONT OF MACHINE

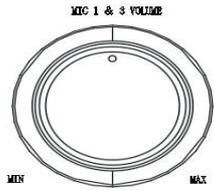


20

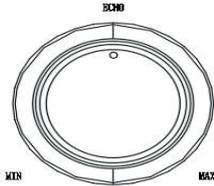


21

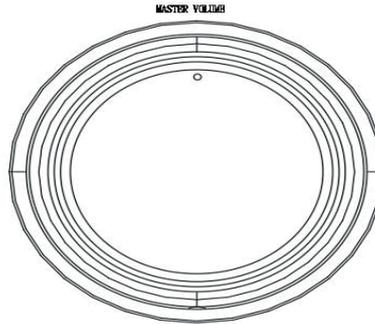

22

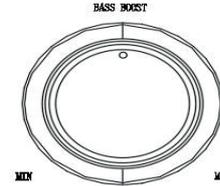

23

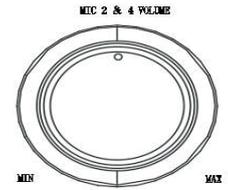

24

20: MIC 1 & 3 VOLUME knob controls the volume for microphones 1 and 3.


21: The ECHO knob controls the echo depth for all microphones.

22: The MASTER VOLUME knob controls the volume of the music.

23: The BASS-BOOST knob enhances/decreases bass.

24: MIC 2 & 4 VOLUME knob controls the volume for microphones 2 and 4.

REAR OF MACHINE

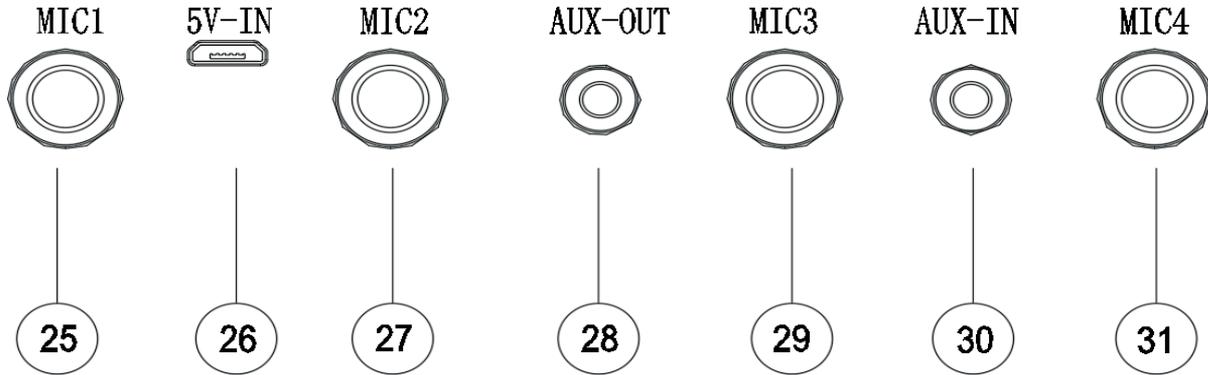

25: MIC1 is Microphone 1 input Jack.

26: 5V-IN is DC5V input power/charger Jack

27: MIC2 is Microphone 2 input Jack.

28: AUX-OUT is audio output Jack.

29: MIC3 is Microphone 3 input Jack.

30: AUX-IN is audio input Jack.

31: MIC4 is Microphone 4 input Jack.

Specification:

Power Input:	DC-5V. We recommend a 5V power supply with a min of 2.4 amp output (supplied)
Battery Capacity:	3.7V/10000MAH
Speaker Unit:	2 inch X 2 +3 inch x 2 +4 inch X 2
Material:	ABS +Wooden Pedestal Base
Product Size:	317 x 245 x 1078mm
Bluetooth® Version:	5.0

Troubleshooting

Problems	Possible causes	Solution
Bluetooth® disconnection /No Bluetooth®	<ol style="list-style-type: none"> 1. Bluetooth® connected to other mobile devices 2. Updated the Bluetooth® version for the unit and phone 	<ol style="list-style-type: none"> 1. Check the unit connect to the correct device. 2. Turn off the unit after 15 seconds then turn it on into BT mode, connect again.
No disk	<ol style="list-style-type: none"> 1. Check if the USB disk with the file inside 2. Check if USB is damaged or not 	<ol style="list-style-type: none"> 1. Make sure there are compatible files stored in the USB 2. Turn it off and turn it on again
No sound under the LINE-IN	<ol style="list-style-type: none"> 1. Check the 3.5mm LINE-IN cable if damaged or not 2. Check the 3.5mm LINE-IN cable if connected properly 	<ol style="list-style-type: none"> 1. Change to another cable to check it 2. Try connecting to the right input
No power charge	<ol style="list-style-type: none"> 1. Check the power cable is damaged or not 2. Check the power cable is connected properly 	<ol style="list-style-type: none"> 1. Change to another cable to check it 2. Try connecting to the right input

UK DISTRIBUTOR
John Hornby Skewes & Co. Ltd.
 Salem House, Parkinson Approach, Garforth,
 Leeds LS25 2HR, United Kingdom.
www.jhs.co.uk

Authorised EU Representative: Pieters Musical Agencies
 Spjenslaan 19, 5467 JP Veghel, Netherlands







The items design and copyright in this product belongs to:
 Easy Karaoke Limited.
 55 Station Road,
 Beaconsfield,
 Buckinghamshire
 HP9 1QL
 United Kingdom
 Patent Number: ZL20203045033.0
 Scan QR code for patent details.

