 


If you are experiencing No/Low Spray, follow these steps to resolve:


Make sure trigger is pressed down when performing wet passes

- Turn off and unplug machine
- Remove clean water tank lifting up on handle, set aside

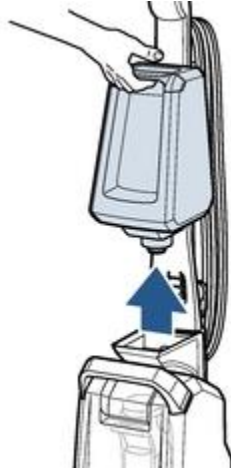


- Turn upper cord wrap over and remove power cord, set aside
- Remove upper handle

- Press black button below upper power cord wrap and pull up on

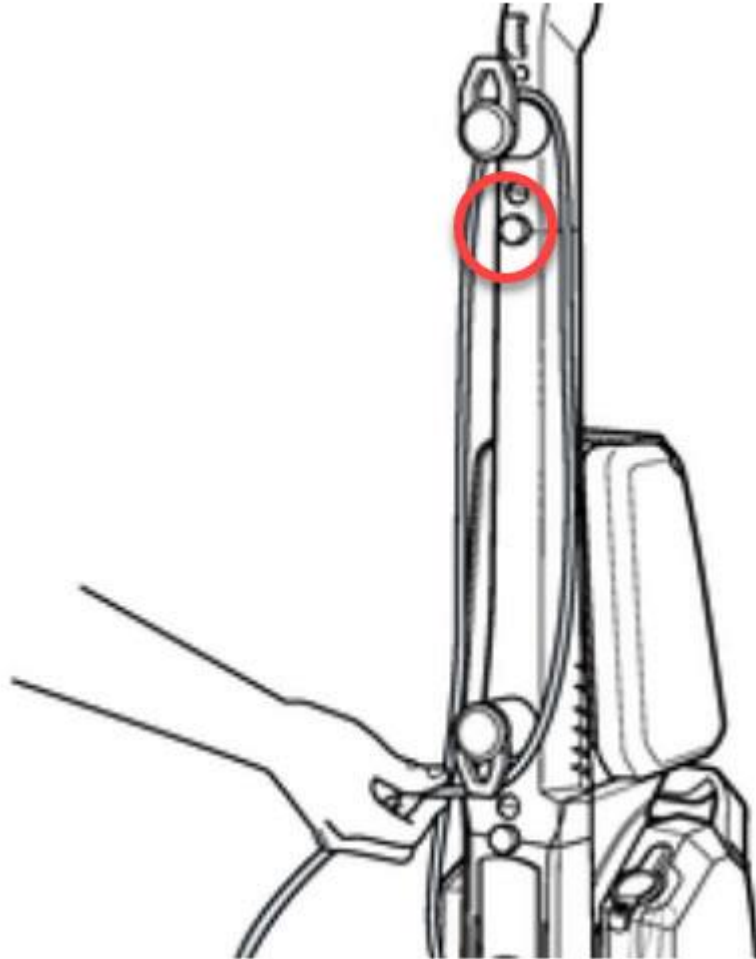


handle

- Remove middle handle
 - Press black button below lower power cord wrap and pull up

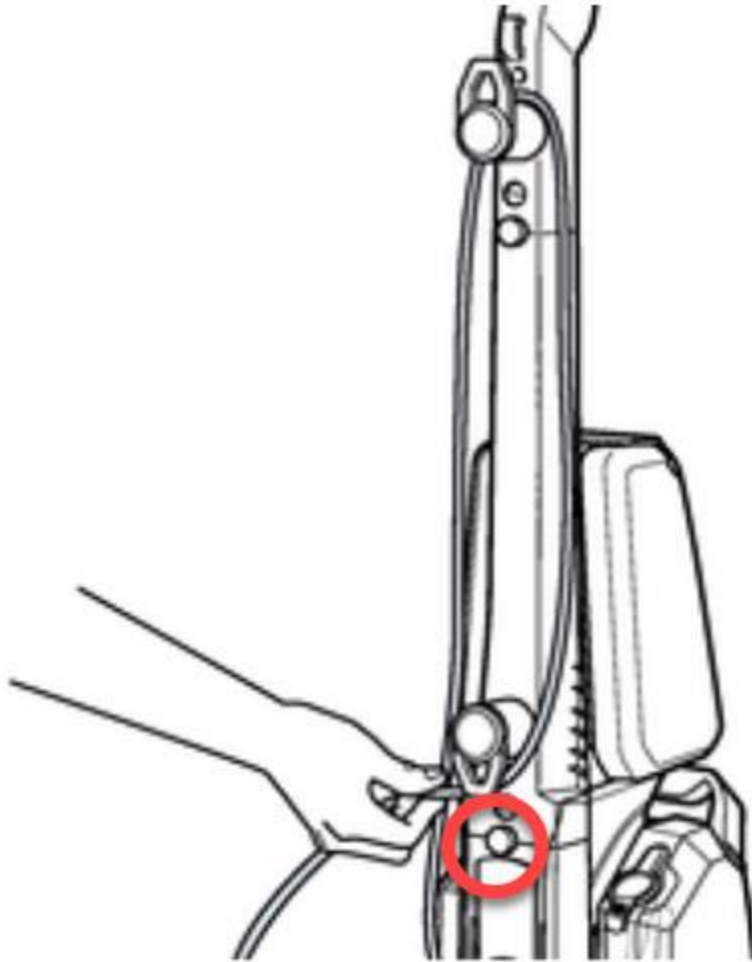

- Slide middle handle back onto lower body of machine until it clicks

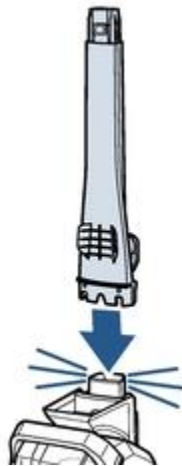

- Slide upper handle into middle handle until it clicks



- With machine unplugged and turned off pull trigger
 - Is there pressure in the trigger?
 - Yes > Fill clean water tank
 - No > Order new middle & upper handle > Go to [Parts & Supplies](#)
- Inspect clean water tank and cap for cracks, damage, or deformation
 - If damaged or deformed, replace clean water tank or cap > Go to [Parts & Supplies](#)
 - If cap is missing red gasket, replace cap > Go to [Parts & Supplies](#)
- Reseat clean water tank on machine until it clicks
 - If tank does not click into place, order a new clean water tank > Go to [Parts & Supplies](#)



- Plug machine in and turn on

- Check for spray by pressing down on the trigger and performing a few wet and dry cleaning strokes
 - Has this resolved your issue?
 - Yes > Great! Glad we can get you back to cleaning!
 - No > [Contact Us](#)